

Alice B00004SOCH

Alice - Falsi allarmi Audio CD User Manual

Model: B00004SOCH

INTRODUCTION

This manual provides essential information for the proper use and care of your Alice - Falsi allarmi Audio CD. Please read these instructions carefully to ensure optimal enjoyment and longevity of your product.

1. SETUP

Upon receiving your Audio CD, carefully remove it from its packaging. Avoid touching the playing surface of the disc. Always hold the CD by its edges or by placing a finger through the center hole to prevent fingerprints and smudges.



Image 1.1: The album cover for 'Falsi allarmi' by Alice. It features a woman with long, curly hair, dressed in dark clothing, sitting with a newspaper. The background suggests a window view, possibly from an airplane, with the album title 'Falsi allarmi' and artist 'Alice' prominently displayed vertically on the right side.

2. OPERATING INSTRUCTIONS

2.1 Playing the Audio CD

To play the Audio CD, insert it into a compatible CD player (e.g., home stereo system, car CD player, computer CD/DVD drive) with the label side facing up. Close the disc tray or slot. The player should automatically detect the disc and begin playback. If not, press the 'Play' button on your device.

2.2 Track Navigation

Use the 'Next Track' or 'Previous Track' buttons on your CD player to navigate between songs. Most

players also allow direct track selection using a numeric keypad.

3. MAINTENANCE

3.1 Cleaning the Disc

If the disc becomes dirty or smudged, gently wipe the playing surface with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents, as these can damage the disc surface.

3.2 Proper Storage

Store the Audio CD in its original jewel case or a protective sleeve when not in use. Keep the disc away from direct sunlight, extreme temperatures, and high humidity to prevent warping or damage to the data layer. Proper storage extends the life of your CD.

4. TROUBLESHOOTING

4.1 Disc Not Playing

- Ensure the disc is inserted correctly with the label side up.
- Check if the CD player is powered on and functioning correctly.
- Clean the disc surface as described in the Maintenance section.
- Try playing another Audio CD to determine if the issue is with the disc or the player.

4.2 Disc Skipping or Freezing

- Clean the disc surface thoroughly. Scratches or smudges can cause skipping.
- Ensure the CD player is on a stable surface to prevent vibrations.
- Check the disc for visible scratches or damage. Severely damaged discs may not play correctly.

5. SPECIFICATIONS

Feature	Detail
Product Type	Audio CD
Artist	Alice
Album Title	Falsi allarmi
ASIN	B00004SOCH
Number of Discs	1
Date First Available	November 16, 2010