

Manuals.plus /

› KRUPS /

› KRUPS 404-70 Open Master Can Opener Instruction Manual

## KRUPS 404-70

# KRUPS 404-70 Open Master Can Opener

Model: 404-70

Brand: KRUPS

## INTRODUCTION

---

The KRUPS 404-70 Open Master Can Opener is designed for efficient and safe opening of various can sizes. This innovative can opener features a patented bladeless design that uncrimps can lids, rather than cutting them, which helps to eliminate sharp edges and reduce the risk of injury. Its design also prevents food contamination by avoiding contact between the opener's mechanism and the can's contents. The ergonomic handle ensures a comfortable and secure grip during operation.

## SAFETY INSTRUCTIONS

---

- Always handle the can opener with care.
- Keep fingers away from the operating mechanism during use.
- Ensure the can opener is clean before and after each use to maintain hygiene.
- Do not attempt to open cans that are severely dented or damaged, as this may affect the opener's performance and safety.
- Store the can opener in a safe place, out of reach of children.

## PRODUCT OVERVIEW

---

The KRUPS 404-70 Open Master Can Opener is a manual device designed for ease of use and safety. Below is an image illustrating the product.



**Figure 1:** KRUPS 404-70 Open Master Can Opener, showing the device, its original packaging, and accompanying documentation. The can opener features a white body with a light green accent on the handle.

A closer view of the can opener highlights its ergonomic design and operating mechanism.



**Figure 2:** Detailed view of the KRUPS 404-70 Open Master Can Opener, focusing on the handle, the operating wheel, and the mechanism that uncrimps can lids. Small icons on the side illustrate the can opening process.

## SETUP

1. **Unpack:** Carefully remove the can opener from its packaging.
2. **Inspect:** Check the device for any visible damage. If damaged, do not use and contact customer support.
3. **Clean:** Before first use, wipe the can opener with a damp cloth. Do not immerse in water.

## OPERATING INSTRUCTIONS

Follow these steps to safely and effectively open cans with your KRUPS 404-70 Open Master Can Opener:

1. **Position the Can:** Place the can on a flat, stable surface.
2. **Attach the Opener:** Grip the can opener firmly. Position the opener's mechanism onto the rim of the can, ensuring the cutting wheel (or uncrimping mechanism) is aligned just below the can's lip.
3. **Engage the Mechanism:** Squeeze the handles together to firmly grip the can's rim. You should feel the mechanism engage with the can.
4. **Rotate to Open:** Turn the handle clockwise to rotate the can opener around the can's rim. Continue rotating until you have completed a full circle and the lid is fully uncrimped.
5. **Remove the Lid:** Once the can is fully opened, release the handles. The lid should now be loose and can be carefully lifted off. The unique design ensures the lid edges are smooth, reducing the risk of cuts.
6. **Dispose:** Safely dispose of the lid and can.

*Note:* The bladeless design works by uncrimping the seal between the lid and the can body, rather than cutting through the metal. This results in a smooth edge on both the lid and the can.

## MAINTENANCE AND CLEANING

- **Regular Cleaning:** After each use, wipe the can opener with a damp cloth to remove any food residue.
- **Drying:** Dry thoroughly with a clean cloth to prevent rust or water spots.
- **Do Not Immerse:** Do not immerse the entire can opener in water or wash it in a dishwasher, as this may damage the internal mechanisms.
- **Storage:** Store in a dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Can opener does not grip the can.	Incorrect positioning; can rim is damaged.	Ensure the opener is correctly aligned with the can's rim. Try repositioning. Avoid using on severely damaged cans.
Can opener stops rotating or gets stuck.	Mechanism is jammed; can is irregular.	Release the handles, reposition the opener, and try again. Ensure the can is not irregular or severely dented.
Lid does not separate cleanly.	Incomplete rotation; mechanism not fully engaged.	Ensure you complete a full rotation around the can. Apply firm, consistent pressure while turning.

## SPECIFICATIONS

---

**Model:** 404-70

**Brand:** KRUPS

**Dimensions:** Approximately 5.5 by 6.5 by 2.25 inches (Height x Length x Depth)

**Weight:** Approximately 1.8 Pounds

**Material:** Plastic, Rubber (Body), Stainless Steel (Blade/Mechanism)

**Operation Mode:** Manual

**Color:** Stainless Steel (referring to the mechanism, main body is white as seen in images)

## WARRANTY AND SUPPORT

---

The KRUPS 404-70 Open Master Can Opener comes with a **Limited One-Year Warranty**. This warranty covers defects in materials and workmanship under normal use from the date of purchase.

For warranty claims, technical assistance, or further inquiries, please contact KRUPS customer support. Refer to the product packaging or the official KRUPS website for the most current contact information.