

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KRUPS](#) /

› [KRUPS 201-71 ProCafe Plus Coffeemaker Instruction Manual](#)

## KRUPS 201-71

# KRUPS 201-71 ProCafe Plus Coffeemaker Instruction Manual

Model: 201-71

## INTRODUCTION

Thank you for choosing the KRUPS 201-71 ProCafe Plus Coffeemaker. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.

## Important Safety Instructions

- Read all instructions before operating the coffeemaker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffeemaker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.

## PRODUCT OVERVIEW

The KRUPS 201-71 ProCafe Plus Coffeemaker is designed for convenient and efficient coffee brewing. It features a 10-cup capacity and includes a permanent Gold Tone filter, eliminating the need for paper filters.



**Image 1:** Front view of the KRUPS 201-71 ProCafe Plus Coffeemaker. The image displays the white coffeemaker with its glass carafe, water level indicator, and control switch.

## Key Components and Features

- **Water Reservoir:** Located at the back, with a magnified water level indicator for easy reading.
- **Filter Basket:** Holds the Gold Tone permanent filter or a paper filter.
- **Gold Tone Permanent Filter:** Reusable filter included with the coffeemaker.
- **Glass Carafe:** 10-cup capacity with an "Aroma Savor" lid designed to seal in flavor.
- **Heating Plate:** Keeps brewed coffee warm.
- **On/Off Switch:** Activates and deactivates the brewing process.
- **Brewing Cycle Selector:** Allows selection between two brewing cycles for small or large quantities of coffee.
- **"Stop 'n' Serve" Feature:** Temporarily stops coffee flow when the carafe is removed, allowing you to pour a cup during brewing.

## SETUP AND FIRST USE

### Unpacking

1. Carefully remove all packaging materials from the coffeemaker.
2. Ensure all components are present: coffeemaker unit, glass carafe, and Gold Tone permanent filter.
3. Place the coffeemaker on a flat, stable, heat-resistant surface, away from water sources.

### Initial Cleaning (Before First Use)

Before brewing coffee for the first time, it is recommended to clean the coffeemaker to remove any manufacturing residues.

1. Wash the carafe, carafe lid, and Gold Tone filter in warm, soapy water. Rinse thoroughly and dry.
2. Fill the water reservoir with fresh cold water up to the 10-cup mark.
3. Place the empty Gold Tone filter into the filter basket.
4. Place the carafe with its lid on the heating plate.
5. Plug the coffeemaker into a standard electrical outlet.
6. Turn the coffeemaker ON and allow it to complete a full brewing cycle with only water.
7. Discard the water from the carafe. Repeat this process once more.
8. Your coffeemaker is now ready for use.

## OPERATING INSTRUCTIONS

---

### Brewing Coffee

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with fresh, cold water to the desired level using the magnified water level indicator on the side. Do not exceed the 10-cup maximum fill line.
2. **Add Coffee Grounds:** Place the Gold Tone permanent filter (or a standard paper filter) into the filter basket. Add the desired amount of ground coffee. A general guideline is one tablespoon of ground coffee per cup, but adjust to your taste.
3. **Position Carafe:** Ensure the carafe with its lid is properly seated on the heating plate.
4. **Select Brewing Cycle:** Use the brewing cycle selector switch (often labeled 1-3 or 4-10) to choose the appropriate setting for the amount of coffee you are brewing. Selecting the lower setting for smaller quantities will slow down the water flow for optimal extraction.
5. **Start Brewing:** Plug the coffeemaker into an electrical outlet and press the ON/OFF switch to the 'ON' position. The indicator light will illuminate, and brewing will begin.
6. **"Stop 'n' Serve" Feature:** If you wish to pour a cup of coffee before the brewing cycle is complete, you can temporarily remove the carafe. The "Stop 'n' Serve" feature will pause the coffee flow for a short period. Return the carafe to the heating plate within 20 seconds to prevent overflow.
7. **Keep Warm:** Once brewing is complete, the coffeemaker will automatically switch to the "keep warm" function, maintaining the coffee's temperature on the heating plate.
8. **Turn Off:** After serving, turn the coffeemaker OFF by pressing the ON/OFF switch to the 'OFF' position and unplug it from the outlet.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the lifespan of your coffeemaker.

### Daily Cleaning

- Always unplug the coffeemaker and allow it to cool completely before cleaning.
- Wash the carafe, carafe lid, and Gold Tone filter in warm, soapy water. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
- Wipe the exterior of the coffeemaker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the coffeemaker unit, cord, or plug in water or any other liquid.

### Descaling

Mineral deposits from water can build up over time and affect coffeemaker performance. Descaling your coffeemaker regularly, depending on water hardness and frequency of use (e.g., every 2-4 weeks).

1. Fill the water reservoir with a solution of white vinegar and water (e.g., 1 part vinegar to 2 parts water).
2. Place the empty carafe on the heating plate.

3. Turn the coffeemaker ON and allow half of the solution to brew through.
4. Turn the coffeemaker OFF and let it stand for at least 15 minutes to allow the solution to work.
5. Turn the coffeemaker ON again and allow the remaining solution to brew through.
6. Discard the vinegar solution.
7. Rinse the coffeemaker by brewing two full cycles with fresh, cold water only.

## TROUBLESHOOTING

If you encounter issues with your coffeemaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffeemaker does not turn on.	Not plugged in; power outlet not working; ON/OFF switch not engaged.	Ensure the coffeemaker is securely plugged into a working outlet. Press the ON/OFF switch firmly.
Coffee is not brewing.	No water in reservoir; filter basket clogged; carafe not properly seated.	Fill the water reservoir. Check if the filter basket is clear. Ensure the carafe is correctly positioned on the heating plate.
Coffee tastes weak.	Not enough coffee grounds; coffee too coarsely ground; brewing cycle setting incorrect.	Increase coffee grounds. Use a finer grind. Ensure the correct brewing cycle is selected for the amount of coffee. Descaling the coffeemaker if mineral buildup is present.
Coffee overflows from filter basket.	Too much coffee grounds; filter clogged; carafe not properly seated or removed for too long.	Reduce coffee grounds. Clean the filter. Ensure carafe is correctly seated and returned promptly if using "Stop 'n' Serve".
Water leaks from coffeemaker.	Water reservoir overfilled; carafe not properly seated; internal component issue.	Do not overfill the water reservoir. Ensure the carafe is correctly positioned. If leaks persist, contact customer support.

## SPECIFICATIONS

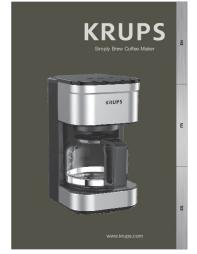
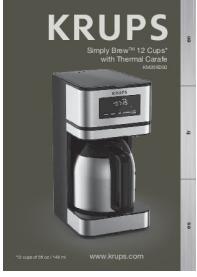
- **Brand:** KRUPS
- **Model:** 201-71
- **Capacity:** 10 Cups
- **Color:** White
- **Dimensions (L x W x H):** 7.5 x 8 x 12.25 inches
- **Item Weight:** 3 pounds
- **Coffee Input Type:** Ground Coffee
- **Special Features:** Permanent Filter, "Stop 'n' Serve" function, "Aroma Savor" carafe lid, Magnified Water Level Indicator, Two Brewing Cycles.
- **Included Components:** Coffeemaker unit, Glass Carafe, Gold Tone Permanent Filter.

## WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official KRUPS website. Do not attempt to repair the

appliance yourself, as this may void the warranty and pose safety risks. You can find more information and support on the [KRUPS Store on Amazon](#).

## Related Documents - 201-71

	<p><a href="#">KRUPS EC422 Coffee Maker User Manual and Guide</a></p> <p>Comprehensive user manual for the KRUPS EC422 coffee maker, covering setup, operation, features, cleaning, descaling, troubleshooting, and warranty information. Get the most out of your KRUPS coffee machine.</p>
	<p><a href="#">KRUPS EC422 Coffee Maker User Manual and Guide</a></p> <p>Detailed user manual and guide for the KRUPS EC422 coffee maker, covering setup, operation, features, cleaning, descaling, troubleshooting, and warranty information.</p>
	<p><a href="#">KRUPS Simply Brew Coffee Maker User Manual and Safety Instructions</a></p> <p>This comprehensive user manual for the KRUPS Simply Brew Coffee Maker provides essential safety guidelines, operating instructions for brewing coffee, cleaning and maintenance tips, and details on the KRUPS International Limited Guarantee. Learn how to use your coffee maker safely and effectively.</p>
	<p><a href="#">KRUPS Simply Brew To Go Coffee Maker User Manual and Safety Guide</a></p> <p>Comprehensive guide for the KRUPS Simply Brew To Go coffee maker (Model KM204D50), including detailed operating instructions, safety precautions, cleaning, descaling, and warranty information. Learn how to brew your perfect cup with this compact and convenient coffee maker.</p>
	<p><a href="#">KRUPS Simply Brew 12 Cups Coffee Maker User Manual</a></p> <p>Comprehensive user manual for the KRUPS Simply Brew™ 12 Cups* coffee maker with Thermal Carafe (KM209D50), covering setup, operation, safety, cleaning, and maintenance in English, French, and Spanish.</p>
	<p><a href="#">KRUPS 866 IL Caffè Grande User Manual and Operating Instructions</a></p> <p>Comprehensive user manual and operating instructions for the KRUPS 866 IL Caffè Grande coffee, espresso, and cappuccino maker. Learn about its features, parts, safety precautions, and how to brew perfect espresso.</p>