Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Neve /
- > Neve Audio CD Product Information Guide

Neve B00004TTD2

Neve Audio CD: Product Information Guide

Model: B00004TTD2

INTRODUCTION

This guide provides essential information for the proper use and care of your Neve Audio CD. Released in 2000 by Sony Legacy, this single-disc album features 48 minutes of music from the artist Neve.



Image: Front cover of the Neve Audio CD. The artwork displays a collage of band members' portraits and abstract color blocks, with the band's name prominently featured.

SETUP

To enjoy your Neve Audio CD, ensure you have a compatible playback device. This includes:

- Standard CD Player
- DVD Player with CD playback capability
- Blu-ray Player with CD playback capability
- Computer with a CD-ROM or DVD-ROM drive
- Car audio system with CD player

Before inserting the disc, ensure the disc tray or slot is clean and free of debris.

OPERATING

- 1. **Disc Insertion:** Gently hold the CD by its edges. Avoid touching the playing surface. Insert the disc into the player with the label side facing up. For slot-loading players, ensure the disc is inserted straight.
- 2. **Playback:** Once inserted, most players will automatically begin playback. If not, press the "Play" button on your device or remote control.
- 3. **Track Navigation:** Use the "Next Track" or "Previous Track" buttons to skip between songs. Use the "Fast Forward" or "Rewind" buttons to scan within a track.
- 4. Volume Control: Adjust the volume using your playback device's controls.
- 5. **Disc Ejection:** Press the "Eject" button to remove the disc from the player. Handle the disc by its edges when removing it.

MAINTENANCE

Proper care will extend the life of your Audio CD and ensure optimal playback quality.

- **Handling:** Always hold the CD by its outer edge or the center hole. Avoid touching the shiny playing surface, as fingerprints and oils can affect playback.
- Cleaning: If the disc becomes dirty, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards in a straight line. Do not wipe in circular motions. For stubborn marks, a small amount of water or a specialized CD cleaning solution can be used. Avoid abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep discs away from direct sunlight, extreme temperatures, and high humidity.
- **Scratches:** While minor scratches may not affect playback, deep scratches can cause skipping or playback errors. Handle with care to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Disc skips or stutters during playback.	Dust, fingerprints, or minor scratches on the playing surface.	Clean the disc thoroughly as described in the Maintenance section. Inspect for deep scratches.
Disc does not play or is not recognized.	Disc inserted incorrectly, dirty disc, or incompatible player.	Ensure the disc is inserted label-side up. Clean the disc. Try the disc in another compatible player to rule out player issues.
No sound.	Player volume too low, audio cables disconnected, or incorrect input selected on receiver.	Check volume levels on player and amplifier. Verify all audio connections. Select the correct audio input on your receiver/amplifier.

SPECIFICATIONS

Product Type: Audio CD

Model Number (ASIN): B00004TTD2

Artist: Neve

Manufacturer: Sony Legacy

Label: Sony Legacy

Original Release Date: 2000

Run Time: 48 minutes

Number of Discs: 1

Product Dimensions: 5.62 x 4.92 x 0.33 inches

Weight: 3.84 ounces

WARRANTY AND SUPPORT

Audio CDs are generally not covered by a manufacturer's warranty against wear and tear or accidental damage. However, if you received a defective or damaged disc, please contact your retailer within their specified return period for assistance. For general inquiries regarding the artist or album, please refer to official artist websites or music databases.

© 2000 Sony Legacy. All rights reserved.

Related Documents - B00004TTD2



Neve 88R LBC User Manual - Professional VCA Compressor

Comprehensive user manual for the Neve 88R LBC 500-series VCA compressor. Details features, controls, specifications, and safety instructions for professional audio applications.



Neve 10730PX 8-Channel Microphone, Line & Instrument Preamplifier User Manual

Comprehensive user manual for the Neve 10730PX, an 8-channel microphone, line, and instrument preamplifier. Covers setup, operation, remote control software, Dante and USB connectivity, specifications, and troubleshooting.



Neve 8424 Console User Manual: Legendary Analog Sound for Modern Hybrid Studios

Discover the Neve 8424 Console, a professional mixing console designed for hybrid studios. Featuring 24 channels, 4 groups, 1073 preamps, Marinair transformer-coupled stereo mix bus, and advanced DAW integration for seamless analog and digital workflows.



Neve 5315/12/P Standard Broadcast Console Technical Manual

Detailed technical manual for the Neve 5315/12/P Standard Broadcast Console, covering specifications, level setting procedures, module descriptions, parts lists, and circuit diagrams for professional audio applications.



Neve 8816 16:2 Summing Mixer User Manual

User manual for the Neve 8816 16:2 Summing Mixer, detailing its features, controls, application scenarios, specifications, and installation for professional audio production.



Neve Genesys G3D User Manual - Dolby Atmos Integration and Control

This user manual provides detailed instructions for the Neve Genesys G3D console, focusing on its integration with the Dolby Atmos Renderer. It covers setup, remote control of object metadata, 3D panning, loudspeaker management, and automation features for professional audio production.