

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Nexia 270ix Z MRC Zoom APS Camera User Manual

Fujifilm Nexia 270ix Z MRC

Fujifilm Nexia 270ix Z MRC Zoom APS Camera User Manual

INTRODUCTION

This manual provides comprehensive instructions for the proper use and care of your Fujifilm Nexia 270ix Z MRC Zoom APS Camera. Please read this manual thoroughly before operating the camera to ensure optimal performance and longevity. The Nexia 270ix Z MRC is a compact Advanced Photo System (APS) camera featuring a Fujinon zoom lens, built-in flash, and various print format options.



This image displays the Fujifilm Nexia 270ix Z MRC Zoom APS Camera. The camera is silver-colored, compact, and shows the Fujinon zoom lens in an extended position. The built-in flash unit is visible in its popped-up state on the top right. The camera body features the 'nexia' and '270ix Z MRC' branding, along with the Fujifilm logo.

SETUP

1. Battery Installation

The camera requires batteries for operation. Open the battery compartment cover, typically located on the side or bottom of the camera. Insert the batteries according to the polarity indicators (+/-) inside the compartment. Close the cover securely.

2. Film Loading

The Nexia 270ix Z MRC uses APS film cartridges. Open the film compartment door. Insert the APS film cartridge into the chamber, ensuring it clicks into place. Close the film compartment door. The camera will automatically advance the film to the first frame.

3. Initial Settings (Date/Time)

Upon first use or after battery replacement, you may need to set the date and time. Refer to the camera's LCD display and control buttons to navigate the settings menu. Set the current date and time for accurate imprinting on your photographs.

OPERATING THE CAMERA

1. Power On/Off

To power on the camera, slide the power switch or press the power button, usually located on the top panel. To power off, repeat the action or wait for automatic power-off if enabled.

2. Taking Pictures (Basic Operation)

1. **Aim:** Frame your subject in the viewfinder.
2. **Focus:** Lightly press the shutter button halfway down to activate autofocus. A focus indicator in the viewfinder will confirm focus.
3. **Shoot:** Press the shutter button fully down to take the picture.

3. Zoom Function

Use the zoom lever or buttons, typically located near the shutter button, to adjust the focal length of the Fujinon lens. The lens zooms from 23mm (wide-angle) to 50mm (telephoto) to bring distant subjects closer or capture wider scenes.

4. Flash Modes

The camera features an intelligent built-in flash that pops up and fires as needed. You can select from various flash modes, which may include: Auto Flash, Fill-in Flash, Flash Off, and Red-eye Reduction. A Night Portrait mode is also available for specific low-light conditions.

5. Print Format Selection

The APS system allows you to select the print format at the time of shooting. Use the dedicated button or menu option to choose from:

- **Classic (C):** Standard 4x6 inch prints.
- **HDTV (H):** Wider 4x7 inch prints, suitable for widescreen viewing.
- **Panoramic (P):** Ultra-wide 4x10 inch prints for expansive scenes.

6. Midroll Film Change

This feature allows you to switch between different rolls of film before a roll is fully exposed. To perform a midroll change, activate the function (refer to your camera's specific button or menu option). The camera will rewind the current film, allowing you to remove it and insert another. When you re-insert the partially exposed roll, the camera will automatically advance to the next unexposed frame.

7. Quartz Imprinting

The camera can imprint information directly onto your photographs. Use the quartz imprinting function to stamp the date, time, or select from 31 pre-set titles onto your images.

8. LCD Display Information

The LCD panel on the camera displays important information such as the selected settings, frame counter, battery status, and the current time and date.

MAINTENANCE

1. Cleaning the Camera

Use a soft, lint-free cloth to gently wipe the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid using abrasive materials or harsh chemicals. Keep the film compartment free of dust and debris.

2. Battery Care

Remove batteries if the camera will not be used for an extended period to prevent leakage. Use fresh batteries of the recommended type. Dispose of used batteries responsibly.

3. Film Storage

Store unexposed film in a cool, dry place, away from direct sunlight and high temperatures. Process exposed film as soon as possible for best results.

TROUBLESHOOTING

- **Camera does not power on:** Check battery installation and ensure batteries are fresh.
- **Film does not advance:** Ensure the film cartridge is correctly loaded and the film door is securely closed.
- **Flash does not fire:** Check flash mode settings. Ensure there is sufficient battery power.
- **Images are blurry:** Ensure the camera is held steady during shooting. Allow the autofocus to lock before fully pressing the shutter button. Clean the lens if necessary.
- **LCD display is blank or erratic:** Check battery power. If issues persist, remove and re-insert batteries.

For persistent issues not covered here, please contact Fujifilm customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Nexia 270ix Z MRC
Brand	Fujifilm
Lens	Fujinon Zoom Lens (23mm - 50mm)
Film Format Type	APS (Advanced Photo System)
Special Features	Built-in Flash, Midroll Change, Quartz Imprinting
Print Formats	Classic (C), HDTV (H), Panoramic (P)
Item Weight	9.6 ounces (approx. 272 grams)
Package Dimensions	6.1 x 3.2 x 2.5 inches
Included Components	Camera Body & Lens

WARRANTY AND SUPPORT

For information regarding product warranty, service, or technical support, please refer to the warranty card included with your purchase or visit the official Fujifilm website. You may also contact Fujifilm customer service directly for assistance with your Nexia 270ix Z MRC camera.