

[Manuals.plus](#) /

› [Radio Flyer](#) /

› Radio Flyer Rolling Pony User Manual

Radio Flyer 315

Radio Flyer Rolling Pony User Manual

MODEL: 315

1. Introduction

The Radio Flyer Rolling Pony is a classic ride-on toy designed for young children, offering a blend of durability, stability, and fun. Constructed from solid wood and steel, it is built to withstand active play both indoors and outdoors. Its simple design encourages imaginative play and helps develop motor skills.



Image: The Radio Flyer Rolling Pony, featuring a natural wood horse body and seat, mounted on a bright red steel frame with four durable wheels.

2. Safety Information

Please read and understand all safety instructions before allowing a child to use the Radio Flyer Rolling Pony. Failure to follow these instructions may result in injury.

- **Adult Supervision Required:** Always supervise children during use of this toy. Never leave a child unattended.
- **Age Recommendation:** This toy is suitable for children aged 12 months and up. Ensure the child's feet can comfortably reach the ground for proper propulsion and balance.

- **Safe Environment:** Use the Rolling Pony on flat, level surfaces. Avoid sloped areas, stairs, busy streets, or near swimming pools.
- **Inspection Before Use:** Before each use, inspect the toy for any loose parts, damage, or excessive wear. Do not use if any components are broken or missing.
- **Weight Limit:** Adhere to any specified weight limits (refer to product packaging if available).
- **No Modifications:** Do not modify the toy in any way, as this may compromise its safety and structural integrity.

3. Setup

The Radio Flyer Rolling Pony (Model 315) is designed for immediate use upon unboxing. No complex assembly is required.

1. **Unpack:** Carefully remove the Rolling Pony from its packaging.
2. **Inspect:** After removing all packaging materials, thoroughly inspect the toy for any signs of shipping damage or manufacturing defects.
3. **Ready for Play:** Once inspected and confirmed to be in good condition, the Rolling Pony is ready for your child to enjoy.

4. Operating Instructions

The Rolling Pony is simple and intuitive for young children to operate.

- **Sitting Position:** Guide the child to sit comfortably on the wooden seat, ensuring they are balanced.
- **Grip Handles:** Encourage the child to hold onto the molded easy-grip handles located on the horse's head for stability and steering.
- **Propulsion:** The child can propel the toy forward or backward by pushing off the ground with their feet.
- **Stability:** The wide wheelbase of the Rolling Pony provides maximum stability, helping to prevent tipping during normal use.

5. Maintenance

Regular maintenance will help ensure the longevity and safe operation of your Radio Flyer Rolling Pony.

- **Cleaning:** Clean the toy with a damp cloth and mild soap. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the wood or paint.
- **Storage:** Store the Rolling Pony in a dry, cool place, away from direct sunlight and extreme temperatures. Prolonged exposure to moisture or direct sun can damage the wood and steel components.
- **Hardware Check:** Periodically check all screws, bolts, and connections to ensure they are tight. Tighten any loose fasteners with an appropriate tool.
- **Wheel Inspection:** Inspect the wheels regularly for any signs of wear, cracks, or obstructions that might hinder smooth rolling.

6. Troubleshooting

Most issues with the Radio Flyer Rolling Pony are minor and can be resolved with simple checks.

- **Toy Does Not Roll Smoothly:**

- Check wheels for any debris (e.g., string, hair) wrapped around the axles.
- Ensure wheels are securely attached and not damaged.

- **Handles Feel Loose:**

- Inspect the connection points of the handles to the horse's head.
- Tighten any visible screws if they appear loose.

- **Squeaking Noises:**

- A small amount of lubricant (e.g., silicone spray) can be applied to the wheel axles if squeaking occurs. Avoid getting lubricant on the wooden or painted surfaces.

If you encounter an issue not listed here or if the problem persists, please refer to the Warranty and Support section for contact information.

7. Specifications

Feature	Detail
Model Number	315
Assembly Required	No
Material Type(s)	Wood, Steel
Colour	Red
Manufacturer Recommended Age	12 months and up
Product Dimensions (L x W x H)	10.41 x 23.11 x 45.97 cm
Product Weight	2.36 kg
UPC	042385913865

8. Warranty and Support

Radio Flyer stands behind the quality of its products. For specific warranty details, product registration, or to contact customer support for assistance with your Rolling Pony (Model 315), please visit the official Radio Flyer website or refer to the documentation included with your purchase.

You can typically find support contact information, FAQs, and replacement parts details on their official website:

www.radioflyer.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question