

[manuals.plus](#) /

› [Xenon](#) /

› [Xenon Chess Boxing Destroyer VHS Instruction Manual \(Model B00004U3US\)](#)


Xenon B00004U3US

Xenon Chess Boxing Destroyer VHS Instruction Manual

Model: B00004U3US

1. INTRODUCTION

This manual provides essential instructions for the proper handling, playback, and care of your Chess Boxing Destroyer VHS tape. This product is a standard VHS format video cassette featuring the film 'Chess Boxing Destroyer', distributed by Xenon. It stars actors Ming-Tsai Wu and Cheng-Wu Yang.

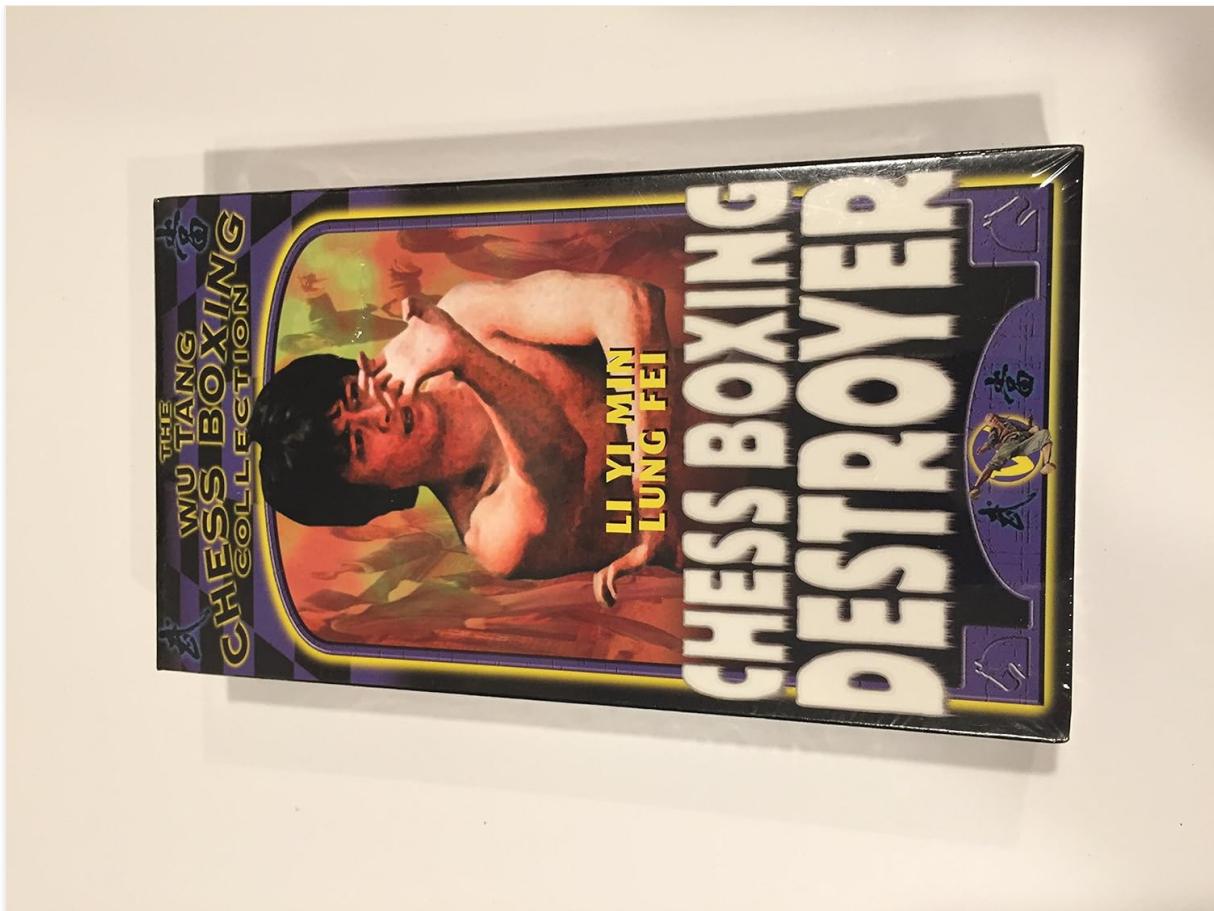

This image displays the front cover of the Chess Boxing Destroyer VHS tape. The cover features a central illustration of a martial artist in a dynamic pose, with the title 'CHESS BOXING DESTROYER' prominently displayed. Text on the spine indicates 'THE WU TANG CHESS BOXING COLLECTION'.

2. SETUP

To play your VHS tape, you will need a functional Video Cassette Recorder (VCR) and a television or monitor with appropriate input connections.

1. **Connect your VCR:** Ensure your VCR is properly connected to your television or monitor. Typically, this involves connecting an RCA composite video cable (yellow for video) and audio cables (red for right audio, white for left audio) from the VCR's output to the TV's input. Alternatively, an RF coaxial cable may be used.
2. **Power On:** Turn on your VCR and television. Select the correct input channel on your television (e.g., Video 1, AV, Line In).
3. **Insert Tape:** Gently insert the Chess Boxing Destroyer VHS tape into the VCR's tape slot with the label facing upwards, ensuring it slides in smoothly. The VCR should automatically pull the tape in.

3. OPERATING INSTRUCTIONS

Once the tape is inserted and your VCR is ready, use the VCR's controls or remote control for playback.

- **Play:** Press the **PLAY** button to begin watching the film.
- **Pause:** Press the **PAUSE** button to temporarily stop playback. Press **PLAY** again to resume.
- **Stop:** Press the **STOP** button to end playback and eject the tape.
- **Rewind (REW):** Press the **REW** button to quickly rewind the tape.
- **Fast Forward (FF):** Press the **FF** button to quickly advance the tape.
- **Tracking:** If the picture quality is poor or distorted, adjust the **TRACKING** control on your VCR until the image stabilizes.

4. CARE AND MAINTENANCE

Proper care of your VHS tape and VCR will ensure optimal performance and longevity.

- **Tape Storage:** Store VHS tapes vertically in their cases, away from direct sunlight, extreme temperatures, and strong magnetic fields (e.g., speakers, televisions).
- **Handling:** Avoid touching the magnetic tape itself. Always handle the cassette by its plastic casing.
- **Dust Prevention:** Keep tapes in their protective sleeves or cases when not in use to prevent dust accumulation.
- **VCR Cleaning:** Periodically clean your VCR's heads using a specialized VHS head cleaning tape. Refer to your VCR's manual for specific cleaning instructions.
- **Rewind After Use:** Always rewind the tape to the beginning after viewing to prevent tension on the tape and ensure it's ready for the next playback.

5. TROUBLESHOOTING

If you encounter issues during playback, consider the following common solutions:

- **No Picture/Sound:**
 - Ensure all cables are securely connected between the VCR and TV.
 - Verify the TV is set to the correct input channel (AV, Video 1, etc.).

- Check that the VCR is powered on and in Play mode.

- **Poor Picture Quality (Snowy/Distorted):**

- Adjust the VCR's **TRACKING** control.
- Clean the VCR heads with a cleaning tape.
- Ensure the tape is not damaged or worn.

- **Tape Jammed in VCR:**

- Do not force the tape out. Turn off the VCR, then try turning it back on and pressing **EJECT**.
- If the issue persists, consult a VCR repair specialist.

6. PRODUCT SPECIFICATIONS

Key specifications for the Chess Boxing Destroyer VHS tape:

Feature	Detail
ASIN	B00004U3US
Studio	Xenon
Actors	Cheng-Wu Yang, Ming-Tsai Wu
Run Time	1 hour and 40 minutes
Release Date	September 19, 2000
Date First Available	September 29, 2006
Package Dimensions	7.32 x 4.19 x 1.12 inches; 6.13 ounces

7. WARRANTY AND SUPPORT

This product is a media item. For any issues related to the physical tape or its content, please refer to the retailer or distributor from whom the product was purchased. Specific warranty information is not provided for this VHS tape. For general inquiries, you may attempt to contact the studio, Xenon, directly.