

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic DVD-CV50 5-Disc DVD Player Instruction Manual](#)

## Panasonic DVDCV50

# Panasonic DVD-CV50 5-Disc DVD Player Instruction Manual

Model: DVDCV50 | Brand: Panasonic

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Panasonic DVD-CV50 5-Disc DVD Player. This unit features a convenient five-disc carousel changer, allowing you to enjoy extended playback of DVDs and CDs. It incorporates advanced audio and video technologies to enhance your home entertainment experience.



*Image: Front view of the Panasonic DVDCV50 5-Disc DVD Player, showcasing its sleek black design and disc tray.*

## SAFETY INFORMATION

- Read all instructions before operating the unit.
- Keep the unit away from water or moisture.
- Do not block ventilation openings.
- Ensure proper power supply (120V AC, 60Hz).
- Avoid placing the unit on unstable surfaces.
- Do not attempt to service the unit yourself. Refer all servicing to qualified personnel.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- Panasonic DVD-CV50 5-Disc DVD Player Unit
- Remote Control (requires 2 AA batteries, not always included)
- RCA Audio/Video Cables
- Power Cord
- Instruction Manual (this document)

## SETUP

### 1. Physical Connections

Connect the DVD player to your television and audio system using the appropriate cables.

**1. Power Connection:** Plug the power cord into the AC IN port on the rear of the DVD player, then into a standard electrical outlet.

**2. Video Connection:**

- **RCA Video:** Connect the yellow RCA video cable from the VIDEO OUT port on the DVD player to the VIDEO IN port on your TV.
- **HDMI (Optional):** For enhanced picture quality, connect an HDMI cable (not included) from the HDMI OUT port on the DVD player to an HDMI IN port on your TV.

**3. Audio Connection:**

- **RCA Audio:** Connect the red and white RCA audio cables from the AUDIO OUT (L/R) ports on the DVD player to the corresponding AUDIO IN (L/R) ports on your TV or audio receiver.
- **Digital Audio (Optional):** For surround sound, connect a coaxial or optical digital audio cable (not included) from the DIGITAL AUDIO OUT (COAXIAL or OPTICAL) port on the DVD player to the corresponding digital audio input on your audio receiver.



*Image: Close-up of the rear panel of a DVD player, highlighting the various audio and video output ports including RCA and HDMI.*

## 2. Initial Setup

1. Turn on your TV and select the correct input source (e.g., AV, HDMI1) corresponding to the connection you made.
2. Turn on the Panasonic DVD-CV50 player using the power button on the unit or remote control.
3. Follow the on-screen menu icons to complete any initial setup procedures, such as language selection or aspect ratio settings.

## OPERATING INSTRUCTIONS

### 1. Loading Discs

1. Press the OPEN/CLOSE button to open the disc tray.
2. Place up to five discs onto the carousel trays, ensuring the label side is facing up.
3. Press the OPEN/CLOSE button again to close the disc tray. The player will begin reading the discs.
4. Utilize the **Disc-in-Play** mode to change up to four discs while one disc is actively playing, ensuring uninterrupted entertainment.

### 2. Playback Controls

Use the buttons on the front panel or the remote control for playback:

- **PLAY (▶)**: Starts or resumes playback.
- **PAUSE (■)**: Pauses playback. Press again to resume.
- **STOP (■)**: Stops playback.
- **SKIP (▶▶ | |◀◀)**: Skips to the next or previous track/chapter.
- **FAST FORWARD/REWIND (▶▶ / ◀◀)**: Fast forwards or rewinds through the content. Five speeds are available for precise control.

### 3. Special Features

- **Digital Cinema Mode**: Adjusts picture color and luminance for an optimized cinematic viewing experience. Access this through the on-screen menu.
- **Dialogue Enhancement**: Fine-tune the dialogue channel to improve clarity, especially useful in complex home theater environments.
- **Slow Motion & Advance Play**: Control playback at various slow speeds or advance frame-by-frame for detailed viewing.
- **Still Picture Display**: Pause playback to view a still image.
- **Resume Playback**: The player remembers your last viewing position, allowing you to resume from where you left off.

- **Shuffle & Random Play:** Enjoy your music CDs in a random order.
- **Disc and Track Access:** Directly select specific discs or tracks using the remote control.

## 4. Audio/Video Settings

The DVD-CV50 is equipped with advanced processing for superior audio and video quality:

- **Dolby Digital & DTS Compatibility:** Built-in Dolby Digital decoder and compatibility with Digital Theater Sound (DTS) receivers provide immersive surround sound.
- **10-bit Video Digital-to-Analog Converter:** Enhances overall picture quality for a clearer and more vibrant image.
- **24-bit Audio Digital-to-Analog Converter:** Delivers high-fidelity audio reproduction.
- **Dual Digital-Audio Outputs:** Offers both coaxial and optical digital audio outputs for flexible connection to various audio systems.

## MAINTENANCE

### 1. Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth. Do not use liquid or aerosol cleaners.
- Ensure ventilation openings are free from dust and obstructions.

### 2. Disc Handling

- Handle discs by their edges to avoid fingerprints and scratches.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Store discs in their cases when not in use to prevent damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not active.	Ensure power cord is securely plugged in. Test outlet with another device.
No picture	Incorrect video connection; wrong TV input selected.	Check video cables (RCA/HDMI) are connected correctly. Select the appropriate input on your TV.
No sound	Incorrect audio connection; TV/receiver volume too low or muted.	Verify audio cables (RCA/Digital) are connected. Adjust volume on TV/receiver. Check mute status.
Disc does not play	Disc is dirty, scratched, or inserted incorrectly; unsupported disc format.	Clean or replace disc. Ensure disc is inserted label-side up. Verify disc is a supported format (DVD, CD).

## SPECIFICATIONS

**Brand:** Panasonic

**Model:** DVDCV50

**Type:** 5-Disc Carousel DVD Player

**Dimensions (W x D x H):** 17 x 14.68 x 4.92 inches

**Weight:** 11 pounds

**Color:** Black

**Supported Media Types:** DVD, CD

**Video DAC:** 10-bit

**Audio DAC:** 24-bit

**Audio Output Mode:** Surround

**Supported Audio Format:** Dolby Digital (Built-in decoder), DTS (Compatible)

**Connectivity:**

- RCA Video Output
- RCA Audio Output (L/R)
- HDMI Output
- Coaxial Digital Audio Output
- Optical Digital Audio Output

**Power Requirements:** 120V AC, 60Hz

## WARRANTY AND SUPPORT

Your Panasonic DVD-CV50 5-Disc DVD Player is covered by a manufacturer's warranty. Please refer to the warranty card included in your original packaging for specific terms and conditions.

For technical assistance, troubleshooting, or warranty claims, please contact Panasonic Customer Support through their official website or the contact information provided in your product documentation.

For additional resources and FAQs, visit the official Panasonic support page: [Panasonic Support](#)