

- Manuals.plus /
- › Nordic Ware /
- › Nordic Ware Microwave 2-Cavity Egg Poacher Instruction Manual

Nordic Ware 64702

Nordic Ware Microwave 2-Cavity Egg Poacher Instruction Manual

- Setup
- Operating
- Maintenance
- Troubleshooting
- Specifications
- Warranty
- Support

1. SETUP

Before first use, carefully unpack the Nordic Ware Microwave 2-Cavity Egg Poacher and inspect it for any signs of damage. Remove all packaging materials and labels.

Initial Cleaning: Hand wash the egg poacher thoroughly with warm, soapy water. Rinse completely and dry before use.



Image: The Nordic Ware Microwave 2-Cavity Egg Poacher, a white plastic device with two egg-shaped cavities and a hinged lid.

2. OPERATING INSTRUCTIONS

The Nordic Ware Microwave 2-Cavity Egg Poacher is designed for quick and easy preparation of poached eggs in your microwave.

1. **Prepare the Cavities:** Add approximately 1/2 teaspoon of water into each 3-inch egg cup. For best results and to prevent sticking, you may lightly grease the inside of each cup with cooking spray or a small amount of butter.
2. **Add Eggs:** Carefully crack one egg into each prepared cup.
3. **Pierce Yolks:** *Important:* Lightly pierce each egg yolk with a fork or toothpick. This step is crucial to prevent the eggs from bursting during microwaving.
4. **Close and Microwave:** Snap the lid of the egg poacher closed. Place the poacher in your microwave.



Image: The Nordic Ware Microwave 2-Cavity Egg Poacher open, showing two raw eggs with water in each cavity, ready for cooking.

5. **Cooking Time:** Microwave on high power. Cooking times will vary depending on your microwave's wattage and your desired egg doneness. As a general guideline:

- For **one egg**: Start with 30-45 seconds.
- For **two eggs**: Start with 45-90 seconds.

Adjust cooking time in 5-10 second increments until desired doneness is achieved.

6. **Resting Period:** After microwaving, let the egg poacher stand for 1-2 minutes with the lid closed. This allows the eggs to finish cooking and set properly.

7. **Serve:** Carefully open the lid (steam may escape) and remove the perfectly poached eggs. Serve immediately on toast, English muffins, or as desired.



Image: Two perfectly cooked poached eggs, seasoned and served on toast, demonstrating the result from the poacher.

Official Product Video: How to Use

Video: An official demonstration of how to use the Nordic Ware Microwave Egg Poacher to prepare various egg dishes, including poached eggs, omelets, and hard-boiled eggs.

3. MAINTENANCE AND CARE

- **Cleaning:** After each use, hand wash the egg poacher with warm, soapy water. Rinse thoroughly.
- **Dishwasher Use:** Dishwasher use is *not recommended*, as it may cause the product to warp over time.
- **Utensils:** Avoid using metal utensils inside the egg cups, as they can scratch the surface. Use plastic or silicone utensils for best results.
- **Storage:** Store in a clean, dry place.

4. TROUBLESHOOTING

- **Eggs not cooked to desired doneness:** Microwave wattage varies significantly. If eggs are undercooked, increase cooking time in small increments (5-10 seconds). If overcooked, reduce cooking time.
- **Eggs bursting in microwave:** This is typically caused by steam building up inside the yolk. Always lightly pierce the egg yolk with a fork or toothpick before microwaving.
- **Eggs sticking to the poacher:** Ensure you are using 1/2 teaspoon of water in each cup. For additional non-stick properties, lightly grease the cups with cooking spray or a small amount of butter before adding the egg.
- **Uneven cooking:** If cooking only one egg, some users find it helpful to add water to the empty cavity to help distribute heat more evenly.

5. PRODUCT SPECIFICATIONS

Brand	Nordic Ware
Model Number	64702
Material	Plastic (BPA and Melamine Free)
Color	White
Item Dimensions (L x W x H)	6.5 x 7.25 x 2.25 inches
Capacity	Two 3-inch egg cups
Product Care Instructions	Hand Wash Only
Origin	Made in USA

6. WARRANTY INFORMATION

This Nordic Ware Microwave 2-Cavity Egg Poacher comes with a **5-year warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

For specific warranty terms and conditions, or to make a claim, please refer to the official Nordic Ware website or contact their customer service.

7. CUSTOMER SUPPORT

Should you have any questions, require assistance, or need to report an issue with your Nordic Ware Microwave 2-Cavity Egg Poacher, please contact Nordic Ware customer service directly.

Contact information can typically be found on the official Nordic Ware website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00004W4UR>

More documents and user manuals: <https://manuals.plus/>