

[Manuals.plus](#) /

› [Canon](#) /

› Canon RS-60E3 Remote Switch Instruction Manual

Canon RS-60E3

Canon RS-60E3 Remote Switch Instruction Manual

Model: RS-60E3

1. PRODUCT OVERVIEW

The Canon RS-60E3 Remote Switch is a wired accessory designed to provide convenient remote shutter release functionality for compatible Canon EOS cameras. This device replicates the functions of your camera's shutter button, allowing for stable, hands-free operation and reducing camera shake, which is crucial for long exposures and macro photography.

Its compact design and simple plug-in attachment make it an essential tool for various photographic scenarios.



Figure 1: Canon RS-60E3 Remote Switch with its cable and 2.5mm jack.

2. SETUP

1. **Locate the Remote Control Terminal:** Identify the remote control terminal on your compatible Canon EOS camera. This is typically a 2.5mm jack, often located on the side of the camera body.
2. **Connect the Remote Switch:** Insert the 2.5mm jack of the RS-60E3 Remote Switch firmly into the camera's remote control terminal.
3. **Secure Connection:** Ensure the connection is secure. A loose connection may prevent the remote switch from functioning correctly.



Figure 2: Close-up view of the RS-60E3's 2.5mm connector for camera attachment.

3. OPERATING INSTRUCTIONS

The RS-60E3 Remote Switch provides full control over your camera's shutter release, mimicking the functionality of the camera's built-in shutter button.

- **Half-Press for Focus:** Gently press the shutter button on the remote switch halfway down to activate your camera's autofocus system. The camera will focus on your subject.
- **Full-Press for Shutter:** Once focused, press the shutter button fully down to release the shutter and capture an image.
- **Bulb Mode / Continuous Shooting (Running Lock):** For extended exposures (Bulb mode) or continuous shooting, press the shutter button fully down and then slide it forward into the 'RUNNING LOCK' position. This will keep the shutter open or trigger continuous shots according to your camera's settings. To stop, slide the button back to its original position.

Your browser does not support the video tag.

Video 1: Product Overview demonstrating the Canon RS-60E3 Remote Switch's features and operation.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote switch. Avoid using liquid cleaners or solvents.
- **Storage:** Store the remote switch in a cool, dry place away from direct sunlight and extreme temperatures. Neatly coil the cable to prevent tangling or damage.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts. Do not pull on the cable forcefully.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the 2.5mm jack is fully and securely inserted into the camera's remote control terminal.
 - Verify that your camera is powered on and in a compatible shooting mode.
 - Check your camera's settings to ensure external remote control is enabled, if applicable.
- **Intermittent connection:**

- Inspect the cable and connector for any visible signs of damage, such as bends, cuts, or corrosion.
- Try re-inserting the jack firmly.

6. SPECIFICATIONS

Brand:	Canon
Model Name:	RS-60E3 Remote Switch
Model Number:	2469A002AA
Connectivity Technology:	Wired
Cable Length:	Approximately 2 feet (0.6 meters)
Item Weight:	0.05 Pounds (approx. 23 grams)
Item Dimensions (L x W x H):	5.9"L x 0.8"W x 0.2"H (approx. 15cm x 2cm x 0.5cm)
Compatible Devices:	Canon EOS Rebel, EOS Elan, EOS IX series cameras (e.g., Rebel 2000, Rebel X/XS, Rebel G, Elan II, Elan IIe, EOS IX)
Manufacturer:	Canon Cameras US

7. WHAT'S IN THE BOX

- 1x Canon RS-60E3 Remote Switch

8. WARRANTY AND SUPPORT

The product warranty typically covers manufacturing defects. Please note that the warranty does not cover misuse of the product.

For detailed warranty information, product registration, or technical assistance, please refer to the official Canon website or contact Canon customer service directly. You may also consult your camera's user manual for specific instructions regarding remote control accessories.