

[manuals.plus](#) /› [Audiovox](#) /› [Audiovox CE-122 Personal CD Player with Car Kit User Manual](#)

Audiovox CE122

Audiovox CE-122 Personal CD Player with Car Kit

USER MANUAL

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Audiovox CE-122 Personal CD Player with Car Kit. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your listening experience.

The Audiovox CE-122 is a portable CD player designed for versatile use, featuring a Digital Anti-Shock System (DASS) for uninterrupted playback during movement, a 22-track programmable memory, and a bass boost function. It includes a complete car kit for in-vehicle use.

Package Contents

Verify that all items listed below are included in your package:

- Audiovox CE-122 Portable CD Player
- Headphones
- AC Adapter
- Car Adapter
- Cassette Adapter
- User's Manual (this document)



Image: The Audiovox CE-122 portable CD player shown with all its accessories, including headphones, AC adapter, car adapter, and cassette adapter.

Product Features

- Plays audio CD and CD-R/RW discs.
- AC/DC operation for home and portable use.
- Complete car kit included for in-vehicle audio.
- Digital Anti-Shock System (DASS) provides up to 20 seconds of skip protection.
- 22-track programmable memory for custom playback sequences.
- Bass boost feature for enhanced audio.
- Forward and reverse search functions.
- Repeat and pause functions.
- Key hold switch to prevent accidental button presses.
- Line out jack for connecting to external audio systems.
- Auto power off function to conserve battery life.
- Dual stereo headphone jack for shared listening.
- Built-in charger for rechargeable batteries (rechargeable batteries not included).

Setup

1. Inserting Batteries

The CD player operates on 4 AA batteries (included). For rechargeable batteries (not included), ensure they are inserted correctly for charging.

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 4 AA batteries, observing the correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

2. Connecting Power (AC Adapter)

For home use or to charge rechargeable batteries:

1. Plug the small end of the AC adapter into the DC IN 4.5V jack on the CD player.

2. Plug the other end of the AC adapter into a standard wall outlet.
3. If using rechargeable batteries, select the 'charge' function (if available on your model) to begin charging.

3. Connecting Headphones

Plug the headphones into one of the two headphone jacks on the side of the CD player.



Image: A close-up view of the headphones included with the Audiovox CE-122 CD player.

4. Car Kit Setup

To use the CD player in your vehicle:

1. Plug the car adapter into your vehicle's cigarette lighter or 12V power outlet.
2. Connect the small end of the car adapter to the DC IN 4.5V jack on the CD player.
3. Insert the cassette adapter into your vehicle's cassette player.
4. Connect the audio cable from the cassette adapter to the LINE OUT jack on the CD player.
5. Ensure your car stereo is set to the cassette function to hear the CD player's audio.

Operating Instructions

1. Inserting a CD

1. Press the OPEN button to open the CD compartment lid.
2. Place a CD (audio CD or CD-R/RW) onto the center spindle with the label side facing up.
3. Gently press the CD down until it clicks into place.
4. Close the CD compartment lid firmly until it latches.



Image: The Audiovox CE-122 portable CD player with its lid open, revealing the disc compartment where a CD is placed.

2. Basic Playback

- **Play:** Press the **PLAY/PAUSE** button to start playback. The track number will appear on the display.
- **Pause:** Press the **PLAY/PAUSE** button during playback to pause. Press again to resume.
- **Stop:** Press the **STOP** button to stop playback.

3. Track Navigation

- **Skip Track:** Press the **SKIP FORWARD** (►►) or **SKIP BACKWARD** (◀◀) buttons to move to the next or previous track.
- **Search:** Press and hold the **SKIP FORWARD** (►►) or **SKIP BACKWARD** (◀◀) buttons during playback to fast forward or rewind within a track.

4. Repeat Function

Press the **REPEAT** button to cycle through repeat modes:

- **Repeat 1:** Repeats the current track.
- **Repeat All:** Repeats all tracks on the disc.
- **Repeat Off:** Disables repeat function.

5. Programmable Memory

You can program up to 22 tracks to play in a specific order:

1. With the CD stopped, press the **PROGRAM** button.
2. Use the **SKIP FORWARD** (►►) or **SKIP BACKWARD** (◀◀) buttons to select the desired track.
3. Press **PROGRAM** again to add the track to the memory.
4. Repeat steps 2 and 3 for up to 22 tracks.
5. Press **PLAY/PAUSE** to start playback of the programmed sequence.

6. Bass Boost

Press the **BASS BOOST** button to activate or deactivate the bass enhancement feature.

7. Key Hold Switch

Slide the **HOLD** switch to the **ON** position to disable all buttons, preventing accidental operation during transport.

8. Digital Anti-Shock System (DASS)

The DASS provides up to 20 seconds of skip protection. This feature is automatically active during playback to ensure smooth audio even during movement.

9. Auto Power Off

The unit will automatically power off after a period of inactivity or when a CD finishes playing to conserve battery life.



Image: The Audiovox CE-122 portable CD player, a silver-colored device with a digital display and control buttons, shown alongside its black over-ear headphones.

Maintenance

1. Cleaning the CD Player

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- To clean the lens, use a specialized CD lens cleaner disc. Do not touch the lens directly.

2. Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Replace all batteries at the same time; do not mix old and new batteries or different types of batteries.

3. Storage

Store the CD player in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

If you encounter issues with your Audiovox CE-122, please refer to the following common problems and solutions:

- **No Power:**

- Check if batteries are inserted correctly and are not depleted. Replace if necessary.
- Ensure the AC adapter or car adapter is securely connected and the power source is active.

- **CD Not Playing / Disc Error:**

- Ensure the CD is inserted correctly with the label side up.
- Check if the CD is scratched or dirty. Clean the CD with a soft, lint-free cloth.
- Make sure the CD compartment lid is fully closed.
- The disc format may not be supported (e.g., data CD instead of audio CD or CD-R/RW).

- **Skipping During Playback:**

- While the DASS provides protection, severe shocks or vibrations can still cause skipping. Try to keep the player stable.
- Ensure the CD is clean and free of scratches.
- Low battery power can sometimes affect anti-shock performance. Replace or recharge batteries.

- **No Sound:**

- Check headphone connection and ensure they are fully plugged in.
- Adjust the volume level.
- If using the car kit, ensure the car stereo is set to the correct input (cassette function) and volume is up.

- **Buttons Not Responding:**

- Check if the **HOLD** switch is in the ON position. Slide it to OFF to enable buttons.

Specifications

| | |
|-------------------------------|--|
| Model Number | CE-122 |
| Supported Disc Formats | Audio CD, CD-R/RW (MP3 compatible) |
| Anti-Shock Protection | 20 seconds (Digital Anti-Shock System) |
| Programmable Memory | 22 tracks |
| Power Source | 4 x AA batteries, AC adapter (4.5V DC), Car adapter (12V DC) |
| Connectivity | Auxiliary (Line Out), Dual Headphone Jacks |
| Dimensions (Approx.) | 11.1 x 7.8 x 3.2 inches (Package) |
| Weight (Approx.) | 1.5 pounds |

Warranty and Support

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact Audiovox customer service. Keep your proof of purchase for warranty claims.