

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Audiovox](#) /

› [Audiovox CE-145G Personal CD Player Instruction Manual](#)

## Audiovox CE145G

# Audiovox CE-145G Personal CD Player Instruction Manual

Model: CE-145G

## INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Audiovox CE-145G Personal CD Player. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

## PRODUCT FEATURES

- **40-Second Anti-Skip Protection:** Ensures continuous audio playback even during movement, utilizing a digital buffer.
- **Multi-Directional Anti-Roll Sensors:** Provides additional protection against playback interruption from various movements.
- **22-Track Programmable Memory:** Allows customization of CD playback order.
- **Bass Boost System:** Enhances low-frequency audio output.
- **3-Beam Laser Pickup:** Designed for accurate CD tracking and clear sound reproduction.
- **Multiple Playback Modes:** Includes random play and various repeat functions.
- **Hold Switch:** Prevents accidental button presses and program changes.
- **Auto Power-Off:** Conserves battery life by automatically shutting down the player when not in use.
- **Line-Out Jack:** For connecting to external audio systems or power adapters.
- **Built-in Rechargeable Circuitry:** Supports the use of rechargeable Ni-Cad batteries (not included).
- **Stereo Headphones:** Included for immediate listening.

## SETUP

### 1. Battery Installation

The Audiovox CE-145G operates on two (2) AA batteries (not included) or an optional AC/car adapter (not included) connected via the line-out jack. For rechargeable Ni-Cad batteries, the unit features built-in charging circuitry.

1. Locate the battery compartment on the underside of the CD player.
2. Slide the battery compartment cover open.
3. Insert two (2) AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Image: The Audiovox CE-145G Personal CD Player in translucent green, shown with included stereo headphones. This image illustrates the overall product design and the headphones that come with the unit.

## **2. Connecting Headphones**

Insert the stereo headphone plug into the headphone jack located on the side of the CD player.



Image: A close-up of the stereo headphones included with the Audiovox CE-145G CD player, showing the earcups and the 3.5mm audio jack.

## OPERATING INSTRUCTIONS

---

### 1. Basic CD Playback

1. Open the CD compartment lid by pressing the "OPEN" button or sliding the latch.
2. Place a CD onto the center spindle with the label side facing up.
3. Close the CD compartment lid firmly until it clicks.
4. Press the **PLAY/PAUSE** button to begin playback. The track number and elapsed time will display.
5. To pause playback, press **PLAY/PAUSE** again. Press it once more to resume.
6. To stop playback, press the **STOP** button.
7. To skip to the next track, press the **SKIP FORWARD** button (▶▶).
8. To return to the beginning of the current track or go to the previous track, press the **SKIP BACKWARD** button (◀◀).
9. To fast forward or rewind within a track, press and hold the **SKIP FORWARD** or **SKIP BACKWARD** button, respectively.



Image: The Audiovox CE-145G Personal CD Player with its translucent green lid open, revealing a compact disc placed inside the compartment.

## 2. Anti-Skip Protection (ESP)

The CE-145G features a 40-second Electronic Skip Protection (ESP) buffer. This system stores up to 40 seconds of audio data, allowing for uninterrupted playback even if the player experiences minor shocks or vibrations. This feature is automatically active during playback.

## 3. Programmable Memory (22 Tracks)

You can program up to 22 tracks to play in a specific order.

1. In STOP mode, press the **PROGRAM** button. The display will show "PROG" and "01".
2. Use the **SKIP FORWARD** or **SKIP BACKWARD** buttons to select the desired first track.
3. Press **PROGRAM** again to confirm the track. The display will show "02".
4. Repeat steps 2 and 3 to add up to 22 tracks to your program.
5. After programming the last track, press **PLAY/PAUSE** to start playback of your programmed sequence.
6. To clear the program, press the **STOP** button twice.

## 4. Bass Boost

To enhance the bass frequencies, locate the **BASS BOOST** switch (or button) on the unit and activate it. Deactivate it to return to standard audio output.

## 5. Hold Function

The **HOLD** switch prevents accidental button presses. Slide the **HOLD** switch to the "ON" position to disable all control buttons. Slide it to "OFF" to re-enable controls.

## 6. Auto Power-Off

To conserve battery life, the CD player will automatically power off after a period of inactivity (e.g., when a CD finishes playing and no buttons are pressed). To restart, press the **PLAY/PAUSE** button.

## MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the player with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the CD Lens:** If playback issues occur due to a dirty lens, use a specialized CD lens cleaning kit. Do not touch the lens directly.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store them in their cases when not in use.
- **Battery Care:** Remove batteries if the unit will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly inserted; AC adapter not connected or faulty.	Replace batteries, check polarity, or ensure AC adapter is properly connected and functional.
CD skips or stops	CD is dirty or scratched; unit is subjected to excessive shock; lens is dirty.	Clean CD, use a different CD, avoid strong impacts, clean the CD lens.
No sound	Headphones not connected properly; volume too low; headphones faulty.	Ensure headphones are fully plugged in, increase volume, try different headphones.
Buttons unresponsive	HOLD switch is engaged.	Slide the HOLD switch to the "OFF" position.

## SPECIFICATIONS

- **Model:** CE-145G
- **Brand:** Audiovox
- **Anti-Skip Protection:** 40 seconds (Electronic Skip Protection)
- **Programmable Tracks:** 22
- **Power Source:** 2 x AA batteries (not included) or optional AC/car adapter
- **Audio Output:** 3.5mm headphone jack, Line-out jack
- **Dimensions (Approx.):** 11.8 x 8.3 x 2.6 inches (Package Dimensions)
- **Weight (Approx.):** 1.35 pounds (Item Weight)
- **Color:** Translucent Green

## WARRANTY AND SUPPORT

The Audiovox CE-145G Personal CD Player is backed by a **90-day parts-and-labor warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support or warranty service, please refer to the contact information provided with your product packaging or visit the official Audiovox website.

© 2023 Audiovox. All rights reserved.