

Manuals.plus /

- › Sony /
- › Sony PlayStation 2 Console User Manual

Sony 711719700005

Sony PlayStation 2 Console Instruction Manual

Model: 711719700005

INTRODUCTION

The Sony PlayStation 2 (PS2) Console is a groundbreaking gaming system that offers an immersive entertainment experience. Equipped with a 128-bit Emotion Engine processor, it delivers enhanced clarity and impressive graphics. Beyond gaming, the PS2 also functions as a CD/DVD player, providing versatile media playback. This console is backward compatible, allowing you to enjoy a vast library of both PlayStation 2 and original PlayStation games.



Figure 1: The Sony PlayStation 2 Console shown with its accompanying DualShock 2 controller. This image highlights the console's sleek black design and the classic controller.

SETUP

Follow these steps to properly set up your PlayStation 2 Console:

1. **Unpack Contents:** Carefully remove the PlayStation 2 console, DualShock 2 controller, AC power cable, and AV cable from the packaging.
2. **Connect AV Cable:** Plug the multi-out connector of the AV cable into the AV Multi Out port on the back of the PS2 console. Connect the yellow (video), white (left audio), and red (right audio) RCA connectors to the corresponding input jacks on your television.
3. **Connect Power Cable:** Insert the AC power cable into the AC IN connector on the back of the PS2 console. Plug the other end into a standard electrical outlet.
4. **Connect Controller:** Plug the DualShock 2 controller into one of the controller ports on the front of the console.
5. **Position Console:** Place the console on a stable, flat surface with adequate ventilation. Ensure no vents are blocked. The console can be positioned horizontally or vertically.



Figure 2: The Sony PlayStation 2 Console displayed in a vertical orientation, alongside its essential accessories including the DualShock 2 controller, AV cable, and power cable. This illustrates the complete package for initial setup.

OPERATING INSTRUCTIONS

Once your console is set up, follow these instructions to begin using it:

1. **Power On:** Press the POWER button located on the front of the console. The indicator light will turn green.

2. **Insert Disc:** Open the disc tray by pressing the EJECT button. Place a PlayStation 2 or original PlayStation game disc (or a CD/DVD movie) onto the tray with the label side facing up. Close the disc tray by pressing EJECT again.
3. **Start Game/Movie:** The console will automatically detect the disc and begin loading. If it does not, navigate to the 'Browser' option on the main menu and select the disc icon.
4. **Using the Controller:** The DualShock 2 controller features analog sticks for precise movement, directional buttons, action buttons (Triangle, Circle, X, Square), shoulder buttons (L1, L2, R1, R2), and the START/SELECT buttons.
5. **Saving Game Data:** Game progress is typically saved to a PlayStation 2 Memory Card (sold separately or included with some bundles) inserted into the memory card slots on the front of the console.
6. **Power Off:** To turn off the console, press the POWER button again. The indicator light will turn red.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your PlayStation 2 Console:

- **Cleaning the Console:** Use a soft, dry cloth to wipe down the exterior of the console. Avoid using liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Clean discs with a soft, lint-free cloth, wiping from the center outwards. Store discs in their cases when not in use.
- **Ventilation:** Ensure the console's ventilation openings are clear of dust and obstructions. Do not place the console on carpet or in enclosed spaces that restrict airflow.
- **Power Supply:** Always use the original AC power cable provided with the console. Disconnect the power cable from the wall outlet when the console will not be used for an extended period.

TROUBLESHOOTING

If you encounter issues with your PlayStation 2 Console, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Console does not power on.	Power cable not connected; power outlet issue.	Ensure power cable is securely connected to console and outlet. Try a different outlet.
No video or audio output.	AV cable not connected correctly; incorrect TV input.	Check AV cable connections to both console and TV. Select the correct input/source on your TV.
Disc not reading or game freezing.	Dirty or scratched disc; laser lens issue.	Clean the disc thoroughly. Try another disc to confirm. If problem persists, the laser lens may require professional cleaning or service.
Controller not responding.	Controller not plugged in; faulty controller.	Ensure controller is firmly plugged into the port. Try a different controller port or another controller if available.

SPECIFICATIONS

- **Model Number:** 711719700005
- **Processor:** 128-bit Emotion Engine

- **Disc Compatibility:** PlayStation 2 DVD-ROM, PlayStation CD-ROM, Audio CD, DVD Video
- **Dimensions (Approx.):** 20.2 x 12.6 x 12.4 inches
- **Weight (Approx.):** 5.54 pounds
- **Included Accessories:** PlayStation 2 System, 1 DualShock 2 Controller, AC Cable, AV Cable
- **Color:** Black
- **Date First Available:** August 6, 2012

WARRANTY AND SUPPORT

For information regarding product warranty, repairs, or technical support, please refer to the official Sony support website or contact Sony customer service directly. Keep your proof of purchase for warranty claims.

For additional resources and product information, visit the Sony Store on Amazon.