



[Manuals.plus](#) /

› [THQ](#) /

› [THQ WWF No Mercy Nintendo 64 Game Instruction Manual](#)

THQ WWF No Mercy

THQ WWF No Mercy Nintendo 64 Game Instruction Manual

Model: WWF No Mercy

[Introduction](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. INTRODUCTION

WWF No Mercy is a professional wrestling video game developed by AKI Corporation and published by THQ for the Nintendo 64 console. Released in 2000, it features a roster of over 65 WWF superstars, various match types, and a comprehensive season mode. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your game.

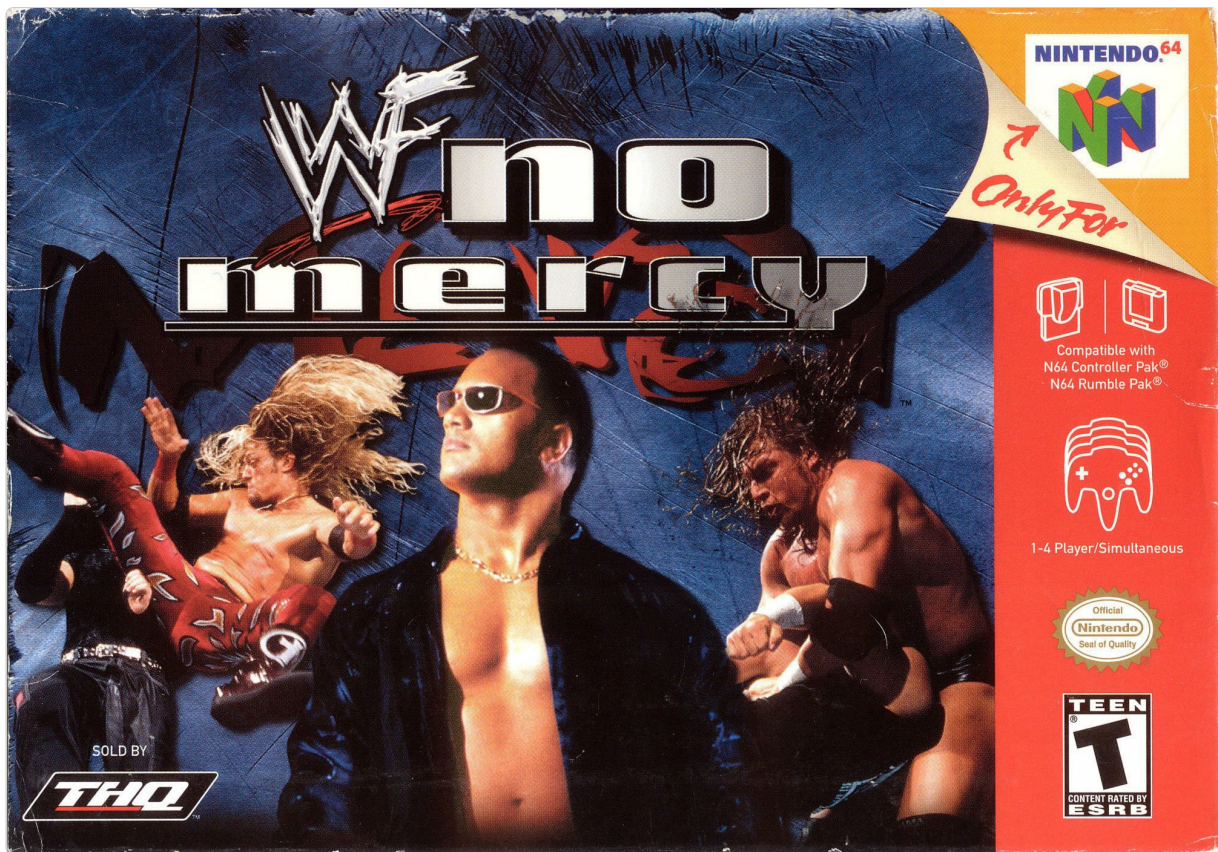


Figure 1.1: WWF No Mercy Nintendo 64 game cartridge and box art. This image displays the packaging and game cartridge for WWF No Mercy on the Nintendo 64 console.

2. SETUP

To begin playing WWF No Mercy, follow these steps to properly set up the game with your Nintendo 64 console.

1. **Connect the Nintendo 64 Console:** Ensure your Nintendo 64 console is properly connected to your television or display unit and powered on. Refer to your Nintendo 64 console's instruction manual for detailed connection procedures if needed.
2. **Insert the Game Cartridge:** Gently insert the WWF No Mercy game cartridge into the cartridge slot on top of the Nintendo 64 console. Ensure the label faces forward (towards the front of the console). Push down firmly until the cartridge is securely seated.
3. **Connect Controllers:** Plug your Nintendo 64 controllers into the controller ports on the front of the console. Up to four players can participate simultaneously.
4. **Power On:** Turn on your television and select the correct input channel. Then, press the POWER button on the Nintendo 64 console. The game's title screen should appear.
5. **Memory Pak (Optional):** If you wish to save game progress, ensure a Nintendo 64 Controller Pak (Memory Pak) is inserted into the slot on your controller.

3. OPERATING INSTRUCTIONS

This section outlines the basic controls and available game modes within WWF No Mercy.

3.1 Basic Controls (Nintendo 64 Controller)

- **Analog Stick:** Character movement.

- **D-Pad:** Menu navigation, alternate movement.
- **A Button:** Grapple, confirm selections.
- **B Button:** Strike (punch/kick), cancel selections.
- **C Buttons (Up, Down, Left, Right):** Taunts, specific actions (e.g., climbing turnbuckle), camera control.
- **Z Button:** Run, pin opponent.
- **L/R Buttons:** Reversals, blocking.
- **START Button:** Pause game, access in-game menu.

Note: Specific moves and combinations are detailed within the game's tutorial or move list.

3.2 Game Modes

WWF No Mercy offers a variety of game modes to engage players:

- **Exhibition:** Play single matches with customizable rules. Match types include:
 - Singles Match
 - Tag Team Match
 - Handicap Match
 - Cage Match
 - Hardcore Match
 - Ladder Match
 - Royal Rumble
 - King of the Ring
- **Championship Mode (Season Mode):** Compete through a series of matches to win various WWF championships. Storylines can branch based on match outcomes.
- **Create-A-Wrestler (CAW):** Design and customize your own unique wrestler with a wide array of appearance options, move sets, and entrance animations.
- **SmackDown Mall:** Earn points through gameplay to unlock additional wrestlers, costumes, arenas, and moves for your created wrestlers.

4. MAINTENANCE

Proper care of your WWF No Mercy game cartridge will ensure its longevity and reliable performance.

- **Handling:** Always hold the cartridge by its plastic casing. Avoid touching the gold connector pins at the bottom of the cartridge.
- **Cleaning:** If the game fails to start, the connector pins may be dirty. Use a cotton swab lightly dampened with isopropyl alcohol to gently clean the gold pins. Allow to dry completely before reinserting into the console. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store the cartridge in its original case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, dust, and moisture.
- **Insertion/Removal:** Always power off the Nintendo 64 console before inserting or removing the game cartridge.

5. TROUBLESHOOTING

If you encounter issues while playing WWF No Mercy, refer to the following common problems and their

solutions.

- **Game Does Not Start / Black Screen:**

- Ensure the cartridge is fully and correctly inserted into the Nintendo 64 console.
- Power off the console, remove the cartridge, clean the gold connector pins (as described in Maintenance), and reinsert it.
- Verify your Nintendo 64 console is functioning correctly with other games.

- **Save Data Issues / Progress Not Saving:**

- WWF No Mercy saves directly to the game cartridge, not a Controller Pak. Some versions of the game cartridge are known to have internal save battery issues or manufacturing defects that prevent saving.
- Ensure the game cartridge is authentic and not a reproduction, as reproductions may have unreliable save functionality.
- If the game is an original cartridge and experiencing save issues, the internal save battery may need replacement by a qualified technician. This is a common issue with older cartridge-based games.

- **Controller Input Not Responding:**

- Ensure the controller is securely plugged into the console.
- Test the controller with another game or another controller port.

6. SPECIFICATIONS

Product Title	WWF: No Mercy
Brand	THQ
Model	WWF No Mercy
Platform	Nintendo 64
ASIN	B00004WLMA
UPC	785138301198
Release Date	November 13, 2000
Language	English
Rated	Everyone
Item Weight	0.8 ounces
Product Dimensions	8 x 4 x 10 inches

7. WARRANTY & SUPPORT

As WWF No Mercy is a retro video game released in 2000, the original manufacturer's warranty from THQ is no longer applicable. Direct product support from the original developer (AKI Corporation) or publisher (THQ) is generally unavailable.

For any issues related to your purchase, such as defects or non-functionality, please refer to the return and exchange policies of the retailer or individual seller from whom you acquired the game.

Community forums and online resources dedicated to retro gaming may offer additional troubleshooting

tips and advice for common issues with Nintendo 64 games.

8. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for embedding in this manual.

This instruction manual is for informational purposes only. All product names, logos, and brands are property of their respective owners.