

[Manuals.plus](#) /

> [Epson](#) /

> Epson Black Laser Toner Cartridge S051016 User Manual

Epson S051016

Epson Black Laser Toner Cartridge S051016 User Manual

Model: S051016 | Brand: Epson

PRODUCT OVERVIEW

This manual provides essential information for the installation, operation, and maintenance of your Epson S051016 Black Laser Toner Cartridge. This cartridge is designed for use with compatible Epson laser printers, offering a high yield of approximately 6000 pages.



Figure 1: Epson S051016 Black Laser Toner Cartridge. This image shows the black toner cartridge, a rectangular unit with a textured top surface and a cylindrical opening at one end, designed for insertion into a laser printer.

SETUP AND INSTALLATION

Follow these steps to properly install the toner cartridge into your compatible Epson laser printer.

- Unpack the Cartridge:** Carefully remove the new toner cartridge from its packaging. Avoid touching the drum or electrical contacts.
- Prepare the Printer:** Ensure your printer is turned off. Open the front cover or access panel of your printer to expose the toner compartment. Refer to your printer's specific manual for exact instructions on opening the compartment.
- Remove Old Cartridge (if applicable):** If replacing an old cartridge, gently pull it straight out of the printer. Place the used cartridge in a protective bag for recycling.
- Shake the New Cartridge:** Gently shake the new toner cartridge horizontally 5-6 times to distribute the toner evenly inside.
- Remove Protective Seals:** Remove any orange or black protective seals, tapes, or covers from the new cartridge. Be careful not to damage the drum.

6. **Insert New Cartridge:** Align the new toner cartridge with the guides inside the printer and push it firmly until it clicks into place.
7. **Close Printer Cover:** Close the printer's front cover or access panel.
8. **Power On:** Turn on your printer. The printer will typically perform a self-test or calibration after a new cartridge is installed.

For detailed printer-specific instructions, consult your printer's user manual.

OPERATING INSTRUCTIONS

Once the toner cartridge is installed, your printer is ready for operation. The toner cartridge itself does not require direct user operation beyond installation.

- **Printing:** Send print jobs from your computer as usual. The printer will automatically use the installed toner.
- **Toner Level Monitoring:** Monitor the toner level through your printer's software utility or control panel. Most printers provide warnings when toner levels are low.
- **Print Quality Issues:** If print quality degrades (e.g., faded prints, streaks), it may indicate low toner or a need for printer maintenance.

MAINTENANCE

Proper handling and storage ensure the longevity and performance of your toner cartridge.

- **Storage:** Store unused toner cartridges in their original sealed packaging in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Always handle the cartridge by its casing. Avoid touching the photosensitive drum, as oils from your skin can damage it and affect print quality.
- **Recycling:** When the cartridge is empty, recycle it according to local regulations. Many manufacturers and retailers offer recycling programs for used toner cartridges.

TROUBLESHOOTING

Common issues related to toner cartridges and their potential solutions.

- **"Toner Low" or "Replace Toner" Message:**
 - Ensure the cartridge is correctly installed and seated firmly.
 - If the message persists after installing a new cartridge, restart the printer.
 - If print quality is still acceptable, you may be able to continue printing until quality degrades.
- **Faded or Light Prints:**
 - The toner level may be low. Try gently shaking the cartridge to redistribute remaining toner.
 - Check printer settings to ensure "Toner Save Mode" is not enabled.
 - Ensure the cartridge is genuine Epson or a compatible high-quality replacement.
- **Streaks or Spots on Prints:**
 - This could indicate a damaged drum unit. Inspect the drum for scratches or debris.
 - Clean the printer's internal components as per your printer's manual.
 - If the issue persists, the cartridge may be faulty and require replacement.

- **Cartridge Not Recognized:**
 - Remove and reinsert the cartridge, ensuring it clicks into place.
 - Clean the electrical contacts on the cartridge and in the printer with a lint-free cloth.
 - Ensure you are using the correct cartridge model (S051016) for your printer.

SPECIFICATIONS

Feature	Detail
Model Number	S051016
Brand	Epson
Color	Black
Technology	Laser
Page Yield	Approx. 6000 pages
Compatible Devices	Epson EPL-5600/N1200 series printers
Product Dimensions	35 x 14 x 22 cm (13.8 x 5.5 x 8.7 inches)
Product Weight	1.38 kg (3.04 lbs)
Part Number	S051016
UPC	010343810334

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Epson website or contact Epson customer service directly. Warranty terms may vary by region and retailer.

Epson Official Website: www.epson.com

Customer Support: Refer to the support section on the official website for contact numbers and service options in your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00004Z890>

More documents and user manuals: <https://manuals.plus/>