

[Manuals.plus](#) /

> [GPX](#) /

> GPX C3941 Portable CD Player User Manual

GPX C3941

GPX C3941 Portable CD Player

User Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your GPX C3941 Portable CD Player. Designed for on-the-go listening, this player features advanced anti-skip protection and versatile playback options. Please read this manual thoroughly before using your device to ensure proper function and longevity.



Image: The GPX C3941 Portable CD Player, a silver-colored compact disc player, is shown alongside a pair of black and gray over-ear headphones. The CD player features a circular disc cover with "ESP" and "GPX" branding, and control buttons are visible on the side. The headphones are connected via a wire.

WHAT'S IN THE BOX

- GPX C3941 Portable CD Player
- Superflex Digital Stereo Headphones
- User's Manual (this document)

SETUP

1. Battery Installation

The GPX C3941 requires 2 AA batteries for operation. Ensure batteries are inserted with correct polarity as indicated inside the battery compartment.

1. Locate the battery compartment on the underside of the player.
2. Open the battery compartment cover.
3. Insert 2 AA batteries, matching the (+) and (-) terminals with the markings.
4. Close the battery compartment cover securely.

2. Connecting Headphones

Connect the included superflex digital stereo headphones to the headphone jack on the side of the player. Ensure the plug is fully inserted.

OPERATING INSTRUCTIONS

Basic Playback

1. Open the CD compartment by gently pressing the OPEN button.
2. Place a CD (audio CD or CD-R/RW) onto the spindle with the label side facing up.
3. Close the CD compartment firmly until it clicks.
4. Press the **PLAY/PAUSE** button to begin playback. The track number and elapsed time will display on the LCD screen.
5. To pause playback, press **PLAY/PAUSE** again. Press it once more to resume.
6. To stop playback, press the **STOP** button.
7. To skip to the next track, press the **SKIP/SEARCH FORWARD** button (>>).
8. To skip to the previous track, press the **SKIP/SEARCH BACKWARD** button (<<).
9. To fast forward within a track, press and hold **SKIP/SEARCH FORWARD**.
10. To fast rewind within a track, press and hold **SKIP/SEARCH BACKWARD**.
11. Adjust volume using the **VOLUME** control dial.

Anti-Skip Protection (ESP)

The GPX C3941 features a 40-second electronic anti-shock protection system. This system stores audio data in a buffer, allowing for continuous playback even during minor shocks or vibrations. This feature is particularly useful for portable use.

Programmable Memory

You can program up to 20 tracks to play in a specific order.

1. In STOP mode, press the **PROGRAM** button. "PROG" will flash on the LCD.
2. Use the **SKIP/SEARCH** buttons to select your desired first track.
3. Press **PROGRAM** again to confirm the selection.
4. Repeat steps 2 and 3 for up to 20 tracks.
5. Press **PLAY/PAUSE** to start playback of the programmed sequence.

Bass Boost System

Activate the Bass Boost System (BBS) by sliding the **BASS BOOST** switch to the ON position. This enhances low-frequency audio output, providing a richer bass sound, especially beneficial when using headphones.

Repeat, Random, and Intro Scan Modes

Press the **MODE** button repeatedly during playback to cycle through different playback modes:

- **REPEAT 1:** Repeats the current track.
- **REPEAT ALL:** Repeats all tracks on the disc.
- **RANDOM:** Plays tracks in a random order.
- **INTRO:** Plays the first 10 seconds of each track.
- **NORMAL:** Resumes normal playback.

MAINTENANCE

- Keep the unit dry. If it gets wet, wipe it dry immediately.
- Use only a soft, dry cloth to clean the exterior of the player.
- Do not use abrasive cleaners or solvents.
- Avoid exposing the player to extreme temperatures, direct sunlight, or high humidity.
- Handle CDs by their edges to prevent scratches and fingerprints.
- When not in use for extended periods, remove batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Batteries are dead or incorrectly inserted.	Replace batteries or check polarity.
No sound.	Headphones not connected properly; Volume too low; CD not playing.	Ensure headphones are fully plugged in; Increase volume; Press PLAY.
CD skips or stops.	CD is dirty or scratched; Excessive vibration; Anti-skip protection overwhelmed.	Clean or replace CD; Place player on a stable surface; Reduce movement.
Disc error message.	No disc inserted; Disc inserted upside down; Unreadable disc format.	Insert disc; Insert disc label side up; Use audio CD or CD-R/RW.

SPECIFICATIONS

Model: C3941

Power Source: 2 x AA Batteries (not included)

Disc Compatibility: Audio CD, CD-R/RW

Anti-Skip Protection: 40 seconds

Display: 6-digit LCD

Programmable Memory: 20 tracks

Audio Features: Bass Boost System (BBS)

Dimensions: 6.25 x 5.75 x 2 inches (approx.)

Weight: 14.4 ounces (approx.)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official GPX website. Keep your proof of purchase for warranty

claims.

© 2024 GPX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000059MYJ>

More documents and user manuals: <https://manuals.plus/>