

[Manuals.plus](#) /

> [Toastermaster](#) /

> Toastermaster 1185 Bread and Butter Maker Instruction Manual

Toastermaster 1185

Toastermaster 1185 Bread and Butter Maker Instruction Manual

Model: 1185

1. INTRODUCTION

Thank you for purchasing the Toastermaster 1185 Bread and Butter Maker. This appliance is designed to simplify the process of making fresh bread and butter at home. Please read this manual thoroughly before operating your new bread maker to ensure safe and efficient use. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PACKAGE CONTENTS

Please check the contents of your package to ensure all items are present and in good condition:

- Toastmaster 1185 Bread and Butter Maker unit
- Removable bread pan
- Kneading paddle
- Measuring cup
- Measuring spoon
- Instruction Manual (this document)

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories.
2. **Initial Cleaning:** Wipe the exterior of the bread maker with a damp cloth. Wash the bread pan, kneading paddle, measuring cup, and spoon in warm, soapy water. Rinse thoroughly and dry all parts completely before first use.
3. **Placement:** Place the bread maker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the appliance.
4. **First Use (Burn-off):** It is recommended to run the bread maker empty on the "Bake" cycle for about 10 minutes during its first use. This will burn off any manufacturing oils and odors. Ensure the area is well-ventilated.



Figure 1: The Toastmaster 1185 Bread and Butter Maker. This image shows the compact design of the appliance, suitable for kitchen countertops.

5. OPERATING INSTRUCTIONS

5.1. Controls Overview

The control panel typically includes buttons for MENU, CRUST COLOR, TIMER, and START/STOP. Refer to the diagram on your unit for exact button placement.

5.2. Basic Bread Making Steps

1. **Insert Kneading Paddle:** Place the kneading paddle onto the shaft inside the bread pan.
2. **Add Ingredients:** Add ingredients to the bread pan in the order specified by your recipe (typically liquids first, then dry

ingredients, with yeast last).

3. **Place Pan in Unit:** Insert the bread pan into the bread maker and turn it clockwise until it locks into place. Close the lid.
4. **Plug In:** Plug the power cord into a grounded electrical outlet. The display will show the default program.
5. **Select Program:** Press the **MENU** button repeatedly to cycle through the 10 available programs:
 - Basic
 - French
 - Whole Wheat
 - Sweet
 - Ultra Fast
 - Dough
 - Jam
 - Bake
 - Sandwich
 - Butter (for making butter)
 - Breadstick (exclusive feature)

The "Butter" and "Breadstick" programs are specialized cycles for their respective functions.

6. **Select Crust Color:** Press the **CRUST COLOR** button to choose between Light, Medium, or Dark crust settings.
7. **Set Delay Timer (Optional):** If you wish to delay the start of the baking process, press the **TIMER** buttons (+ or -) to adjust the delay time. The delay time includes the baking time.
8. **Start Baking:** Press the **START/STOP** button once to begin the selected program. The indicator light will illuminate.
9. **Keep Warm Feature:** After the baking cycle is complete, the bread maker will automatically enter a "Keep Warm" cycle for up to 60 minutes.
10. **Remove Bread:** Once the cycle is complete and the "Keep Warm" period ends, unplug the appliance. Using oven mitts, carefully remove the bread pan. Invert the pan and shake gently to release the bread. If the kneading paddle remains in the bread, remove it carefully with a non-metallic utensil after the bread has cooled slightly.

6. CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity of your Toastmaster 1185 Bread and Butter Maker.

- **Cleaning the Bread Pan and Kneading Paddle:** After each use, remove the bread pan and kneading paddle. Fill the pan with warm, soapy water and let it soak for 10-15 minutes to loosen any stuck-on dough. Use a soft sponge or cloth to clean. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating. Rinse thoroughly and dry completely.
- **Cleaning the Exterior:** Wipe the exterior of the bread maker with a dry cloth. Do not use harsh chemicals or abrasive cleaners. Never immerse the main unit in water or any other liquid.
- **Cleaning the Lid and Viewing Window:** Wipe the lid and viewing window with a damp cloth. For stubborn stains, use a mild detergent.
- **Storage:** Ensure the appliance is clean, dry, and completely cooled before storing. Store it in a cool, dry place.

Product Care Instructions: Wipe with Dry Cloth.

7. TROUBLESHOOTING

If you encounter issues with your bread maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bread does not rise.	Yeast is old or inactive; too much salt; not enough sugar; water too hot or cold.	Check yeast expiration date. Reduce salt. Increase sugar. Use water at recommended temperature (around 105-115°F / 40-46°C).
Bread is too dense or heavy.	Too much flour; not enough liquid; incorrect program selected.	Measure ingredients accurately. Ensure correct liquid-to-flour ratio. Select appropriate program for the recipe.
Bread collapses during baking.	Too much liquid; too much yeast; high humidity.	Reduce liquid slightly. Reduce yeast amount. Adjust recipe for high humidity conditions.
Kneading paddle stuck in bread.	Common occurrence.	Allow bread to cool slightly, then carefully remove the paddle with a non-metallic utensil.
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection. Verify power to the outlet. Try a different outlet.

8. SPECIFICATIONS

- **Model Number:** 1185
- **Brand:** Toastmaster
- **Color:** Beige
- **Item Weight:** 17 Pounds
- **Dimensions:** Approximately 14 by 11 by 15 inches
- **Number of Programs:** 10 (including Basic, Dough, Butter, Breadstick)
- **UPC/GTIN:** 048109307194

9. WARRANTY AND SUPPORT

This Toastmaster 1185 Bread and Butter Maker comes with a **3-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or replacement parts, please contact Toastmaster Customer Service. Please have your model number and proof of purchase available when contacting support.

Contact information for Toastmaster can typically be found on their official website or on the product packaging.

