

KRUPS 229-45

KRUPS 229-45 Aroma Control 10-Cup Coffeemaker User Manual

Model: 229-45

Brand: KRUPS

INTRODUCTION

Welcome to the user manual for your new KRUPS 229-45 Aroma Control 10-Cup Coffeemaker. This appliance is designed to deliver rich, full-flavored coffee, keeping it warm for hours in its insulated thermal carafe. Please read this manual thoroughly before first use to ensure proper operation, safety, and maintenance of your coffeemaker.



Image: Front view of the KRUPS 229-45 Aroma Control 10-Cup Coffeemaker with its thermal carafe.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffeemaker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

COMPONENTS

Familiarize yourself with the parts of your KRUPS coffeemaker:

1. Water Reservoir with Water Level Indicator
2. Lid for Water Reservoir
3. Shower Head
4. Filter Holder (Swing-out)
5. Thermal Carafe with Lid
6. Control Panel (Programmable Clock/Timer, On/Off Switch)
7. Power Cord
8. Water Filter System (optional, for chlorine and mineral removal)



Image: Side view of the KRUPS 229-45 Coffeemaker showing its approximate dimensions: 14.5 inches high, 9.75 inches wide, and 7.5 inches deep.

SETUP

- 1. Unpacking:** Carefully remove all packaging materials and dispose of them responsibly.
- 2. Initial Cleaning:** Before first use, wash the thermal carafe, its lid, and the filter holder in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffeemaker with a damp cloth.
- 3. First Brew Cycle (Cleaning):**
 - Fill the water reservoir with fresh, cold water up to the 10-cup mark.
 - Place the empty thermal carafe with its lid on the warming plate.
 - Do not add coffee grounds for this cycle.
 - Turn on the coffeemaker and allow it to complete a full brewing cycle.
 - Discard the hot water from the carafe. This process cleans the internal components and removes any manufacturing residues.

4. **Setting the Clock (Optional):** If your model includes a programmable clock, refer to the operating section for instructions on setting the time.

OPERATING INSTRUCTIONS

1. **Fill Water Reservoir:** Open the lid of the water reservoir and fill it with the desired amount of fresh, cold water. The water level indicator on the side will guide you. Close the lid securely.
2. **Add Coffee Grounds:** Swing out the filter holder. Place a standard basket-style paper filter or the reusable filter (if included) into the filter holder. Add the desired amount of ground coffee. A general guideline is one tablespoon of coffee per cup, but adjust to your taste. Swing the filter holder back into place until it clicks.
3. **Position Carafe:** Ensure the thermal carafe, with its lid properly attached, is placed firmly on the warming plate.
4. **Start Brewing:**
 - **Immediate Brew:** Press the ON/OFF switch to start the brewing process. The indicator light will illuminate.
 - **Programmable Brew (24-hour clock/timer):** Set the desired brew time using the programmable clock/timer. Refer to the specific buttons on your control panel for "Program" or "Timer" settings. Once set, activate the timer function. The coffeemaker will automatically start brewing at the programmed time.
5. **Brewing Process:** The coffeemaker will begin brewing. The unique Aroma Control system steeps the ground coffee for nearly 2 minutes at the beginning of the cycle to extract maximum flavor.
6. **Pause & Serve:** The drip-free pour spout allows you to remove the carafe for a quick pour during the brewing cycle (for up to 20 seconds) without drips. Replace the carafe promptly to avoid overflow.
7. **After Brewing:** Once the brewing cycle is complete, the coffeemaker will automatically shut off. For best results and to keep coffee hot for hours, remove the thermal carafe from the base immediately after brewing is finished. This seals the carafe and locks in heat and flavor.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffeemaker.

Daily Cleaning:

- Always unplug the coffeemaker before cleaning.
- Wash the thermal carafe, its lid, and the filter holder in warm, soapy water after each use. Rinse thoroughly and dry. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
- Wipe the exterior of the coffeemaker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the coffeemaker base, cord, or plug in water or any other liquid.

Descaling (Mineral Deposit Removal):

Mineral deposits (calcium) can build up in your coffeemaker over time, affecting its performance. Descaling regularly, depending on the hardness of your water and frequency of use (e.g., every 2-4 weeks).

1. Prepare a descaling solution: Mix 2-4 tablespoons of white vinegar with a full carafe of cold water, or use a commercial descaling agent designed for coffeemakers following its instructions.
2. Pour the solution into the water reservoir.
3. Place the empty thermal carafe with its lid on the warming plate.
4. Start a brewing cycle. Allow half of the solution to brew through, then turn off the coffeemaker and let it stand for 15-20 minutes to allow the solution to work.

5. Turn the coffeemaker back on and allow the remaining solution to brew through.
6. Discard the solution from the carafe.
7. Rinse Cycle: Fill the water reservoir with fresh, cold water and run at least two full brewing cycles with only water to rinse out any remaining descaling solution. Discard the water after each cycle.

TROUBLESHOOTING

If you encounter issues with your coffeemaker, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Coffeemaker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure plug is securely in a working outlet. Check circuit breaker.
Coffee does not brew.	No water in reservoir; carafe not properly placed; filter holder not closed.	Fill water reservoir. Ensure carafe is correctly positioned. Close filter holder securely.
Coffee overflows from filter holder.	Too much coffee grounds; filter not properly seated; carafe removed for too long; clogged shower head.	Reduce coffee amount. Ensure filter is correctly placed. Replace carafe quickly. Clean shower head.
Coffee tastes weak or bitter.	Incorrect coffee-to-water ratio; old coffee; mineral buildup.	Adjust coffee amount. Use fresh coffee. Descaling the coffeemaker.
Coffee is not hot enough.	Carafe not sealed after brewing; mineral buildup.	Remove carafe from base immediately after brewing to seal. Descaling the coffeemaker.

SPECIFICATIONS

- **Model:** KRUPS 229-45 Aroma Control
- **Capacity:** 10 Cups
- **Carafe Type:** Insulated Thermal Carafe (Stainless Steel)
- **Features:** Programmable 24-hour clock/timer, Aroma Control brewing system, Drip-free pour spout, Water filter system.
- **Dimensions (Approximate):** 14.5 inches (H) x 7.5 inches (W) x 9.75 inches (D)
- **Weight:** Approximately 5.6 pounds
- **Power:** Standard household electrical outlet (refer to product label for specific voltage/wattage)

WARRANTY AND SUPPORT

The KRUPS 229-45 Aroma Control 10-Cup Coffeemaker typically comes with a 1-year limited warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, service, or to inquire about replacement parts, please contact KRUPS customer service. Contact information can usually be found on the KRUPS official website or on the product packaging.

You may also find additional resources and FAQs on the official KRUPS website: www.krups.com

Documents - KRUPS – 229-45



[\[pdf\] Catalog](#)

202301 winter sales anatiposi cdn plaisio gr mms PlaisioGr Catalogues Pdfs |||
voucher - 20 Eurobank 70 , - , winter sales , . - - -70 resolutions . ; , 20 Eurobank, 04-05
06-07 08-09 10-13 14-17 18-21 22-23 smartphones tech gadgets desktops, laptops ...
lang:de score:10 filesize: 19.65 M page_count: 24 document date: 2023-01-17