

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Paramount](#) /
- › [Paramount Uncommon Valor DVD Instruction Manual](#)

## Paramount B00005ASGE

# Uncommon Valor DVD Instruction Manual

Model: B00005ASGE

## 1. INTRODUCTION

This instruction manual provides guidance for the Uncommon Valor DVD, Model B00005ASGE. Uncommon Valor is a film about a man's quest to find his son, who is listed as missing in action in Laos. This manual covers the basic setup, operation, maintenance, and troubleshooting for optimal viewing of the DVD.

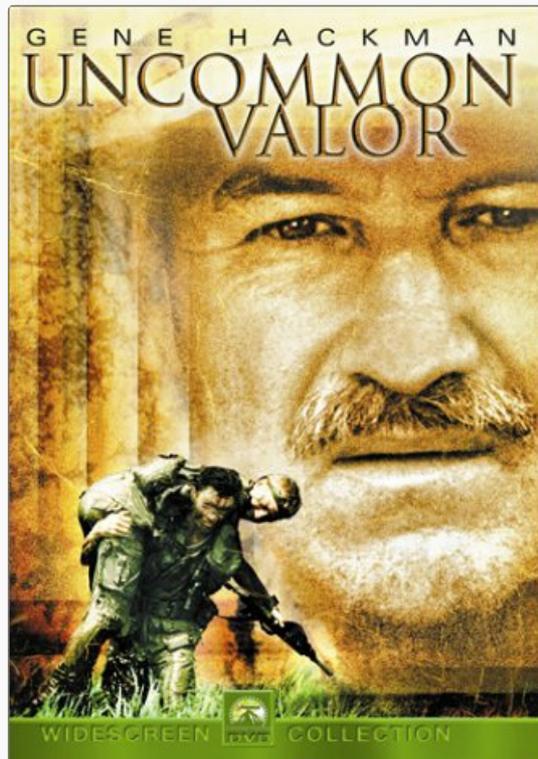


Image: Uncommon Valor DVD cover.

## 2. SETUP

Follow these steps to prepare your Uncommon Valor DVD for playback:

1. Unpack the DVD from its protective case.
2. Ensure your DVD player or computer's DVD drive is clean and functional. Refer to your player's manual for

cleaning instructions if necessary.

3. Gently insert the DVD into the disc tray or slot of your compatible DVD player or computer drive, with the label side facing up.
4. Close the disc tray or allow the player to load the disc automatically. The player should begin reading the disc.

### 3. OPERATING INSTRUCTIONS

---

Once the DVD is loaded, you can navigate and play the movie:

- **Main Menu:** After loading, the DVD's main menu should appear on your screen. Use your remote control's directional buttons to navigate through the menu options.
- **Play Movie:** Select 'Play Movie' or 'Start Film' from the main menu to begin watching.
- **Audio and Subtitles:** To change the audio language or enable subtitles, navigate to the 'Audio' or 'Subtitles' menu option. This DVD offers English and French audio, and English subtitles.
- **Playback Controls:** Use standard DVD player controls such as Play, Pause, Stop, Fast Forward, and Rewind to manage your viewing experience.
- **Scene Selection:** If available, the 'Scene Selection' menu allows you to jump to specific chapters of the film.

### 4. MAINTENANCE

---

Proper care of your DVD will ensure its longevity and optimal performance:

- **Storage:** Always store the DVD in its original case when not in use. This protects the disc from dust, scratches, and environmental damage.
- **Handling:** Handle the DVD by its edges or the center hole. Avoid touching the playing surface to prevent fingerprints and smudges.
- **Cleaning:** If the disc becomes dirty, gently wipe the playing surface with a soft, lint-free cloth (e.g., a microfiber cloth). Wipe from the center of the disc outwards in a straight line. Do not use abrasive materials, solvents, or harsh cleaning agents.
- **Environment:** Avoid exposing the DVD to direct sunlight, high humidity, or extreme temperatures, as these can cause warping or damage to the disc's data layer.

### 5. TROUBLESHOOTING

---

If you encounter issues while playing your DVD, consider the following solutions:

- **Disc Not Playing/Loading:**
  - Ensure the disc is inserted correctly (label side up).
  - Verify that your DVD player is compatible with standard DVD format.
  - Clean the disc for any smudges, dust, or debris.
  - Try playing another DVD to determine if the issue is with the player or the disc.
- **No Audio or Video:**
  - Check all audio and video cables connecting your DVD player to your TV or display. Ensure they are securely connected.
  - Confirm that your TV or display is set to the correct input source for your DVD player.
  - Adjust the volume on both your TV and DVD player.

- **Skipping or Freezing:**

- Clean the disc thoroughly as described in the Maintenance section.
- Inspect the disc for deep scratches or damage. Severely damaged discs may not play correctly.
- Try playing the disc in a different DVD player to isolate the problem.

- **Remote Control Issues:**

- Replace the batteries in your remote control.
- Ensure there are no obstructions between the remote and the DVD player's sensor.

## 6. SPECIFICATIONS

Attribute	Detail
MPAA Rating	R (Restricted)
Product Dimensions	7.3 x 5.2 x 0.5 inches; 3.2 ounces
Director	Ted Kotcheff
Media Format	Anamorphic, Closed-captioned, Color, Dolby, Multiple Formats, NTSC, Subtitled, Widescreen
Run Time	1 hour and 45 minutes
Release Date	May 22, 2001
Actors	Fred Ward, Gene Hackman, Patrick Swayze, Reb Brown, Robert Stack
Dubbed Languages	English, French
Subtitles	English
Audio Languages	English (Dolby Digital 2.0 Surround), English (Dolby Digital 5.1), French (Dolby Digital 2.0 Mono)
Studio	Paramount
Writers	Joe Gayton, Wings Hauser
Number of Discs	1
Color	Color

## 7. WARRANTY INFORMATION

This DVD is typically covered by a limited manufacturer's warranty against defects in materials and workmanship for a period of 90 days from the date of purchase. This warranty does not cover damage resulting from misuse, accident, unauthorized modification, or normal wear and tear. Please retain your proof of purchase for any warranty claims.

## 8. SUPPORT

For technical assistance or inquiries regarding this product, please refer to the support section of your DVD player manufacturer's website or contact the retailer where the DVD was purchased. For general information about the film, you may visit relevant movie databases or the official Paramount Pictures website.



© 2023 Paramount Pictures. All rights reserved. This manual is for informational purposes only.