

[manuals.plus](#) /› [Focus](#) /› [Focus 3 Audio CD User Manual](#)**Focus RB66.189**

Focus 3 Audio CD User Manual

Model: RB66.189

INTRODUCTION

This manual provides essential information for the proper use and care of your Focus 3 Audio CD. Focus 3 is a classic progressive rock album by the Dutch band Focus, originally released in 1972. This Audio CD version, model RB66.189, was released in 2001 by Red Bullet. Please read these instructions carefully to ensure optimal enjoyment and longevity of your product.

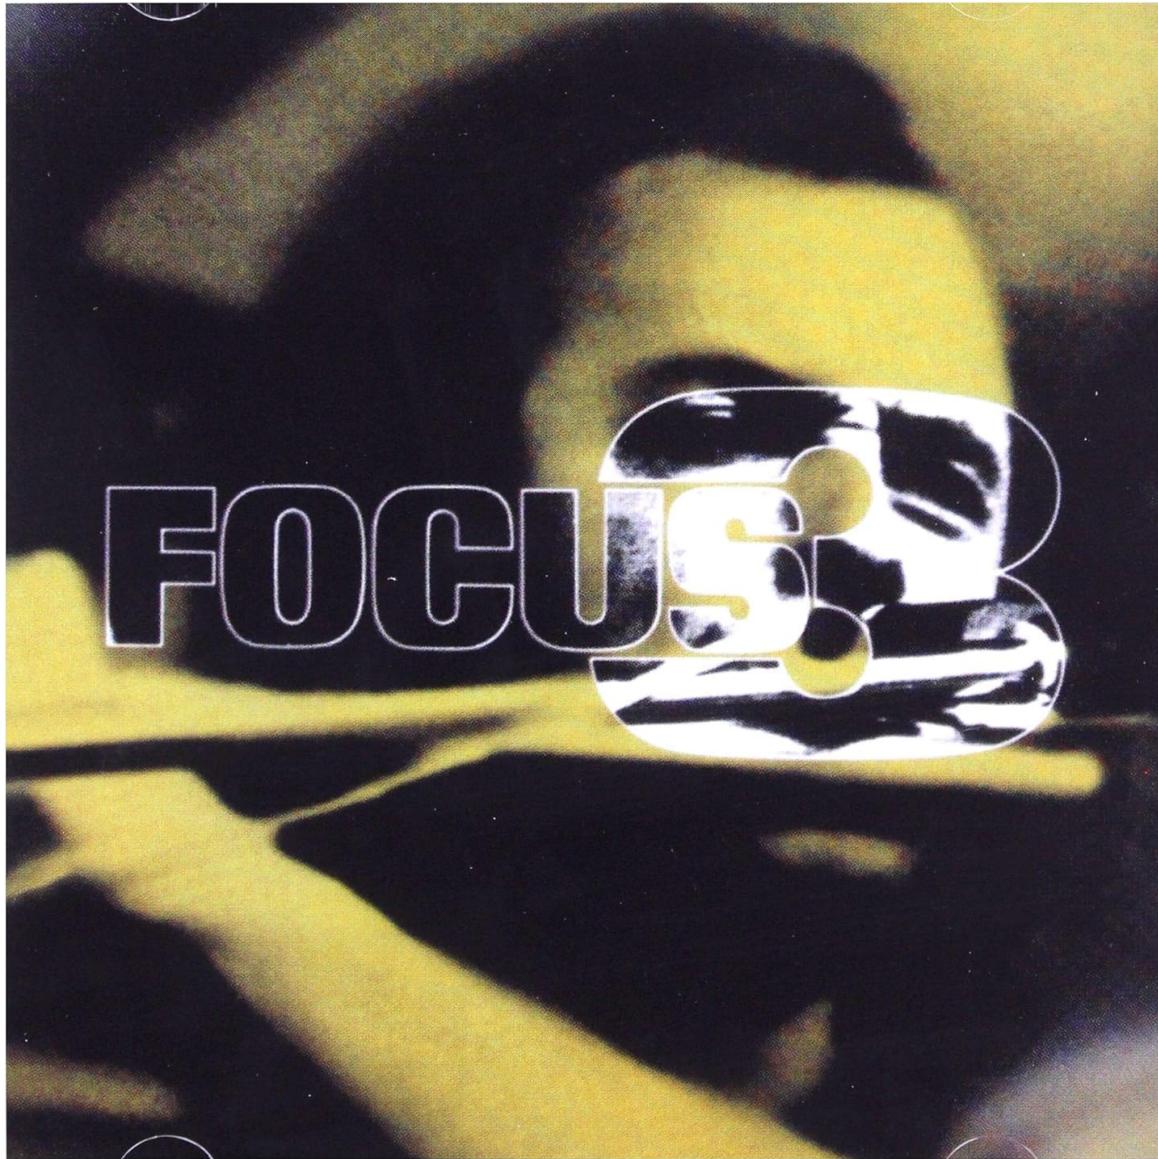


Image: Front cover of the Focus 3 Audio CD, featuring the album title and band name.

SETUP

To begin listening to your Focus 3 Audio CD, follow these simple steps:

1. **Unpack:** Carefully remove the Audio CD from its packaging.
2. **Inspect:** Check the disc surface for any visible scratches or damage. A clean, undamaged disc ensures optimal playback.
3. **Prepare Player:** Ensure your CD player (e.g., home stereo, car CD player, computer drive) is powered on and ready to accept a disc.
4. **Insert Disc:** Gently place the Audio CD into the disc tray or slot of your CD player with the label side facing up.
5. **Close Tray:** Close the disc tray or allow the player to automatically draw in the disc.

OPERATING INSTRUCTIONS

Once the CD is loaded, your player should recognize the disc and display track information. Use the controls on your CD player to manage playback.

- **Play/Pause:** Press the "Play" button to start playback. Press "Pause" to temporarily stop and "Play" again to resume.
- **Skip Tracks:** Use the "Next Track" or "Previous Track" buttons to navigate between songs.
- **Fast Forward/Rewind:** Hold down the "Next Track" or "Previous Track" buttons to fast forward or rewind within a track.
- **Stop:** Press the "Stop" button to end playback and return the disc to the beginning.
- **Eject:** Press the "Eject" button to remove the disc from the player.

Track List

The Focus 3 Audio CD features the following tracks:



Image: Back cover of the Focus 3 Audio CD, displaying the full tracklist and production credits.

1. Round Goes the Gossip (5:12)
2. Love Remembered (2:50)
3. Sylvia (3:31)
4. Carnival Fugue (6:09)
5. Focus III (6:05)
6. Answers? Questions! Questions? Answers! (13:48)
7. Elspeth of Nottingham (3:10)
8. Anonymous Two (26:24)

MAINTENANCE

Proper care will extend the life of your Audio CD and ensure consistent sound quality.

- **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth in a straight line from the center to the outer edge. Do not wipe in circular motions. Use a specialized CD cleaning solution if necessary, but avoid harsh chemicals.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the CD on rough surfaces or expose it to objects that could scratch the playback side.

TROUBLESHOOTING

If you encounter issues with your Focus 3 Audio CD, consider the following common solutions:

- **Disc Not Playing:**
 - Ensure the disc is inserted correctly (label side up).
 - Check if the disc is clean and free of smudges or scratches. Clean if necessary.
 - Verify that your CD player is functioning correctly by trying another Audio CD.
- **Skipping or Stuttering:**
 - Clean the disc thoroughly as described in the Maintenance section.
 - Check for deep scratches on the playback surface. Severe scratches may prevent proper playback.
 - Ensure the CD player is on a stable surface to prevent vibrations.
- **No Sound:**
 - Check the volume level on your CD player and connected audio system.
 - Ensure all audio cables are securely connected.
 - Verify that the correct input source is selected on your audio receiver.

SPECIFICATIONS

Product Title	Focus 3
Format	Audio CD
Artist	Focus
Model Number	RB66.189
ASIN	B00005B362
Number of Discs	1

Original Release Date	2001 (for this CD version)
Label	Red Bullet
Product Dimensions	4.96 x 5.55 x 0.51 inches
Item Weight	3.17 ounces
Language	English

WARRANTY INFORMATION

This Audio CD is manufactured to high-quality standards. In the unlikely event of a manufacturing defect, please refer to the retailer's return policy or contact the manufacturer, Red Bullet, for potential replacement within a reasonable period from the date of purchase. Please retain your proof of purchase for any warranty claims.

SUPPORT

For further assistance or inquiries regarding your Focus 3 Audio CD, please contact the manufacturer or your point of purchase. Manufacturer contact details may be found on the product packaging or through their official website.

Manufacturer: [Red Bullet](#)