



Manuals.plus /

› Midway Entertainment /

› Midway Entertainment Ultimate Mortal Kombat 3 Sega Genesis Instruction Manual

Midway Entertainment Ultimate Mortal Kombat 3

Midway Entertainment Ultimate Mortal Kombat 3 Sega Genesis Instruction Manual

Model: Ultimate Mortal Kombat 3

1. INTRODUCTION

This manual provides essential information for the operation and enjoyment of the Ultimate Mortal Kombat 3 game cartridge for the Sega Genesis console. Ultimate Mortal Kombat 3 expands upon its predecessors with an enhanced roster and new gameplay mechanics. This game is designed for 1 or 2 players.

Experience an expanded character lineup, including 23 immediately playable fighters and 2 bosses. Discover new combinations, finishing moves such as Fatalities, Brutalities, and Babalities. The game features dazzling graphics and sound, utilizing motion-capture technology for realistic battles.

2. SETUP

To begin playing Ultimate Mortal Kombat 3, follow these steps:

1. Ensure your Sega Genesis console is powered off.
2. Gently insert the Ultimate Mortal Kombat 3 game cartridge into the cartridge slot on your Sega Genesis console. Ensure it is fully seated.
3. Connect your Sega Genesis console to your television using the appropriate audio/video cables.
4. Connect one or two Sega Genesis controllers to the controller ports on the console.
5. Power on your television and select the correct input channel.
6. Power on your Sega Genesis console. The game's title screen should appear.

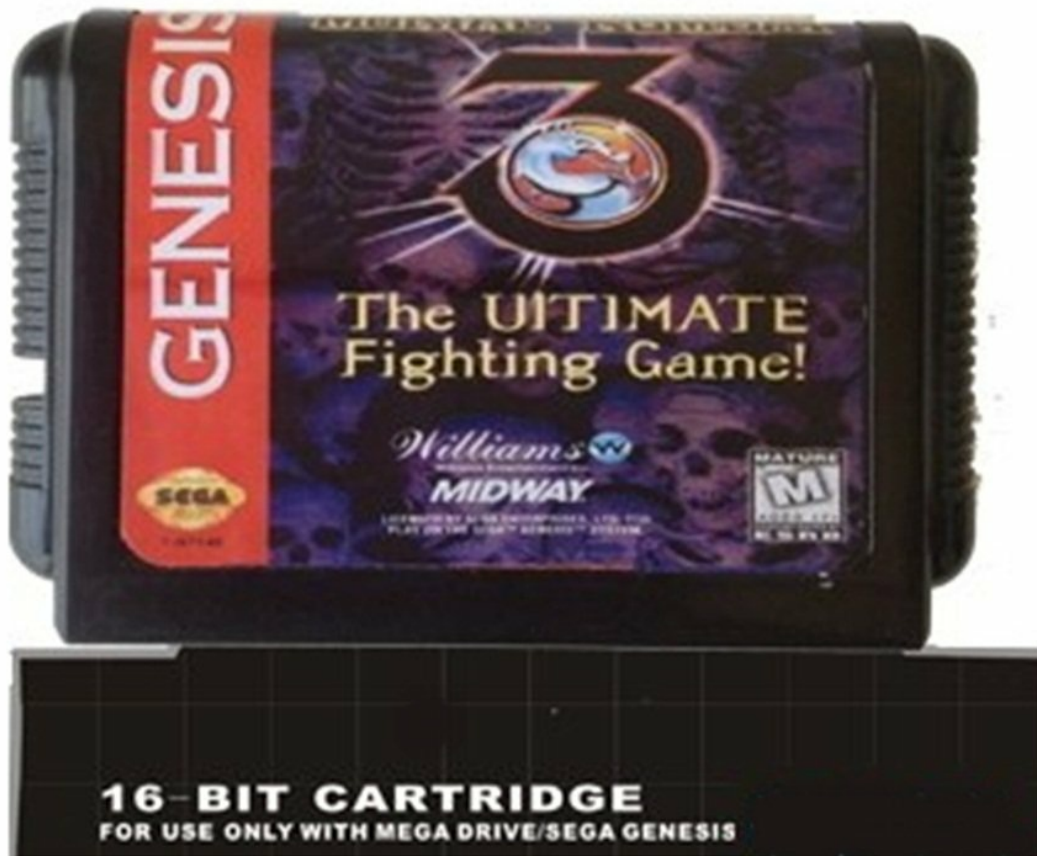


Image 1: The Ultimate Mortal Kombat 3 game cartridge for Sega Genesis. This image displays the black cartridge with the game's label, featuring the title "The Ultimate Fighting Game!" and the Mortal Kombat dragon logo, along with the Sega Genesis branding.

3. OPERATING INSTRUCTIONS

3.1 Basic Controls (6-Button Sega Genesis Controller)

- **Directional Pad (D-Pad):** Move character, navigate menus.
- **A Button:** Low Punch
- **B Button:** Block
- **C Button:** Low Kick
- **X Button:** High Punch
- **Y Button:** Run
- **Z Button:** High Kick
- **Start Button:** Pause game, confirm selections.

Specific character moves, combos, and finishing moves are detailed within the game's attract mode or can be discovered through gameplay.

3.2 Game Modes

- **One Player Mode:** Battle against computer-controlled opponents through a series of matches.
- **Two Player Mode:** Engage in head-to-head combat with another player.
- **2-on-2 Fighting:** Select two characters and switch between them during a match.
- **8-Fighter Tournament:** Participate in a tournament bracket with up to eight players or computer opponents.



Image 2: The title screen for Ultimate Mortal Kombat 3. The image displays the game's logo "Ultimate Mortal Kombat" with a stylized dragon emblem, set against a dark background with skull imagery.



Image 3: An in-game screenshot from Ultimate Mortal Kombat 3. Two characters, Rain and Kitana, are engaged in combat on a fiery stage with skull pillars. The game's user interface, including health bars and score, is visible at the top.

4. MAINTENANCE

Proper care of your game cartridge ensures longevity and reliable performance:

- **Storage:** Store the cartridge in its original case or a protective sleeve when not in use to prevent dust accumulation and physical damage.
- **Cleaning:** If the game fails to start, gently clean the gold connector pins on the bottom of the cartridge using a cotton swab lightly dampened with isopropyl alcohol. Allow to dry completely before reinserting into the console.
- **Handling:** Avoid touching the connector pins directly with your fingers, as oils and dirt can interfere with connectivity.
- **Environment:** Keep the cartridge away from extreme temperatures, direct sunlight, and moisture.

5. TROUBLESHOOTING

If you encounter issues while playing Ultimate Mortal Kombat 3, consider the following:

- **Game Not Booting:**
 - Ensure the cartridge is fully and correctly inserted into the Sega Genesis console.
 - Clean the cartridge's connector pins as described in the Maintenance section.
 - Verify that the console is properly connected to the power supply and television.
 - Test with another known working game cartridge to determine if the issue is with the console or the game.
- **Game Freezes During Play:**
 - This can sometimes occur with older cartridges. Try removing the cartridge, cleaning the pins, and

reinserting it.

- Ensure the console is well-ventilated and not overheating.
- Avoid sudden movements or jostling of the console or cartridge during gameplay.

- **Graphical or Audio Glitches:**

- Clean the cartridge pins.
- Check the audio/video cables for secure connections and damage.

6. SPECIFICATIONS

Feature	Detail
Product Title	Ultimate Mortal Kombat 3
Brand	Midway Entertainment
Format	Sega Genesis Game Cartridge
ASIN	B00005C4HM
UPC	643485967415, 031719209644
Players	1 or 2
Rated	Mature
Item Weight	1.6 ounces
Product Dimensions	5.91 x 1.97 x 8.27 inches
Date First Available	January 1, 2000

7. WARRANTY AND SUPPORT

As a legacy product, specific manufacturer warranties may no longer be applicable. For issues related to the game cartridge, please refer to the Troubleshooting section of this manual.

For general support regarding your Sega Genesis console, please consult the console's original instruction manual or manufacturer's support resources.