

REVLON RV473

Revlon RV473 Matte Chrome Full-Size Turbo Hair Dryer User Manual

Model: RV473

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Revlon RV473 Matte Chrome Full-Size Turbo Hair Dryer. Please read all instructions carefully before using the appliance and retain this manual for future reference. Proper use and maintenance will ensure optimal performance and extend the life of your hair dryer.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:
 - Always unplug this appliance immediately after using it.
 - Do not use while bathing or in a shower.
 - Do not place or store appliance where it can fall or be pulled into a tub or sink.
 - Do not place in or drop into water or other liquid.
 - If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.
 - Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.

3. PRODUCT OVERVIEW

The Revlon RV473 Matte Chrome Full-Size Turbo Hair Dryer is designed for efficient and versatile hair drying. It features a powerful 1875-watt motor and multiple heat/speed settings to suit various hair types and styling needs.



Figure 1: Revlon RV473 Matte Chrome Full-Size Turbo Hair Dryer. This image shows the hair dryer with its matte chrome finish and black handle, highlighting the nozzle and control switches.

Key Features:

- **1875 Watts:** Provides powerful airflow for fast drying.
- **Six Heat/Speed Combinations:** Offers versatile styling options for different hair types.
- **Cool Shot Button:** Releases a burst of cool air to set hairstyles.

- **Removable Lint Filter:** Easy to clean, helps protect the motor and extend dryer life.
- **Hanging Loop:** For convenient storage.
- **Matte Chrome Finish:** Stylish and durable design.

4. SETUP

1. **Unpack:** Carefully remove the hair dryer and all packaging materials from the box.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if the cord or plug is damaged.
3. **Placement:** Ensure the area where you will be using the dryer is dry and clear of obstructions.
4. **Plug In:** Insert the power plug into a standard 120V AC electrical outlet. Ensure your hands are dry before plugging in or unplugging the appliance.

5. OPERATING INSTRUCTIONS

Before styling, towel-dry hair to remove excess moisture. For best results, section hair before drying.

1. **Power On:** Plug the dryer into an electrical outlet. Slide the ON/OFF switch to the desired speed setting.
2. **Select Heat/Speed:** Use the heat and speed selector switches to choose your preferred combination.
 - *High Heat/Speed:* For fast drying of thick or coarse hair.
 - *Medium Heat/Speed:* For normal drying and styling.
 - *Low Heat/Speed:* For gentle drying or fine hair.
3. **Drying:** Direct the airflow towards your hair, moving the dryer continuously to prevent overheating any single section.
4. **Cool Shot:** Once hair is almost dry, press and hold the cool shot button to release a burst of cool air. This helps to set your style and add shine. Release the button to return to the selected heat setting.
5. **Power Off:** When finished, slide the ON/OFF switch to the "OFF" position and unplug the dryer from the outlet.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your hair dryer.

Cleaning the Lint Filter:

1. **Unplug:** Always ensure the hair dryer is unplugged and completely cool before cleaning.
2. **Remove Filter:** The rear filter cap is removable. Gently twist or pull to detach it (refer to product diagram if available for specific mechanism).
3. **Clean:** Use a soft brush or cloth to remove any accumulated lint, dust, or hair from the filter screen. You can also rinse the filter under running water if necessary, ensuring it is completely dry before reattaching.
4. **Reattach:** Securely reattach the filter cap to the hair dryer.
5. **Frequency:** Clean the filter regularly, especially if you notice a decrease in airflow or increased noise.

Storage:

When not in use, unplug the dryer. Allow it to cool and store it in a dry location. Do not wrap the cord around the dryer, as this can cause premature wear and breakage of the cord. Use the hanging loop for convenient storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dryer does not turn on.	Not plugged in; power outlet issue; internal fault.	Ensure plug is fully inserted. Test outlet with another appliance. If still not working, contact customer support.
Weak airflow or overheating.	Blocked air intake filter; motor obstruction.	Unplug and allow to cool. Clean the removable lint filter as described in the Maintenance section. Ensure air vents are clear.
Dryer suddenly stops during use.	Overheating protection activated.	Unplug the dryer and allow it to cool down for at least 10-15 minutes. Check and clean the air intake filter. Plug back in and try again.
Unusual noise or smell.	Internal issue; foreign object.	Immediately unplug the dryer. Do not use. Contact customer support.

8. SPECIFICATIONS

- **Model Number:** RV473
- **Wattage:** 1875 watts
- **Voltage:** 120 Volts (AC)
- **Power Source:** Corded Electric
- **Number of Heat/Speed Settings:** 6 combinations
- **Special Features:** Lightweight, Turbo, Cool Shot Button, Removable Lint Filter, Hanging Loop
- **Dimensions:** Approximately 3 x 11 x 9 inches
- **Item Weight:** 1.4 Pounds
- **Material Type:** Ceramic
- **Color:** Black (Matte Chrome finish)

9. WARRANTY AND CUSTOMER SUPPORT

This Revlon RV473 Hair Dryer comes with a **1-Year Limited Warranty** against defects in materials and workmanship from the date of purchase.

For warranty claims, technical assistance, or product inquiries, please contact Revlon Customer Support. Please have your model number (RV473) and proof of purchase available when contacting support. For more information, you may visit the official [REVLON Store on Amazon](#).