

Braun KSM2

Braun Aromatic Coffee Grinder KSM2 User Manual

Model: KSM2

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your Braun Aromatic Coffee Grinder KSM2. Please read these instructions thoroughly before first use and keep them for future reference.

IMPORTANT SAFETY INFORMATION

- Always ensure the lid is securely in place and locked down before operating the grinder. The unit is designed with a safety mechanism that prevents operation if the lid is not correctly positioned.
- Do not immerse the motor base in water or any other liquid. Clean only with a damp cloth.
- Unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Keep hands and utensils out of the grinding chamber during operation to prevent injury.
- This appliance is for household use only. Do not use outdoors.
- Do not operate the grinder with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

PRODUCT OVERVIEW

The Braun Aromatic Coffee Grinder KSM2 is designed for quick and efficient grinding of coffee beans. It features a powerful motor, durable stainless steel blades, and a transparent ribbed lid for optimal circulation and monitoring.

BRAUN

Aromatic

KSM 2

The convenient way to prepare better tasting, freshly ground coffee.
Capacity: 2.5 ozs. (for up to 12 cups of coffee).

La façon pratique de préparer du café fraîchement moulu encore plus savoureux. Capacité: 2,5 oz (jusqu'à 12 tasses de café).

La manera más cómoda de preparar café molido fresco de mejor sabor. Capacidad: 2.5 oz. (para hasta 12 tazas de café).



Ribbed lid design

Guides coffee beans into blades for evenly ground coffee.

Couvercle nervuré

Achemine les grains de café vers les lames pour assurer une mouture uniforme.

Diseño de tapadera acanalada

Guía los granos de café hacia las cuchillas para lograr café molido más homogéneamente.



Precision blade system

Precision stainless steel blade and 150W motor avoid overheating of grinds.

Lame de grande précision

Lame en inox de grande précision et moteur 150W pour éviter la surchauffe de la mouture.

Sistema de cuchillas de precisión

Las cuchillas de precisión de acero inoxidable y el motor de 150 watts evitan el sobrecalentamiento del molido.



Safety On/Off Switch

Grinding action will not start unless lid is secure.

Interrupteur marche-arrêt de sûreté

Le broyage ne commence que lorsque le couvercle est bien fixé.

Interruptor de seguridad encendido/apagado

La acción de molino no empezará a menos que esté asegurada la tapadera.



Distributed by:
Braun Inc.,
66 Broadway, Route 1
Lynnfield, MA 01940

Imported by/Importée par:
Braun Canada Ltd./Ltee.,
110 Mahteson Blvd W Suite 2000
Mississauga ON L5R 3T4



Made in Mexico
Fabriqué en Mexique



4 041

Figure 1: Braun Aromatic Coffee Grinder KSM2. This image shows the complete white coffee grinder with its transparent lid.

BRAUN

Aromatic

Coffee grinder
Moulin à café
Molino de café

#1
Best selling brand
Marque populaire
La marca de mayor venta



Precision blade
Lame de grande
précision
Cuchillas de precisión



Large capacity
Grande capacité
Gran capacidad



Cord storage
Range-cordon
Almacenamiento
de cordón

Figure 2: Product box illustrating key features such as ribbed lid design, precision blade system, and safety on/off switch.

Key Components:

- **Grinder Base:** Houses the motor and power cord.
- **Stainless Steel Blades:** Designed for efficient and even grinding.
- **Transparent Ribbed Lid:** Guides beans towards the blades for optimal circulation and allows visual monitoring of the grind consistency.
- **Safety Switch:** Integrated into the lid, ensuring the grinder only operates when the lid is properly secured.
- **Cord Storage:** Located on the base for convenient storage.

SETUP

1. **Unpack:** Carefully remove the coffee grinder and all packaging materials.
2. **Initial Cleaning:** Before first use, wipe the exterior of the grinder base with a damp cloth. Wash the transparent lid with warm, soapy water, rinse thoroughly, and dry completely. Refer to the 'Maintenance and Cleaning' section for detailed instructions.
3. **Placement:** Place the grinder on a stable, dry, and level surface, away from water sources and heat.
4. **Power Connection:** Unwind the power cord from the base storage and plug it into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. **Fill with Beans:** Remove the transparent lid. Add whole coffee beans to the grinding chamber. The grinder can process up to 2.5 ounces of coffee beans, sufficient for approximately 12 cups of coffee. Do not overfill.
2. **Secure the Lid:** Place the transparent lid firmly onto the grinder base. Ensure it is properly aligned and locked into position. The grinder will not operate if the lid is not securely closed due to its integrated safety switch.
3. **Grind:** Press down on the lid to activate the grinding mechanism. Hold the lid down for the desired duration. The transparent lid allows you to visually monitor the fineness of the grind.
4. **Achieving Desired Fineness:**
 - For a coarse grind (e.g., for French press), grind for a shorter duration.
 - For a medium grind (e.g., for drip coffee makers), grind for a moderate duration.
 - For a fine grind (e.g., for espresso), grind for a longer duration.

Release pressure on the lid to stop grinding.

5. **Emptying Grounds:** Once grinding is complete, unplug the grinder. Carefully remove the lid and pour the freshly ground coffee into your coffee maker or storage container.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee grinder.

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Clean the Lid:** The transparent lid can be washed by hand with warm, soapy water. Rinse thoroughly and dry completely before reattaching.
3. **Clean the Grinding Chamber:** Use a small brush (not included) or a dry cloth to remove any remaining coffee grounds from the grinding chamber and around the blades. Do not use water directly in the grinding chamber or immerse the motor base.

4. **Clean the Exterior:** Wipe the exterior of the grinder base with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. **Cord Storage:** After cleaning and drying, wrap the power cord around the designated storage area on the base for neat storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Lid not securely in place. Power cord not plugged in.	Ensure the transparent lid is firmly closed and locked. Check that the power cord is securely plugged into a working electrical outlet.
Uneven grind.	Too many beans in the chamber. Insufficient grinding time.	Do not overfill the grinding chamber; adhere to the 2.5 oz capacity. Increase grinding time slightly for a finer, more consistent result.
Grinder stops during operation.	Lid may have shifted. Overheating (unlikely for short grinding cycles).	Ensure the lid remains pressed down firmly. If the unit feels hot, unplug it and allow it to cool down before resuming use.

SPECIFICATIONS

- **Model Number:** KSM2
- **Brand:** Braun
- **Color:** White
- **Material:** Stainless Steel (blades)
- **Capacity:** Up to 2.5 ounces of coffee beans (approx. 12 cups of coffee)
- **Motor Power:** 150 Watts
- **Item Weight:** 1.5 Pounds
- **GTIN/UPC:** 069055804735

WARRANTY INFORMATION

This Braun Aromatic Coffee Grinder KSM2 comes with a **Limited, 1-Year Manufacturer's Warranty** against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims. This warranty does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

CUSTOMER SUPPORT

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Braun customer service. Refer to the official Braun website or product packaging for the most current contact information.

