

[Manuals.plus](#) /

› [Walt Disney Pictures](#) /

› Walt Disney Pictures Treasure Planet DVD Instruction Manual

Walt Disney Pictures DV28152

Walt Disney Pictures Treasure Planet DVD Instruction Manual

Model: DV28152

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Walt Disney Pictures *Treasure Planet* DVD. Please read these instructions carefully before operating the DVD to ensure optimal viewing experience and longevity of the product.

Treasure Planet is an animated science fiction adventure film released on April 29, 2003. It reimagines Robert Louis Stevenson's classic novel *Treasure Island* in a futuristic setting. The film features the voices of Joseph Gordon-Levitt, Brian Murray, Emma Thompson, David Hyde Pierce, and Martin Short, and was directed by Ron Clements and John Musker.

2. PRODUCT OVERVIEW



Figure 1: Front cover of the *Treasure Planet* DVD. The artwork depicts the main characters, including Jim Hawkins, Captain Amelia, and John Silver, against a

The *Treasure Planet* DVD contains the full-length feature film and may include bonus features depending on the specific edition. This DVD is formatted for NTSC regions.

3. SETUP

To begin watching your *Treasure Planet* DVD, follow these simple steps:

1. **Prepare your DVD Player:** Ensure your DVD player is connected to your television or display device and is powered on. Refer to your DVD player's manual for specific connection instructions.
2. **Insert the DVD:** Gently remove the *Treasure Planet* DVD from its case. Hold the disc by its edges to avoid touching the playback surface. Insert the disc into the DVD player's disc tray or slot, label side up.
3. **Close the Tray:** If your player has a disc tray, press the "Eject/Close" button to retract the tray.
4. **Automatic Playback:** Most DVD players will automatically begin playing the disc or display a main menu. If not, press the "Play" button on your DVD player or remote control.

4. OPERATING

Navigate the DVD using your DVD player's remote control.

- **Main Menu:** From the main menu, you can typically select "Play Movie," "Scene Selection," "Bonus Features," or "Setup/Languages."
- **Playback Controls:** Use the standard "Play," "Pause," "Stop," "Fast Forward," and "Rewind" buttons on your remote.
- **Scene Selection:** Access specific chapters or scenes of the film directly.
- **Language and Subtitles:** The DVD supports audio in English (Dolby Digital 5.1), French (Dolby Digital 1.0), and Spanish (Dolby Digital 5.1). Subtitle options may also be available. These settings can usually be adjusted from the main menu or during playback via the "Audio" or "Subtitle" button on your remote.
- **Bonus Features:** Explore additional content such as behind-the-scenes documentaries, deleted scenes, or games, if available on your edition.

5. MAINTENANCE

Proper care will extend the life of your DVD and ensure consistent playback quality.

- **Handling:** Always hold the DVD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the disc on rough surfaces or expose it to sharp objects.

6. TROUBLESHOOTING

If you encounter issues, try the following solutions:

Problem	Solution
Disc does not play or load.	• Ensure the disc is inserted correctly (label side up). • Check if the disc is clean and free of scratches or smudges. Clean if necessary. • Verify your DVD player is powered on and connected properly. • Confirm your DVD player supports NTSC format.
Picture or sound skips/freezes.	• Clean the disc thoroughly. • Check for visible damage (deep scratches or cracks) on the disc. • Try playing the disc in another DVD player to rule out player issues.
Cannot select desired language or subtitles.	• Access the DVD's main menu or use the "Audio" / "Subtitle" button on your remote during playback. • Ensure your DVD player's language settings are not overriding the disc's options.

7. SPECIFICATIONS

- **Product Title:** Treasure Planet
- **Brand:** Walt Disney Pictures
- **Model Number:** DV28152
- **Format:** DVD, NTSC
- **Aspect Ratio:** 1.66:1
- **Run Time:** 1 hour and 35 minutes
- **Release Date:** April 29, 2003
- **Audio Languages:** English (Dolby Digital 5.1), French (Dolby Digital 1.0), Spanish (Dolby Digital 5.1)
- **Number of Discs:** 1
- **Studio:** Sony Pictures Home Entertainment (Distributor)
- **Product Dimensions:** Approximately 0.7 x 7.5 x 5.4 inches (case dimensions)
- **Item Weight:** Approximately 2.72 ounces

8. WARRANTY AND SUPPORT

This DVD is manufactured to high-quality standards. In the unlikely event of a manufacturing defect, please refer to the return policy of your retailer. For general inquiries regarding Walt Disney Pictures products, please visit the official Disney website or contact their customer service department.

Please note that specific warranty details for media products like DVDs are typically covered by the retailer's return policy for defective items rather than a separate manufacturer's warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question