



[Manuals.plus](#) /

› [TOMY](#) /

› TOMY Screwball Scramble Game Instruction Manual

TOMY T7070

TOMY Screwball Scramble Game Instruction Manual

Model: T7070

1. INTRODUCTION

The TOMY Screwball Scramble is an interactive obstacle course game designed to challenge hand-eye coordination and quick thinking. Players race against the clock to guide a marble through a series of obstacles. This manual provides comprehensive instructions for setting up, operating, and maintaining your game.



Image 1.1: The TOMY Screwball Scramble game, showing the product packaging and the assembled game board with its various colorful obstacles.

Key Features:

- An obstacle board game - maneuver the ball through obstacles quickest.
- Encourages hand-eye coordination, quick reaction time, and logic.
- Full of interactive, visual excitement.
- Entire board controlled by turning knobs, pushing buttons, and sliding levers.
- Decorated with lively animal decals.

2. SAFETY INFORMATION

Please read all safety warnings before use. This product contains small parts which may present a choking hazard to children under 3 years of age. Adult supervision is recommended during play.

3. SETUP

Carefully unpack all components from the box. Refer to the included diagrams for precise placement of each obstacle. The game board is designed for intuitive assembly.

1. Place the main game board on a flat, stable surface.
2. Identify and attach the various obstacles:
 - **Tilting Walkway:** Secure the tilting walkway in its designated slot.
 - **Crane:** Assemble the crane mechanism and ensure it can swing freely.
 - **Parallel Bars:** Position the parallel bars for the marble to shimmy across.
 - **Table Maze:** Place the table maze section, ensuring it wobbles as intended.
 - Other interactive elements such as the scoop, catapult, and bell.
3. Ensure all movable parts are securely attached but can operate smoothly.



Image 3.1: A detailed view of the Screwball Scramble game board, highlighting the intricate obstacle mechanisms.

Connecting to Screwball Scramble 2 (Optional):

The original Screwball Scramble can be combined with Screwball Scramble 2 to create an extended obstacle course. Follow the instructions provided with Screwball Scramble 2 for seamless connection.



Image 3.2: Visual guide for combining the original game with its expansion for an enhanced play experience.

4. OPERATING INSTRUCTIONS

The objective of Screwball Scramble is to guide the metal marble through the entire obstacle course from start to finish, aiming to complete it in the fastest time possible.

How to Play:

1. Place the metal marble at the starting point of the course.
2. Use the various controls (knobs, buttons, levers) to manipulate the obstacles and move the marble forward.
 - **Knobs:** Turn knobs to tilt platforms or rotate mechanisms.
 - **Buttons:** Press buttons to activate catapults or release barriers.
 - **Levers:** Slide levers to move parts of the track or activate specific actions.
3. Navigate the marble through each obstacle in sequence. If the marble falls off the course, retrieve it and restart from the beginning of the current obstacle or the last checkpoint.
4. The game is completed when the marble successfully reaches the finish bell and rings it.
5. For competitive play, use a timer to record the time taken to complete the course. Challenge friends and family to beat your best time.



Image 4.1: A player engaging with the game, demonstrating the hands-on interaction required.

Official Product Video:

Your browser does not support the video tag.

Video 4.1: An official demonstration of the TOMY Screwball Scramble game in action, showcasing various obstacles and gameplay.

5. MAINTENANCE

- **Cleaning:** Wipe the game board and plastic components with a soft, damp cloth. Do not use abrasive cleaners or immerse the game in water.
- **Storage:** Store the game in its original box or a suitable container in a dry place away from direct sunlight and extreme temperatures. Ensure all small parts, especially the marbles, are kept together to prevent loss.
- **Inspection:** Periodically check all moving parts for wear and tear. Ensure no components are loose or damaged.



Image 5.1: The end of the course with the bell, illustrating the final objective of the game.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Marble gets stuck or falls off frequently.	Obstacles not properly aligned or activated. Game board not level.	Ensure all obstacles are correctly assembled and positioned. Verify the game board is on a flat surface. Practice precise control of the knobs and levers.
Timer mechanism not functioning.	Timer may be jammed or damaged.	Check for any obstructions in the timer mechanism. If damaged, contact customer support.
Missing game pieces.	Small parts can be easily misplaced.	Carefully check the play area and storage container. Replacement parts may be available from the manufacturer.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	13.3 x 10.5 x 4 inches
Item Weight	7 ounces
Model Number	T7070
Manufacturer Recommended Age	5 - 10 years
Language	English

Feature	Detail
Manufacturer	Tomy International (RC2)

8. WARRANTY AND SUPPORT

For warranty information, replacement parts, or customer support, please visit the official TOMY website or contact their customer service department. Keep your proof of purchase for any warranty claims.

You can find more information about TOMY products at: [TOMY Store on Amazon](#)