

[Manuals.plus](#) /

› [Proctor Silex](#) /

› Proctor Silex Power Electric Automatic Can Opener Instruction Manual

Proctor Silex 75224PS

Proctor Silex Power Electric Automatic Can Opener

Model: 75224PS

INTRODUCTION

This manual provides instructions for the safe and efficient operation, maintenance, and troubleshooting of your Proctor Silex Power Electric Automatic Can Opener. Designed for ease of use, this appliance features a built-in knife sharpener and convenient cord storage.



proctor|silex.®

Image: Front view of the Proctor Silex Power Electric Automatic Can Opener, showcasing its compact design and the can-opening mechanism.

Key Features:

- Efficiently opens various can sizes.
- Twist-off cutting lever for easy cleaning.
- Integrated knife sharpener.
- Automatic shutoff for hands-free operation.
- Built-in cord storage for a tidy countertop.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not immerse cord, plug, or can opener in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact manufacturer for examination, repair, or adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Do not open pressurized (aerosol) cans.
13. Do not open cans of flammable liquids such as lighter fluid.
14. Do not open cans with tapered or unusual rims.

SETUP

Before first use, wipe the exterior of the can opener with a damp cloth. Ensure the cutting lever is securely in place. Place the can opener on a stable, flat surface near an electrical outlet.

Cord Storage:

The appliance features integrated cord storage at its base to minimize countertop clutter. To store the cord, gently push it into the designated area at the back of the unit.



Cord storage

The cord neatly stores inside the can opener to reduce countertop clutter

Image: The base of the can opener with the power cord neatly tucked into its storage compartment, illustrating the cord storage feature.

OPERATING INSTRUCTIONS

Opening Cans:

1. Plug the can opener into a standard electrical outlet.
2. Lift the cutting lever.
3. Position the can so that the rim is under the guide wheel and the cutting blade is inside the rim.
4. Press down firmly on the cutting lever until the cutting blade pierces the can lid and the motor starts. The can opener will hold the can in place.
5. Allow the can opener to operate automatically until the can is fully opened. The motor will stop automatically once the can is open.
6. Lift the cutting lever to release the can. The magnet will hold the lid.
7. Carefully remove the can and dispose of the lid.

Automatic shutoff

Free hands for other kitchen tasks



Image: A can being positioned on the can opener, demonstrating the alignment process for efficient opening.

Opens cans of various sizes



Image: The can opener in action, with a can attached to the cutting mechanism, highlighting the automatic shutoff feature.

Easily align cans

To open cans the first time



Image: A collection of various sized cans, demonstrating the versatility of the can opener in accommodating different dimensions.

Using the Knife Sharpener:

The knife sharpener is located on the back of the can opener.

1. Hold the knife with the cutting edge facing up.
2. Insert the knife blade into the sharpening slot, ensuring the blade is centered.
3. With moderate downward pressure, draw the knife blade through the slot towards you. Repeat this motion several times, alternating sides if necessary, until the desired sharpness is achieved.
4. Always clean the knife blade thoroughly after sharpening to remove any metal particles.

Built-in knife sharpener

Keep all your kitchen knives sharp — no need for a separate tool



Image: The rear of the can opener showing a kitchen knife being sharpened using the integrated knife sharpener, emphasizing its convenience.

CARE AND CLEANING

Always unplug the can opener before cleaning. Do not immerse the can opener in water or any other liquid.

Cleaning the Cutting Lever:

1. To remove the cutting lever for cleaning, twist it counter-clockwise and pull it away from the unit.
2. Wash the cutting lever with warm, soapy water. Rinse thoroughly and dry completely before reattaching.
3. To reattach, align the lever with the slot and twist clockwise until it clicks securely into place.



Easy to clean

The washable cutting lever easily twists off

Image: The detachable cutting lever of the can opener, illustrating its design for easy removal and cleaning.

General Cleaning:

- Wipe the exterior of the can opener with a damp cloth.
- Do not use abrasive cleaners or scouring pads, as they may damage the surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Can opener does not operate.	Not plugged in; power outage; cutting lever not fully engaged.	Ensure unit is securely plugged into a working outlet. Check household fuse/circuit breaker. Press down firmly on the cutting lever until the motor starts.

Problem	Possible Cause	Solution
Can does not open completely or motor stops prematurely.	Can rim not properly aligned; dull blade; can is too large or has an unusual rim.	Re-position the can, ensuring the rim is under the guide wheel and the blade is inside the rim. Clean the cutting blade. This can opener is designed for standard household cans; some specialty cans may not be compatible.
Can falls off during operation.	Can not properly secured; unit is unstable.	Ensure the cutting lever is pressed down firmly to engage the can. Place the can opener on a stable, flat surface.
Knife sharpener not effective.	Incorrect technique; sharpener is worn.	Ensure proper angle and pressure when drawing the knife through the slot. If the sharpener is worn, consider replacing the unit or using an alternative sharpening method.

SPECIFICATIONS

Attribute	Detail
Model Number	75224PS
Brand	Proctor Silex
Color	White
Material	Plastic (Body), Stainless Steel (Blade)
Product Dimensions (W x H)	5.5" x 8.44"
Item Weight	4 ounces
Operation Mode	Automatic
UPC	022333752241, 756635711094, 722651258400

proctor|silex®

4.8"



7.9"

5"

Can Opener

Image: A diagram illustrating the dimensions of the can opener, providing precise measurements for height, width, and depth.

WARRANTY AND SUPPORT

Limited Warranty:

This Proctor Silex appliance is covered by a limited three-year warranty. For specific terms and conditions, please refer to the warranty card included with your product or visit the official Proctor Silex website.



Image: A graphic displaying the "Simply Better" slogan and a shield icon, signifying a "Limited Three Year Warranty" for Proctor Silex products.

Customer Support:

For product inquiries, technical assistance, or warranty claims, please visit the official Proctor Silex website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.

You can visit the Proctor Silex Store for more information: [Proctor Silex Store](#)