

[Manuals.plus](#) /

› [GE](#) /

› GENERAL ELECTRIC GE 29196ge1 Deluxe Slimline Corded Telephone with Caller ID - Instruction Manual

GE 29196ge1

GE 29196ge1 Deluxe Slimline Corded Telephone with Caller ID - Instruction Manual

Model: 29196ge1

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SETUP

This section guides you through the initial setup of your GE 29196ge1 corded telephone.

1.1 Package Contents

- GE 29196ge1 Corded Telephone Unit
- Handset
- Coiled Handset Cord
- Telephone Line Cord
- Instruction Manual (this document)

1.2 Connecting the Telephone

1. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the jack on the side of the telephone base marked with a handset icon.
2. **Connect the Telephone Line:** Plug one end of the telephone line cord into the jack on the back of the telephone base marked with a telephone line icon. Plug the other end into a standard telephone wall jack.



Image 1.2.1: Rear view of the GE 29196ge1 telephone showing the handset and telephone line connections. The coiled cord connects the handset to the left side of the base, and the straight line cord connects the base to the wall jack on the right.

Once connected, the telephone is ready for use. No external power adapter is required as the unit is line-powered.

2. OPERATION

This section details how to use your GE 29196ge1 telephone for daily communication.

2.1 Making and Receiving Calls

- **To Make a Call:** Lift the handset, wait for a dial tone, then dial the desired phone number using the keypad.
- **To Receive a Call:** When the phone rings, lift the handset to answer.
- **To End a Call:** Place the handset back into the cradle.

2.2 Caller ID Functionality

The GE 29196ge1 features a large 3-line display for Caller ID information. When a call comes in, the caller's name and number (if available and subscribed to Caller ID service) will appear on the display before you answer.

- **Viewing Call History:** Use the **UP** and **DOWN** arrow buttons (if present, or similar navigation buttons) to scroll through previous calls.
- **Deleting Entries:** Consult the on-screen prompts or specific buttons (e.g., **DELETE**) to remove call entries from the history.

2.3 Memory Dialing (12-Number Memory)

Your telephone can store up to 12 frequently called numbers for quick dialing.

1. To Store a Number:

- Press the **STORE** button.
- Dial the phone number you wish to save.
- Press the **STORE** button again.

- Press a memory location button (e.g., M1-M12, or a single digit 0-9 if applicable, or follow on-screen prompts).

2. To Dial a Stored Number:

- Lift the handset.
- Press the desired memory location button. The number will dial automatically.

2.4 Volume Control

- **Ringer Volume:** Adjust the ringer volume using the switch located on the side or bottom of the telephone base. Options typically include High, Low, or Off.
- **Handset Volume:** During a call, use the volume buttons on the side of the handset or base (if available) to adjust the listening volume.

3. MAINTENANCE

Proper care ensures the longevity and optimal performance of your telephone.

3.1 Cleaning

- Wipe the telephone's exterior with a soft, slightly damp cloth.
- Do not use abrasive cleaners, waxes, or solvents as they can damage the finish.
- Ensure the telephone is disconnected from the wall jack before cleaning.

3.2 General Care

- Avoid placing the telephone in direct sunlight or near heat sources.
- Keep the telephone away from excessive moisture or dust.
- Do not drop the telephone or subject it to strong impacts.

4. TROUBLESHOOTING

If you encounter issues with your telephone, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No dial tone	Telephone line cord is loose or disconnected.	Ensure the telephone line cord is securely plugged into both the telephone base and the wall jack.
No Caller ID display	Caller ID service not subscribed or active.	Contact your telephone service provider to confirm Caller ID service is active on your line.
Cannot hear caller / Caller cannot hear me	Handset cord is loose or damaged. Volume is too low.	Check handset cord connections. Adjust handset volume. Test with another phone if possible.
Phone does not ring	Ringer volume set to OFF.	Adjust the ringer volume switch on the telephone base to HIGH or LOW.

If the problem persists after trying these solutions, please contact customer support.

5. SPECIFICATIONS

Key technical specifications for the GE 29196ge1 Deluxe Slimline Corded Telephone.

- **Model:** 29196ge1
- **Type:** Corded Telephone
- **Power Source:** Corded Electric (Line Powered)
- **Dialer Type:** Single Keypad
- **Caller ID:** Yes
- **Display:** Large 3-line display
- **Memory:** 12-number memory
- **Dimensions (L x W x H):** 22.6 x 8.9 x 7.1 cm (8.9 x 3.5 x 2.8 inches)
- **GTIN/UPC:** 044319002027
- **ASIN:** B00005NGRE

6. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official GE product support website.

Keep your proof of purchase for warranty claims.

Manufacturer: General Electric

© 2023 General Electric. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00005NGRE>

More documents and user manuals: **<https://manuals.plus/>**