

KRUPS F0494210

KRUPS F0494210 Gold Tone Permanent Filter Instruction Manual

Model: F0494210

PRODUCT OVERVIEW

The KRUPS F0494210 Gold Tone Permanent Filter is a reusable coffee filter designed for use with compatible KRUPS coffee makers. This filter serves as an alternative to disposable paper filters, offering an eco-friendly and cost-effective solution for brewing coffee.

Key Features:

- Size 4 permanent coffee filter
- Compatible with most KRUPS coffee makers
- Money-saving, eliminates the need for paper coffee filters
- Eco-friendly design
- Easy-to-clean for repeated use

Compatible KRUPS Coffee Maker Models:

- 176
- 180
- 197
- 198
- 199
- 229
- FMC2
- 536
- 538



Image: KRUPS F0494210 Gold Tone Permanent Filter. This image shows the gold-tone mesh filter with a black plastic frame and a black handle, designed to fit into a coffee maker's filter basket.

INSTALLATION AND USE

Before beginning any installation or maintenance, always ensure your coffee maker is unplugged from the power outlet to prevent electrical hazards.

1. **Access the Filter Basket:** Lift the top lid of your KRUPS coffee maker to expose the filter basket area.
2. **Remove Old Filter (if applicable):** If an old filter (paper or permanent) is present, gently pull it upwards by its handle to remove it from the filter basket. Dispose of any used coffee grounds appropriately.
3. **Insert New Permanent Filter:** Place the KRUPS F0494210 Gold Tone Permanent Filter into the filter basket. Ensure the bottom of the filter is facing downwards and it sits securely within the basket. Gently push it down until it is fully seated.
4. **Add Coffee Grounds:** Add your desired amount of coffee grounds directly into the permanent filter.
5. **Close Lid:** Close the top lid of the coffee maker securely.

6. **Brew Coffee:** Plug in your coffee maker and proceed with your usual brewing cycle.

Your browser does not support the video tag.

Video: How to Install Your Replacement Krups Coffee Filter. This video demonstrates the step-by-step process of replacing an old coffee filter with a new one in a KRUPS coffee maker, including opening the lid, removing the old filter, inserting the new filter, and closing the lid.

MAINTENANCE

Regular cleaning of your permanent filter is essential for optimal performance and taste.

1. **After Each Use:** After brewing, remove the permanent filter from the coffee maker. Discard the used coffee grounds.
2. **Rinse Thoroughly:** Rinse the filter under running water to remove any remaining coffee grounds and residue.
3. **Deep Cleaning (Periodically):** For a more thorough cleaning, you can wash the filter with mild dish soap and warm water. Use a soft brush if necessary to gently scrub the mesh.
4. **Dry:** Allow the filter to air dry completely before its next use or storage.

TROUBLESHOOTING

If you encounter issues with your KRUPS F0494210 Gold Tone Permanent Filter, consider the following:

- **Fine Grounds in Coffee:** If you notice fine coffee grounds in your brewed coffee, ensure the filter is properly seated in the basket. Also, consider using a coarser grind of coffee, as very fine grinds can sometimes pass through permanent filters.
- **Filter Not Fitting Correctly:** Verify that the filter is the correct size (Size 4) and compatible with your specific KRUPS coffee maker model. Ensure no obstructions are preventing it from seating properly.
- **Slow Drip/Clogging:** A slow drip can indicate a clogged filter. Perform a thorough cleaning as described in the Maintenance section. Mineral buildup from water can also contribute to clogging; consider descaling your coffee maker regularly.

SPECIFICATIONS

Brand	KRUPS
Model Number	F0494210 (also listed as 10942119678)
Material	Gold tone mesh, Plastic frame
Shape	Basket
Number of Pieces	1
Product Dimensions	5 x 5 x 4 inches
Item Weight	2.4 ounces
UPC	798527185675, 885727199974, 010942119678, 700953605092

