

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Waterpik](#) /

> [Waterpik Pik Pocket Tips \(PP-70E\) Instruction Manual for Models WP-60, WP-65, WP-70, WP-72, WP-75](#)

## Waterpik PP-70E

# Waterpik Pik Pocket Tips (PP-70E) Instruction Manual

For Models WP-60, WP-65, WP-70, WP-72, WP-75

## INTRODUCTION

The Waterpik Pik Pocket Tip (model PP-70E) is a specialized accessory designed for targeted cleaning of periodontal pockets and furcations. This soft rubber tip facilitates the gentle, low-pressure delivery of therapeutic rinses below the gumline, an area often difficult to reach with traditional brushing and flossing. It is clinically proven to access up to 90% of a 6mm pocket, contributing to improved oral hygiene.

## PRODUCT FEATURES

- **Genuine Waterpik Pik Pocket Replacement Tips (PP-70E):** Ensures compatibility and performance with specified Waterpik models.
- **Targeted Cleaning:** Designed for gentle, low-pressure rinsing below the gumline.
- **Soft Rubber Tip:** Provides comfortable and precise cleaning.
- **Color-Coded:** Tips are color-coded for easy differentiation among multiple users.





Image: Two Waterpik Pik Pocket Tips, featuring a grey and a blue base for user differentiation.

## COMPATIBILITY

These Pik Pocket Tips (PP-70E) are compatible with most Waterpik countertop water flossers, specifically models:

- Waterpik WP-60
- Waterpik WP-65

- Waterpik WP-70
- Waterpik WP-72
- Waterpik WP-75

**Note:** These tips are **not** compatible with Waterpik Sidekick, Sonic-Fusion, Whitening, and Classic models.

## SAFETY INFORMATION

---

- For oral use only.
- Do not share tips between users to maintain hygiene.
- Replace tips every 3 months for optimal performance and hygiene.
- Discontinue use if discomfort or irritation occurs and consult a dental professional.
- Keep out of reach of children.

## INSTALLATION INSTRUCTIONS

---

1. Ensure your Waterpik water flosser unit is powered off and unplugged from the electrical outlet.
2. If a tip is currently installed, press the tip eject button (if available on your model) or gently pull the existing tip straight up from the handle to remove it.
3. Insert the new Pik Pocket Tip into the handle until it clicks into place. Ensure it is seated firmly.
4. Before first use, it is recommended to flush the unit by running water through it with the new tip installed.

## OPERATING INSTRUCTIONS

---

1. Fill the reservoir of your Waterpik unit with water or a therapeutic rinse as recommended by your dental professional.
2. With the unit powered off, set the water pressure to the lowest setting.
3. Lean over the sink and place the soft rubber tip gently below the gumline, positioning it at a 45-degree angle to the tooth surface.
4. Turn on the unit. Allow the water to flow gently into the periodontal pocket.
5. Glide the tip slowly along the gumline, pausing briefly between teeth to ensure thorough cleaning.
6. Increase pressure gradually if desired, ensuring comfort and avoiding excessive force.
7. After use, turn off the unit and remove the tip.



**NÃO ABRA MÃO DE UMA  
LIMPEZA PROFUNDA  
SUBSTITUA-A A CADA 6 MESES.**

Image: Illustration of the Pik Pocket Tip in use, demonstrating its function for cleaning below the gumline.

## **MAINTENANCE AND REPLACEMENT**

For optimal performance and hygiene, it is recommended to replace your Waterpik Pik Pocket Tips every **3 months**. Regular replacement ensures the soft rubber tip remains effective and hygienic for targeted cleaning.

## **TROUBLESHOOTING**

### **Low Water Flow from Tip**

If you experience significantly reduced water flow from your Pik Pocket Tip, consider the following:

- **Check for Blockage:** Inspect the tip for any visible debris or mineral deposits that might be obstructing the water path.
- **Proper Installation:** Ensure the tip is fully and correctly seated in the flosser handle. A loose connection can affect water pressure.
- **Unit Pressure Setting:** Verify that the pressure setting on your Waterpik unit is not set too low.

Gradually increase it to a comfortable level.

- **Tip Age:** If the tip is older than 3 months, internal wear or blockages may occur. Replace with a new tip.

## PRODUCT SPECIFICATIONS

Specification	Detail
Brand	Waterpik
Model Number (Tips)	PP-70E
Item Model Number (Manufacturer)	0073950313759
Product Dimensions	6.69 x 3.15 x 4.72 inches (packaging)
Item Weight	10.58 ounces (packaging)
Unit Count	2 Count
Special Feature	Portable (refers to the water flosser unit, not the tips themselves)
Manufacturer	Water Pik, Inc.

## SUPPORT INFORMATION

For further assistance, product registration, or to view additional Waterpik accessories, please visit the official Waterpik website or contact their customer support. Specific warranty details for replacement tips may vary; refer to your original Waterpik water flosser manual or the Waterpik website for comprehensive warranty information.