

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Paramount](#) /

› [Paramount Prophecy: The Monster Movie DVD Instruction Manual](#)

Paramount B00005RDAI

Prophecy: The Monster Movie DVD Instruction Manual

Model: B00005RDAI

INTRODUCTION

This instruction manual provides essential information for the proper use and care of your Prophecy: The Monster Movie DVD. Please read this manual thoroughly before playback to ensure optimal viewing experience and disc longevity.

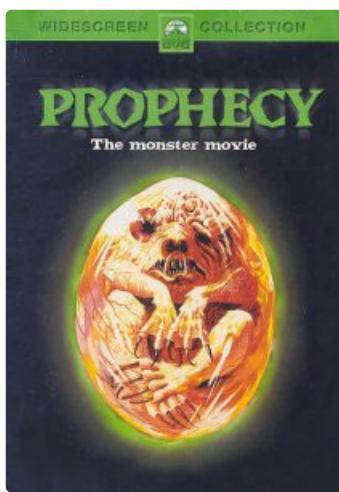


Image: Front cover of the Prophecy: The Monster Movie DVD. The cover features the movie title and main artwork.

SETUP

To begin watching your DVD, follow these steps:

- Unpack the DVD:** Carefully remove the DVD disc from its packaging. Avoid touching the playback surface of the disc.
- Prepare your DVD Player:** Ensure your DVD player is connected to your television or display device and powered on. Refer to your DVD player's manual for specific connection instructions.
- Insert the Disc:** Open the disc tray of your DVD player. Hold the DVD by its edges and gently place it into the disc tray with the label side facing up. Close the disc tray.
- Select Input:** On your television or display device, select the correct input source (e.g., HDMI 1, AV) that corresponds to your DVD player connection.

OPERATING INSTRUCTIONS

Once the DVD is inserted and your player is ready, the movie should begin playing automatically or display a main menu.

- Main Menu Navigation:** Use the arrow keys on your DVD player remote control to navigate through menu options such as "Play Movie," "Scene Selection," "Audio Options," and "Subtitles." Press the "Enter" or "OK" button to select an option.
- Playing the Movie:** Select "Play Movie" from the main menu to start the film from the beginning.
- Scene Selection:** If available, use "Scene Selection" to jump to specific chapters or scenes within the movie.
- Audio Options:** The DVD supports English (Dolby Digital 2.0 Stereo) and French (Dolby Digital 2.0 Mono) audio. Select your preferred language from the audio menu.
- Subtitles:** English subtitles are available. Activate or deactivate them from the subtitle menu.
- Playback Controls:** Use standard remote control buttons for playback functions: Play, Pause, Stop, Fast Forward, Rewind, Skip Chapter.

MAINTENANCE AND CARE

Proper care ensures the longevity and optimal performance of your DVD.

- Handling:** Always hold the DVD by its outer edges or by the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.
- Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive cleaners, solvents, or harsh chemicals. A specialized DVD cleaning kit can be used for stubborn smudges.
- Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity. Keep discs flat and avoid bending them.
- Avoid Labels/Stickers:** Do not apply labels, stickers, or write on the playback surface of the disc, as this can unbalance the disc and damage your player.

TROUBLESHOOTING

If you encounter issues during playback, consider the following common solutions:

| Problem | Solution |
|---------------------------------------|--|
| Disc does not play or load. | Ensure the disc is inserted correctly (label side up). Check for dirt or scratches on the disc surface and clean if necessary. Verify your DVD player is functioning correctly with other discs. |
| No audio during playback. | Check your TV and DVD player volume settings. Ensure the correct audio track is selected from the DVD menu. Verify audio cables are securely connected. |
| Poor video quality or freezing. | Clean the disc thoroughly. Ensure the disc is not severely scratched or damaged. Check video cable connections between the DVD player and TV. |
| Subtitles not appearing or incorrect. | Access the subtitle menu on the DVD and select the desired subtitle track (English). Ensure subtitles are enabled on your DVD player settings if applicable. |

SPECIFICATIONS

Key technical details for the Prophecy: The Monster Movie DVD:

- **ASIN:** B00005RDA1
- **Aspect Ratio:** 2.35:1
- **MPAA Rating:** PG (Parental Guidance Suggested)
- **Product Dimensions:** 0.7 x 7.5 x 5.4 inches; 2.72 ounces
- **Director:** John Frankenheimer
- **Media Format:** Anamorphic, Closed-captioned, Color, DVD, NTSC, Subtitled, Widescreen
- **Run Time:** 1 hour and 42 minutes
- **Release Date:** January 8, 2002
- **Actors:** Armand Assante, Richard Dysart, Robert Foxworth, Talia Shire, Victoria Racimo
- **Dubbed Languages:** English
- **Subtitles:** English
- **Audio Languages:** English (Dolby Digital 2.0 Stereo), French (Dolby Digital 2.0 Mono)
- **Studio:** Paramount
- **Writers:** David Seltzer
- **Number of Discs:** 1

WARRANTY INFORMATION

Specific warranty information for this DVD product is not provided in the available data. Please refer to the retailer's return policy or contact the publisher, Paramount, for details regarding product defects or returns.

SUPPORT

For further assistance or inquiries regarding the Prophecy: The Monster Movie DVD, please contact the retailer from whom the product was purchased. No specific manufacturer support contact information is available for this media product.

OFFICIAL PRODUCT VIDEOS

No official product videos are available in the provided data for this DVD.