

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Bosch](#) /

› Bosch MUM 7100UC 700-Watt Stand Mixer Kitchen Machine User Manual

Bosch MUM 7100UC

Bosch MUM 7100UC 700-Watt Stand Mixer Kitchen Machine User Manual

Model: MUM 7100UC

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Bosch MUM 7100UC 700-Watt Stand Mixer Kitchen Machine. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- To protect against risk of electrical shock, do not immerse the motor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Keep hands and utensils away from the mixing bowl during operation to reduce the risk of severe injury to persons or damage to the mixer. A scraper may be used but must be used only when the mixer is not running.
- Ensure the appliance is switched off before changing accessories or approaching parts that move in use.

PACKAGE CONTENTS

Your Bosch MUM 7100UC Stand Mixer Kitchen Machine package includes the following items:

- Bosch MUM 7100UC Motor Base

- Mixing Bowl (6-quart capacity)
- Mixing Bowl Cover with feed chute
- Beating Whisk
- Stirring Whisk
- Stainless-steel Bread Master Dough Hook
- Spatula
- Blender (6-cup capacity)
- Instruction Booklet (this manual)



Image: The Bosch MUM 7100UC Stand Mixer base with the mixing bowl and cover attached, alongside the blender attachment, dough hook, whisks, and spatula.

PRODUCT OVERVIEW

The Bosch MUM 7100UC is a versatile kitchen machine designed for various food preparation tasks, including mixing, kneading, and blending. Its compact design and powerful motor make it suitable for everyday use.

Main Unit



Image: The Bosch MUM 7100UC Stand Mixer main unit, featuring the motor base, mixing bowl, and transparent cover with a feed chute. The control knob is visible on the front of the base.

- **Motor Base:** Houses the 700-watt motor and control knob. Features suction feet for stability.
- **Mixing Bowl:** 6-quart capacity, designed for efficient mixing and kneading.
- **Control Knob:** Used to select speed settings (0-4) and pulse function (M).

Blender Attachment



Image: The Bosch MUM 7100UC Stand Mixer base with the blender attachment securely mounted on top, ready for use.

- **Blender:** 6-cup capacity, attaches to the same motor base for blending tasks.

SETUP AND ASSEMBLY

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
- 2. Placement:** Place the motor base on a clean, dry, and stable surface. Ensure the suction feet are firmly attached to the countertop for stability.
- 3. Attaching the Mixing Bowl:** Align the mixing bowl with the base and twist it clockwise until it locks securely into place.
- 4. Inserting Attachments:** Select the desired attachment (beating whisk, stirring whisk, or dough hook). Insert the attachment into the drive shaft in the mixing bowl and push upwards until it clicks into place.
- 5. Attaching the Cover:** Place the transparent cover over the mixing bowl, ensuring it is properly seated.
- 6. Attaching the Blender:** To use the blender, remove the mixing bowl and attachments. Align the blender base with the motor base and twist to secure. Ensure the blender blade unit is properly assembled and the lid is on before operation.

OPERATING INSTRUCTIONS

Using the Stand Mixer

1. Ensure the mixer is properly assembled with the desired attachment and mixing bowl.
2. Add ingredients to the mixing bowl.
3. Plug the appliance into a suitable power outlet.
4. Turn the control knob to the desired speed setting (1-4). Start with a lower speed and gradually increase as needed.
5. For a momentary burst of power, turn the knob to the 'M' (Pulse) setting and hold. Release to stop.
6. When finished, turn the control knob to '0' (Off) and unplug the appliance.
7. Wait for all moving parts to stop before removing the cover, bowl, or attachments.

Speed Settings Guide

Setting	Description	Typical Use
0	Off	Appliance is off.
1	Slow Stirring	Combining dry ingredients, starting dough, mashing potatoes.
2	Slow Mixing	Mixing batters, creaming butter and sugar, kneading yeast dough.
3	Medium Mixing	Mixing cakes, cookies, frostings.
4	Fast Whipping	Whipping cream, egg whites, light batters.
M	Pulse	Short bursts of maximum power for chopping or quick mixing.

Using the Blender

1. Ensure the blender is securely attached to the motor base and the lid is in place.

2. Add ingredients to the blender jar. Do not overfill.
3. Plug the appliance into a suitable power outlet.
4. Turn the control knob to the desired speed setting (1-4) or use the 'M' (Pulse) function for short bursts.
5. When finished, turn the control knob to '0' (Off) and unplug the appliance.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Bosch MUM 7100UC.

1. **Always unplug the appliance before cleaning.**
2. **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
3. **Mixing Bowl and Attachments:** The mixing bowl, beating whisk, stirring whisk, dough hook, and spatula are dishwasher-safe. Alternatively, wash them in warm, soapy water and rinse thoroughly.
4. **Blender:** The blender jar and lid are dishwasher-safe. The blender blade unit should be removed and washed by hand with warm, soapy water. Exercise caution when handling sharp blades.
5. **Storage:** Ensure all parts are completely dry before storing. The cord can be conveniently stored within the motor base.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; power outage; control knob not on a speed setting.	Ensure plug is firmly in outlet; check circuit breaker; turn knob to a speed setting (1-4 or M).
Motor stops during operation.	Overload protection activated.	Turn off and unplug the appliance. Reduce the load in the bowl. Allow motor to cool for 15-20 minutes before restarting.
Attachments not mixing properly.	Attachment not fully engaged; too little or too much ingredient.	Ensure attachment is clicked into place. Adjust ingredient quantities as per recipe.
Loud noise during operation.	Normal operation noise; attachment not properly seated; excessive load.	Ensure attachments are secure. Reduce load if noise is excessive and unusual. If noise persists and is concerning, contact customer support.

SPECIFICATIONS

- **Model:** MUM 7100UC
- **Power:** 700 Watts
- **Mixing Bowl Capacity:** 6 Quarts
- **Blender Capacity:** 6 Cups
- **Dimensions (D x W x H):** 10.25" x 14" x 10.25" (with mixing bowl)

- **Weight:** Approximately 14.4 pounds
- **Control Type:** Knob with 4 speeds + Pulse
- **Dishwasher Safe Parts:** Mixing bowl, whisks, dough hook, spatula, blender jar, blender lid. (Blender blade unit hand wash only)



Image: Diagram illustrating the dimensions of the Bosch MUM 7100UC Stand Mixer, showing a depth of 10.25 inches, width of 14 inches, and height of 10.25 inches with the mixing bowl attached.

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase additional accessories, please refer to the official Bosch website or contact Bosch customer service. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: www.bosch-home.com/us/service/contact-us