

[Manuals.plus](#) /

› [KitchenAid](#) /

› KitchenAid Artisan Series 5 Quart Tilt Head Stand Mixer with Pouring Shield KSM150PS, White User Manual

KitchenAid KSM150PSWH

KitchenAid Artisan Series 5 Quart Tilt-Head Stand Mixer

Model: KSM150PSWH | Brand: KitchenAid

INTRODUCTION

Welcome to the user manual for your KitchenAid Artisan Series Tilt-Head Stand Mixer. This versatile appliance is designed to simplify your baking and cooking tasks, offering powerful performance and a wide range of capabilities. With its durable construction and multiple speed settings, it is an essential tool for any kitchen.

IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please read and adhere to the following safety guidelines:

- Read all instructions before using the stand mixer.
- To protect against risk of electrical shock, do not put the mixer base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.

WHAT'S IN THE BOX

Your KitchenAid Artisan Series Stand Mixer package includes:

- 1 x KitchenAid Artisan Series Tilt-Head Stand Mixer (KSM150PS)

- 1 x 5 Quart Stainless Steel Bowl with comfortable handle
- 1 x Coated Flat Beater
- 1 x Coated Dough Hook
- 1 x 6-Wire Whip
- 1 x Pouring Shield



Contents of the KitchenAid Artisan Series Stand Mixer box, including the mixer, 5-quart stainless steel bowl, flat beater, dough hook, wire whip, and pouring shield.

SETUP GUIDE

Follow these steps to set up your KitchenAid Stand Mixer for first use:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the stand mixer on a clean, dry, and stable countertop. Ensure there is enough clearance around the mixer for operation and ventilation.
3. **Attaching the Bowl:** Lift the motor head. Place the 5-quart stainless steel bowl onto the clamping plate, rotating it clockwise until it locks firmly into place.
4. **Attaching Accessories:** Choose the appropriate accessory (flat beater, dough hook, or wire whip) for your recipe. Slide the accessory onto the beater shaft and push upward as far as it will go. Turn the accessory to the right, engaging the pin on the shaft.
5. **Lowering the Head:** Lower the motor head and ensure it is securely locked in place before operation.



The KitchenAid Artisan Series Stand Mixer in white, ready for use on a kitchen counter.

OPERATING INSTRUCTIONS

General Operation

The KitchenAid Artisan Series Stand Mixer features 10 speeds, allowing for precise control over your mixing tasks.

1. **Adding Ingredients:** With the mixer head tilted back or lowered and locked, add your ingredients to the mixing bowl. The pouring shield can be used to prevent splashes and facilitate adding ingredients during mixing.
2. **Selecting Speed:** Turn the speed control lever to the desired speed setting. "Stir" (Speed 1) is ideal for gentle mixing, while higher speeds (up to 10) are used for whipping cream or beating egg whites.
3. **Mixing:** Allow the mixer to operate until ingredients are thoroughly incorporated. The planetary mixing action ensures 59 touchpoints per rotation for comprehensive mixing.
4. **Stopping the Mixer:** Turn the speed control lever to "Off/0" to stop the mixer.
5. **Removing Bowl and Accessories:** Lift the motor head. Turn the accessory to the left and pull it off the beater shaft. Rotate the bowl counter-clockwise to unlock and remove it.



A KitchenAid Artisan Series Stand Mixer in a kitchen setting, demonstrating its use for baking.

MAINTENANCE AND CLEANING

Cleaning the Mixer

Always unplug the mixer before cleaning.

- **Bowl and Accessories:** The 5-quart stainless steel bowl, coated flat beater, and coated dough hook are dishwasher-safe. The 6-wire whip should be hand washed with warm, soapy water and dried thoroughly.
- **Mixer Body:** Wipe the mixer body with a soft, damp cloth. Do not use abrasive cleaners or immerse the mixer in water.
- **Power Hub:** Clean the power hub with a damp cloth. Ensure it is dry before attaching any accessories.

Storage

Store the mixer in a dry place. Ensure all attachments are clean and dry before storing.

TROUBLESHOOTING

If your KitchenAid Stand Mixer is not operating as expected, please refer to the following common issues:

Problem	Possible Cause	Solution
Mixer does not turn on	Not plugged in; Power outlet not working	Ensure mixer is securely plugged into a working outlet. Check circuit breaker.
Mixer head not locked	Head not fully lowered or locked	Push the head down firmly until it clicks into place.
Beater hits the bowl	Beater clearance needs adjustment	Refer to the full user guide for instructions on adjusting beater-to-bowl clearance.
Mixer stops during operation	Overload protection activated	Turn off the mixer, unplug it, and remove some of the mixture. Let it rest for 10-15 minutes before restarting.

SPECIFICATIONS

Feature	Detail
Brand	KitchenAid
Model Name	KSM150PSWH
Color	White
Capacity	5 Quarts
Product Dimensions	16"D x 16"W x 11"H
Item Weight	22.8 Pounds
Controls Type	Knob
Blade Material	Stainless Steel
Container Material	Stainless

Feature	Detail
Is Dishwasher Safe	Yes (Bowl, Flat Beater, Dough Hook)
Special Feature	Removable Bowl, Tilt-Head Design
Planetary Mixing Action	59 touchpoints per rotation

WARRANTY INFORMATION

KitchenAid products are manufactured to the highest quality standards. For detailed warranty information, please refer to the official KitchenAid website or the warranty card included with your purchase. Keep your proof of purchase for warranty claims.

SUPPORT AND ADDITIONAL RESOURCES

For further assistance, recipes, or to register your product, please visit the official KitchenAid website.

You can also download the complete user guide in PDF format:

[Download User Manual \(PDF\)](#)

[Download User Guide \(PDF\)](#)