

Dirt Devil Type F

Dirt Devil Type F Vacuum Cleaner Bags Instruction Manual

Model: Type F Bags (Part No. 3-200348-001)

INTRODUCTION

This manual provides essential instructions for the proper installation and use of your Dirt Devil Type F Vacuum Cleaner Bags. These bags are designed to fit a wide range of Dirt Devil Power Pak and Can Vac models, ensuring efficient dust collection and maintaining your vacuum's performance.

Compatible Vacuum Models:

- Power Pak and Can Vac Models: 2003, 2103, 082023, 082123
- M-Series Models: M02003, M02050CA, M02053CA, M03004, M03013, M082023, M082120, M082123, M083123CA, M2001, M2003, M2037, M2060, M2103, M213, M2154CA, M2155, M2160CAWC, M2165, M3003, M3004, M3013, M3037, M3104, M3113, M313, M3137, M313PC, M314

Always refer to your specific vacuum cleaner's manual for detailed instructions on bag replacement if you are unsure.

SETUP & INSTALLATION

Follow these steps to correctly install a new Dirt Devil Type F vacuum bag:

1. **Power Off and Unplug:** Before attempting any maintenance or installation, ensure your vacuum cleaner is turned off and unplugged from the power outlet to prevent accidental startup.
2. **Access the Bag Compartment:** Open the vacuum cleaner's bag compartment. The method for opening varies by model; consult your vacuum's manual if needed.
3. **Remove Old Bag (if applicable):** Carefully remove the full vacuum bag. Seal the opening if possible to contain dust. Dispose of the old bag responsibly.
4. **Prepare New Bag:** Take a new Dirt Devil Type F bag. Locate the opening where the vacuum's intake tube connects.

5. **Open Hole:** As indicated on the bag, **fully open the hole with your thumb** before inserting it onto the adapter. This ensures a secure fit and proper airflow.
6. **Insert Bag:** Carefully slide the bag's opening onto the vacuum's bag adapter. Ensure it is seated firmly and completely to prevent dust leakage.
7. **Position Bag:** Position the bag neatly within the compartment, ensuring it is not creased or obstructing the compartment closure. The bag should not be filled above the indicated "FILL LINE" to avoid voiding warranty and to maintain optimal performance.
8. **Close Compartment:** Close the vacuum cleaner's bag compartment securely.



Image: Dirt Devil Type F Vacuum Bags. Note the instruction to fully open the hole with your thumb before inserting onto the adapter.

OPERATING GUIDELINES

Once the new bag is installed, your vacuum cleaner is ready for use. For optimal performance and to prolong the life of your vacuum, consider the following:

- **Regular Bag Checks:** Periodically check the bag's fill level. Do not wait until the bag is completely full, as this can reduce suction power and strain the vacuum motor.
- **Replace When Full:** Replace the bag when dirt reaches the "FILL LINE" indicated on the bag. Overfilling the bag can lead to decreased cleaning efficiency and potential damage to the vacuum.
- **Avoid Overfilling:** The bag is designed to hold a specific volume of debris. Filling above the designated line voids any warranty related to the bag's performance and can cause dust to escape into the motor or air.
- **Proper Storage:** Store unused bags in a cool, dry place away from direct sunlight or extreme temperatures to maintain their integrity.

MAINTENANCE

Proper maintenance of your vacuum bags ensures consistent cleaning performance and extends the life of your vacuum cleaner.

- **Timely Replacement:** Replace bags promptly when they are full. A full bag restricts airflow, causing the motor to work harder and potentially overheat.
- **Check for Damage:** Before installing a new bag, inspect it for any tears or manufacturing defects. Do not use damaged bags.
- **Filter Maintenance:** Some vacuum models have additional filters that may need cleaning or replacement. Refer to your vacuum's manual for filter maintenance schedules.
- **Genuine Parts:** Always use genuine Dirt Devil Type F bags to ensure proper fit, filtration, and to maintain your vacuum's warranty.

TROUBLESHOOTING

If you experience issues with your vacuum cleaner after installing a new bag, consider these common troubleshooting steps:

- **Reduced Suction:**
 - Ensure the bag is not overfilled.
 - Verify the bag is correctly seated on the adapter and the hole is fully open.
 - Check for blockages in the hose or attachments.
 - Inspect other filters in the vacuum for clogging.
- **Dust Leaking from Vacuum:**
 - Confirm the bag is properly installed and sealed.
 - Check if the bag compartment door is securely closed.
 - Ensure the bag is not damaged or torn.
 - Verify the bag is not filled above the "FILL LINE".
- **Unusual Noises:**
 - A full or improperly installed bag can sometimes cause unusual motor sounds due to restricted airflow.

Replace or re-install the bag.

- Check for foreign objects in the vacuum's brush roll or hose.

If problems persist, consult your vacuum cleaner's specific user manual or contact Dirt Devil customer support.

SPECIFICATIONS

Feature	Detail
Product Type	Vacuum Cleaner Bags
Brand	Dirt Devil
Model Number	3-200348-001 (also 3200147001, 3-200147-001)
Bag Type	Type F
Quantity	10 bags per pack
Material	Paper
Color	White
Product Dimensions	9.6 x 6.8 x 1.4 inches
Item Weight	10.2 ounces
Compatible Devices	Dirt Devil Power Pak and Can Vac Models (listed in Introduction)

WARRANTY & SUPPORT

These Dirt Devil Type F vacuum bags are designed for reliable performance. For specific warranty information regarding the bags, please refer to the packaging or contact Dirt Devil customer service directly. The use of non-genuine bags or improper installation may affect your vacuum cleaner's performance and warranty.

For further assistance or to explore other Dirt Devil products, please visit the official Dirt Devil website or their store on Amazon:

[Visit the Dirt Devil Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question