

Tefal 67610

T-fal Kaleo Store Away Food Processor

MODEL 67610 USER MANUAL

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- To protect against risk of electrical shock, do not immerse the motor base, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils out of the processing bowl while operating to prevent risk of severe injury to persons or damage to the food processor. A scraper may be used but must be used only when the food processor is not running.
- Blades are sharp. Handle carefully.
- Always ensure the lid is securely locked in place before operating the appliance.

PRODUCT OVERVIEW

The T-fal Kaleo Store Away Food Processor, Model 67610, is a versatile 450-watt kitchen appliance designed to simplify food preparation. It features a 6-cup processing bowl and a unique oval accessory-storage box that the unit sits on, allowing for convenient and compact storage of all attachments.



Image 1: The T-fal Kaleo Store Away Food Processor, fully assembled with its 6-cup bowl and motor base.

Included Components

Your T-fal Kaleo Food Processor comes with a comprehensive set of accessories to handle various tasks:

- 450-watt Motor Base
- 6-cup Processing Bowl
- Leak-proof Sealed Lid with Dual Feed Tube (small and large openings)
- Chopping Blade (S-blade)
- Dough Kneader
- Whipping Disk
- Two Shredding Blades (fine and coarse)
- Two Slicing Blades (thin and thick)
- Spatula
- Citrus Juicer Attachment
- Oval Accessory-Storage Box



Image 2: Various accessories included with the T-fal Kaleo Food Processor, including blades, disks, and the citrus juicer.

SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging. Wash the bowl, lid, and all accessories in warm, soapy water before first use. Rinse thoroughly and dry.
2. **Position the Motor Base:** Place the motor base on a clean, dry, and stable surface. Ensure it is not near the edge of the counter.
3. **Attach the Processing Bowl:** Place the 6-cup processing bowl onto the motor base. Rotate the bowl clockwise until it clicks securely into place. The handle should align with the front of the motor base.
4. **Insert Desired Attachment:**
 - For **Chopping Blade, Dough Kneader, or Whipping Disk:** Carefully place the attachment onto the central shaft inside the bowl. Ensure it sits firmly.
 - For **Shredding or Slicing Blades:** Place the appropriate disc onto the central shaft. Ensure the cutting edge is facing upwards.
 - For **Citrus Juicer:** Place the juicer attachment directly onto the bowl's opening, ensuring it is stable.
5. **Secure the Lid:** Place the lid onto the processing bowl. Align the tab on the lid with the slot on the bowl handle. Rotate the lid clockwise until it locks securely into place. The appliance will not operate unless the lid is properly locked.
6. **Connect to Power:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

General Operation

1. Ensure the food processor is correctly assembled and plugged in.

2. Add ingredients to the processing bowl. Do not overfill the bowl beyond the maximum fill line.
3. Secure the lid firmly in place.
4. Select the desired speed setting (if applicable) or use the Pulse function.
5. When finished, turn off the appliance and unplug it from the outlet before removing the lid and processing bowl.

Using Specific Attachments

Chopping Blade (S-blade)

Use for chopping, mincing, pureeing, and mixing. Ideal for nuts, herbs, vegetables, and cooked meats. Place the blade onto the central shaft before adding ingredients.

Dough Kneader

Designed for light doughs, such as pizza dough or bread dough. Add flour and liquids according to your recipe. Process until a cohesive dough ball forms.

Whipping Disk

Perfect for whipping cream, egg whites, or making light batters. Ensure the bowl and disk are clean and dry for best results. For whipping cream, use cold heavy cream.

Shredding and Slicing Blades

Insert the desired shredding or slicing disc onto the central shaft. Place the lid with the feed tube. Use the dual feed tube (small for narrow items like carrots, large for wider items like potatoes) and the pusher to guide food through the blade. Do not force food into the feed tube.

Citrus Juicer

Assemble the citrus juicer attachment onto the processing bowl. Cut citrus fruits (oranges, lemons, limes) in half. Place a fruit half onto the reamer and press down gently while the motor is running to extract juice. The pulp and seeds will be separated into the strainer.

Pulse Control

The Pulse function provides short bursts of power, ideal for controlling consistency, preventing over-processing, or for initial chopping of harder ingredients. Press and hold the Pulse button for intermittent operation; release to stop.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your T-fal Kaleo Food Processor.

- **Always unplug the appliance** from the power outlet before cleaning.
- **Disassemble all parts:** Remove the lid, processing bowl, and any attachments from the motor base.
- **Hand Wash:** The processing bowl, lid, and all attachments (blades, disks, juicer) should be hand washed with warm, soapy water. Use a brush for hard-to-reach areas and exercise extreme caution when handling sharp blades.
- **Motor Base:** The motor base should **never** be immersed in water. Wipe it clean with a damp cloth.

For stubborn stains, use a mild detergent on the cloth.

- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surfaces.
- **Drying:** Ensure all parts are thoroughly dried before reassembling or storing to prevent water spots and bacterial growth.

Storage

The T-fal Kaleo Food Processor is designed for convenient storage with its integrated oval accessory-storage box. After cleaning and drying, neatly place all blades, disks, and smaller attachments into the storage box. Place the motor base and bowl assembly on top of the storage box for a compact footprint.

TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Lid or bowl not properly locked; Overload protection activated.	Ensure power cord is securely plugged in. Check that the bowl and lid are correctly assembled and locked into place. If overloaded, unplug, remove some ingredients, wait 15 minutes, then try again.
Motor stops during operation.	Overloaded; Motor overheating.	Reduce the amount of food being processed. Unplug the unit and allow it to cool down for at least 30 minutes before resuming use.
Food is not processed evenly.	Too much food; Ingredients are too large; Incorrect blade/attachment used.	Process smaller batches. Cut ingredients into smaller, more uniform pieces. Ensure the correct blade or disc is used for the task. Use the Pulse function for better control.
Liquid leaks from the bowl.	Lid not sealed properly; Bowl overfilled.	Ensure the lid is securely locked and the pouring lip is closed (if applicable). Do not exceed the maximum liquid fill line indicated on the bowl.

SPECIFICATIONS

Brand	Tefal
Model Name	67610

Power	450 Watts
Bowl Capacity	6 Cups
Colour	Stainless Steel, Black
Blade Material	Stainless Steel
Power Source	Corded Electric
Item Weight	3 kg 630 g
Item Dimensions (LxWxH)	45.7 x 32.3 x 29.5 Centimeters
Special Feature	Built In Grinder (as per product specifications)

WARRANTY AND SUPPORT

Warranty Information

This T-fal Kaleo Store Away Food Processor, Model 67610, is covered by a **1-Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, abuse, accident, alteration, or commercial use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Tefal Customer Service. You can often find contact information and FAQs on the official [Tefal Store on Amazon](#) or the official Tefal website in your region.