

De'Longhi DCG39

De'Longhi Electric Grinder DCG39 Instruction Manual

Model: DCG39

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The De'Longhi Electric Grinder DCG39 is designed for grinding coffee beans to your desired consistency. It features durable stainless-steel blades and a user-friendly design.

- **Stainless-Steel Blades:** Efficiently grind coffee beans.

- **Grind Selector Dial:** Allows selection of desired quantity (4 to 12 cups).
- **Grind Indicator Lights:** Show progress from coarse to medium to fine.
- **Rubberized Grip:** Provides a secure hold during operation.
- **Push-in Cord Storage:** For convenient storage.
- **Rubberized Feet:** Prevents slipping during use.



Image: De'Longhi Electric Grinder DCG39. This image displays the overall design of the grinder, highlighting its sleek black finish, silver accents, and the transparent lid.

SETUP

1. **Unpacking:** Carefully remove the grinder from its packaging. Retain packaging materials for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the exterior of the grinder with a damp cloth. Wash the removable lid and grinding chamber with warm, soapy water, then rinse thoroughly and dry completely. Ensure all parts are dry before assembly.
3. **Placement:** Place the grinder on a stable, flat, and dry surface. Ensure there is adequate space around the unit for ventilation.
4. **Cord Management:** Unwind the power cord from the push-in cord storage at the base of the unit.

OPERATING INSTRUCTIONS

Follow these steps to grind coffee beans using your De'Longhi Electric Grinder:

1. **Add Coffee Beans:** Remove the transparent lid. Add whole coffee beans to the grinding chamber. The grinder has a capacity of up to 2.36 ounces, sufficient for brewing up to twelve 5-ounce cups of coffee. Do not overfill.
2. **Secure the Lid:** Place the lid firmly back onto the grinding chamber. The grinder will not operate unless the lid is correctly and securely in place due to a safety interlock switch.
3. **Select Quantity:** Rotate the grind selector dial to choose the desired quantity of ground coffee, calibrated for 4, 6, 8, 10, or 12 cups.
4. **Start Grinding:** Plug the grinder into a standard electrical outlet. Press and hold the ON/OFF push-button control to begin grinding.
5. **Monitor Grind Consistency:** During operation, lights above the grind selector will illuminate, indicating the current grind consistency: **coarse** (for percolator), **medium** (for drip coffee), or **fine** (for espresso). Release the ON/OFF button once the desired grind consistency is achieved.
6. **Remove Ground Coffee:** Unplug the grinder. Carefully remove the lid and pour the freshly ground coffee into your coffee maker or storage container.

Note: For optimal flavor, grind coffee beans immediately before brewing.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Unplug Before Cleaning:** Always ensure the grinder is unplugged from the power outlet before cleaning.

2. **Clean Grinding Chamber:** After each use, remove any residual coffee grounds from the grinding chamber and around the blades using a small brush or dry cloth.
3. **Wash Lid:** The transparent lid can be washed with warm, soapy water. Rinse thoroughly and dry completely before reattaching.
4. **Wipe Exterior:** Wipe the exterior of the grinder with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Storage:** Store the grinder in a dry place. Utilize the push-in cord storage for a tidy countertop.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Lid not properly secured. Not plugged in.	Ensure the lid is firmly in place. Check if the power cord is securely plugged into an electrical outlet.
Inconsistent grind.	Grinding time too short or too long. Overfilling the grinding chamber.	Adjust grinding time based on desired consistency (coarse, medium, fine). Do not exceed the maximum capacity of 2.36 ounces of beans.
Grinder stops during operation.	Overheating due to prolonged use.	Unplug the grinder and allow it to cool down for at least 10-15 minutes before resuming use.

SPECIFICATIONS

- **Model:** DCG39
- **Brand:** De'Longhi
- **Capacity:** 2.36 ounces (for up to 12 cups of coffee)
- **Blade Material:** Stainless Steel
- **Dimensions:** 9.1 x 5.7 x 5.5 inches
- **Item Weight:** 2.2 pounds
- **Manufacturer:** DeLonghi
- **UPC:** 044387132398

WARRANTY AND SUPPORT

This De'Longhi Electric Grinder DCG39 carries a **one-year warranty against defects** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical support, or service inquiries, please refer to the contact information provided in your product packaging or visit the official De'Longhi website. Please have your model number (DCG39) and proof of purchase available when contacting support.