

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Remington](#) /

› [Remington Hair Styling Twisters H-2030 Instruction Manual](#)

Remington H-2030

Remington Hair Styling Twisters H-2030 Instruction Manual

Model: H-2030

INTRODUCTION

The Remington Hair Styling Twisters, model H-2030, are designed to create various hair curl styles, including spirals, waves, and ringlets. These flexible twisters heat within their case, indicating readiness when their ends change color. They are designed for easy application without the need for clips, offering a convenient method for hair styling.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Keep away from water.
- Do not use while bathing or in a shower.
- Always unplug this appliance immediately after use.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- This appliance is for household use only.
- Do not operate any appliance with a damaged cord or plug, or if it malfunctions or has been dropped or damaged in any manner.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- The appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SETUP

1. Place the heating case on a flat, heat-resistant surface.
2. Ensure the unit is plugged into a suitable electrical outlet. The translucent case also serves as the heating element.
3. The rollers will begin to heat. The ends of the rollers will change color (from pink to purple) to indicate they are ready for use.



This image shows the Remington Hair Styling Twisters, model H-2030, consisting of 20 bendable hot rollers housed within their translucent heating case. The case also serves as the heating element.

OPERATING INSTRUCTIONS

1. Ensure hair is clean and dry before styling.
2. Once the rollers are heated (indicated by the color change of their ends), carefully remove one roller from the case.
3. Take a section of hair and wrap it around the flexible twister, starting from the ends and rolling towards the scalp. The self-gripping design of the twisters eliminates the need for clips.
4. Repeat this process for all desired sections of hair.
5. Allow the rollers to cool completely in your hair. This typically takes 10-20 minutes, depending on hair type and desired curl intensity.
6. Gently unroll each twister from the hair to avoid tangling or pulling.
7. Style your hair as desired.

MAINTENANCE

- Unplug the unit and allow it to cool completely before cleaning.
- Wipe the heating case and rollers with a damp cloth. Do not immerse the unit or rollers in water.
- Do not use abrasive cleaners or solvents, as these can damage the appliance.
- Store the appliance in a cool, dry place when not in use.

TROUBLESHOOTING

Rollers not heating:

Ensure the unit is properly plugged into a functional electrical outlet. Check the power outlet with another appliance. If the unit is still not heating, contact customer support.

Curls not holding:

Ensure hair is clean and completely dry before use. Allow the rollers to cool completely in your hair for maximum curl retention. Consider using a light styling product before or after curling if desired.

Rollers getting stuck in hair:

Ensure hair is thoroughly detangled before wrapping. When removing, gently unroll each twister from the hair, do not pull.

SPECIFICATIONS

Model Number	H-2030
Item Model Number (Internal)	341894
UPC / GTIN	074590874389
Product Dimensions	4 x 1 x 12 inches
Product Weight	3.75 Pounds
Material	Plastic
Number of Rollers	20
Manufacturer	Remington
Discontinued By Manufacturer	Yes

WARRANTY INFORMATION

This Remington product comes with a 2-year warranty from the date of purchase. Please retain your proof of purchase for any warranty claims. For complete details regarding the warranty terms and conditions, refer to the warranty card included with your product or visit the official Remington website.

CUSTOMER SUPPORT

For product support, technical assistance, or inquiries regarding warranty claims, please visit the official Remington website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's official website.