

[Manuals.plus](#) /

› [Toastmaster](#) /

› Toastmaster 7093S Convection Oven User Manual

Toastmaster 7093S

Toastmaster 7093S Convection Oven User Manual

Model: 7093S | Brand: Toastmaster

PRODUCT OVERVIEW

The Toastmaster 7093S Convection Oven is a versatile countertop appliance designed for various cooking needs. With a 0.9-cubic-foot interior, it can accommodate items such as a 10-pound turkey or two loaves of bread. This oven offers three primary cooking methods: bake/roast, broil, and slow-cook, providing flexibility for different recipes. It features a 2-hour timer, temperature control up to 450 degrees Fahrenheit, and an interior light for monitoring cooking progress. The nonstick interior and removable door are designed for ease of cleaning, while its brushed chrome housing ensures durability. A chrome baking pan with a broil insert is included for immediate use.



Image: Front view of the Toastmaster 7093S Convection Oven, showcasing its brushed chrome finish, glass door, and control knobs on the right side.

SETUP AND FIRST USE

Unpacking and Placement

- Carefully remove the oven and all accessories from the packaging. Retain packaging for future storage or transport.
- Place the oven on a stable, level, heat-resistant surface. Ensure there is adequate clearance (at least 4 inches) on all sides

and above the oven for proper ventilation. Do not place the oven directly against a wall or under cabinets.

- Ensure the power cord is not pinched or draped over sharp edges.

Initial Cleaning

- Before first use, wipe the interior and exterior of the oven with a damp cloth.
- Wash the baking pan and broil insert in warm, soapy water, then rinse and dry thoroughly.
- Ensure all parts are completely dry before plugging in the oven.

First Use Operation (Burn-Off)

- It is normal for a new appliance to emit a slight odor or smoke during its first use. This is due to the burning off of manufacturing residues.
- To minimize this, operate the oven empty for approximately 15-20 minutes at the highest temperature setting (450°F) in a well-ventilated area.
- After this initial burn-off, allow the oven to cool completely before using it for cooking.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel is located on the right side of the oven and features three main knobs:

- **Temperature Control Knob:** Used to set the desired cooking temperature from Warm to 450°F.
- **Function Selector Knob:** Used to select the cooking mode (Bake/Roast, Broil, Slow-Cook).
- **Timer Knob:** Used to set the cooking time up to 2 hours. The oven will automatically turn off when the timer reaches zero.

Cooking Modes

1. Bake/Roast:

- Place food on the baking pan or a suitable oven-safe dish on the rack.
- Turn the Function Selector Knob to "Bake/Roast".
- Set the Temperature Control Knob to the desired temperature.
- Set the Timer Knob to the desired cooking time. The oven will begin heating.

2. Broil:

- For broiling, use the broil insert with the baking pan to allow fats to drain. Place food on the broil insert.
- Turn the Function Selector Knob to "Broil".
- Set the Temperature Control Knob to "Broil" (usually the highest setting).
- Set the Timer Knob for the desired broiling time. Monitor food closely as broiling is a fast cooking method.

3. Slow-Cook:

- Place food in a suitable slow-cooker safe dish.
- Turn the Function Selector Knob to "Slow-Cook".
- Set the Timer Knob for the desired slow-cooking time.

Using the Interior Light

The oven is equipped with an interior light to allow you to monitor cooking progress without opening the door. The light typically activates when the oven is in operation.

MAINTENANCE AND CLEANING

General Cleaning

- Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
- Do not immerse the oven body, cord, or plug in water or any other liquid.
- Wipe the exterior with a damp cloth and mild detergent. Dry thoroughly.

Interior Cleaning

- The oven features a nonstick interior for easier cleaning. Wipe the interior surfaces with a damp cloth and mild, non-abrasive cleaning solution.
- For stubborn stains, a plastic scouring pad can be used carefully. Avoid metal scouring pads or abrasive cleaners that could damage the nonstick coating.
- The oven door is removable for thorough cleaning. Refer to the specific instructions in your full manual for safe removal and reattachment of the door.

Accessory Cleaning

- The baking pan and broil insert can be washed in warm, soapy water or placed in a dishwasher if they are dishwasher-safe. Rinse and dry thoroughly before storing or reusing.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet issue; timer not set.	Ensure the oven is securely plugged into a working electrical outlet. Check your circuit breaker. Ensure the timer knob is set to a cooking duration or "Stay On" if available.
Food not cooking evenly.	Incorrect temperature/time setting; improper food placement; oven preheating not complete.	Verify temperature and time settings. Ensure food is centered on the rack. Allow the oven to preheat fully before placing food inside. Rotate food halfway through cooking if necessary.
Smoke or odor during operation (after first use).	Food spills or residue inside the oven; excessive fat from food.	Unplug and allow the oven to cool. Clean the interior thoroughly, especially the heating elements and bottom tray. Use the broil insert to catch drips when broiling fatty foods.
Timer not working.	Timer knob not set correctly.	Ensure the timer knob is turned past the 10-minute mark and then back to the desired time to activate the mechanism.

If the problem persists after attempting these solutions, please contact Toastmaster customer support for further assistance.

SPECIFICATIONS

Brand	Toastmaster
Model Number	7093S

Capacity	0.9 Cubic Feet
Product Dimensions	60.45 x 41.4 x 38.35 cm (approx. 23.8 x 16.3 x 15.1 inches)
Item Weight	11.16 kg (approx. 24.6 lbs)
Power Source	Electric
Material	Metal (Brushed Chrome Housing)
Control Type	Knob
Special Features	Broiler Option, Non-Stick Coating, Temperature Control, Interior Light
Included Components	Baking Pan, Broil Insert

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Toastmaster website. Warranty terms and conditions may vary by region and purchase date.

If you require technical assistance, replacement parts, or have questions not covered in this manual, please contact Toastmaster customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

© 2024 Toastmaster. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question