

Toastmaster 6128

Toastmaster Food Slicer Model 6128 Instruction Manual

Model: 6128 | Brand: Toastmaster

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Toastmaster Food Slicer Model 6128. Please read all instructions carefully before using the appliance. Retain this manual for future reference.

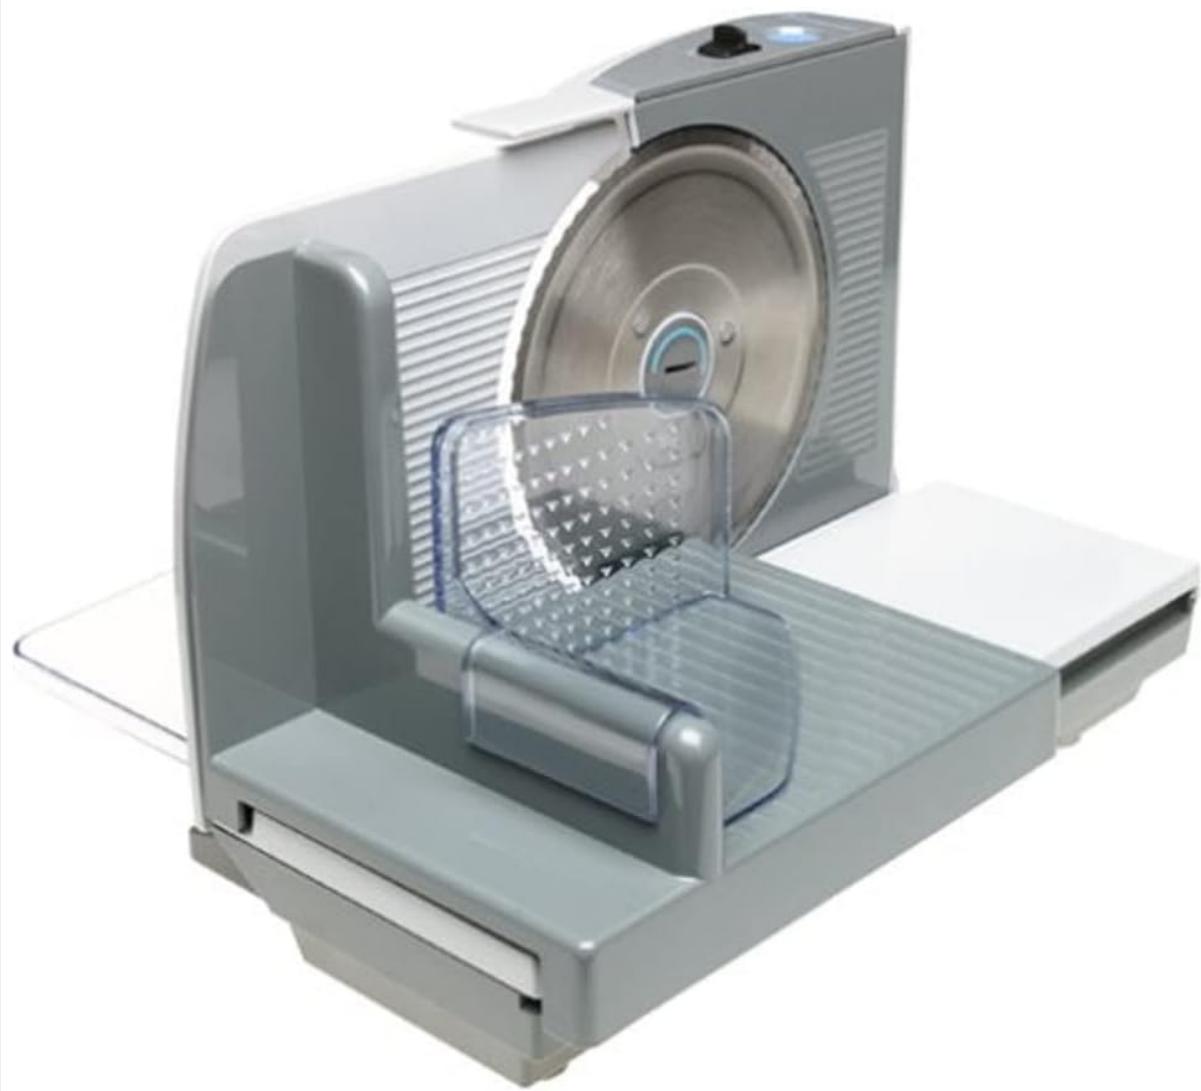


Figure 1: Toastmaster Food Slicer Model 6128. This image displays the Toastmaster Food Slicer Model 6128. It features a gray cast-aluminum body, a circular stainless steel blade, a clear plastic food press with textured grip points, and a sliding platform. The thickness adjustment knob is visible on the top right.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions.
- Do not touch moving parts.
- To protect against electrical hazards, do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Always operate the slicer with the food press and sliding platform properly in place.
- The blade is extremely sharp. Handle with care during assembly, disassembly, and cleaning.
- This appliance is for household use only.
- For safety, the slicer requires two hands to operate: one to push food and the other to continuously press the safety button.

PARTS IDENTIFICATION

Familiarize yourself with the components of your food slicer:

- **Stainless Steel Blade:** 6-1/2-inch diameter, for precise slicing.
- **Thickness Adjustment Knob:** Controls slice thickness from wafer-thin to extra-thick.
- **Sliding Platform:** Moves food towards the blade.
- **Food Press:** Transparent plastic with grip points, secures food during slicing.
- **Safety Button:** Must be continuously pressed for operation.
- **Motor Housing:** Contains the 90-watt motor.
- **Serving Tray:** 9-by-8-1/4-inch transparent plastic tray for collecting sliced food.

SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the slicer for any damage.
2. **Placement:** Place the slicer on a clean, dry, and stable surface. Ensure there is adequate space around the appliance for safe operation.
3. **Assemble:** Ensure the stainless steel blade, sliding platform, and food press are correctly installed. Refer to the "Parts Identification" section for component details.

4. **Clean:** Before first use, clean all removable parts that will come into contact with food according to the "Cleaning and Maintenance" section.
5. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. **Prepare Food:** Place the food item to be sliced onto the sliding platform. Ensure it is securely held by the food press.
2. **Adjust Thickness:** Use the thickness adjustment knob to select your desired slice thickness, from wafer-thin to extra-thick.
3. **Start Slicing:**
 - With one hand, continuously press the safety button located on the top of the slicer.
 - With the other hand, gently push the sliding platform forward, guiding the food into the rotating blade.
 - Maintain continuous pressure on the safety button throughout the slicing process.
4. **Collect Slices:** Position the transparent serving tray beneath the blade to collect the sliced food.
5. **Stop Slicing:** Release the safety button to stop the blade. Unplug the appliance when finished.

Caution: The blade is extremely sharp. Always keep hands clear of the blade during operation. The food press is designed to keep your hands away from the blade.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and safe operation of your food slicer.

1. **Unplug:** Always unplug the slicer from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the blade, sliding platform, and food press. These parts are designed for easy removal for cleaning.
3. **Hand Wash Only:** Wash all removable parts (blade, sliding platform, food press, serving tray) by hand using warm, soapy water. Rinse thoroughly and dry immediately.
 - **Warning:** The blade is very sharp. Use extreme caution when handling.
4. **Wipe Base:** Wipe the main body and motor housing with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Reassemble:** Once all parts are dry, carefully reassemble the slicer.

STORAGE

Store the Toastmaster Food Slicer in a clean, dry place, out of reach of children. Ensure all parts are dry before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Slicer does not turn on.	Not plugged in; Safety button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press and hold the safety button continuously.
Motor seems weak or stops.	Overheating; Food too hard or large.	Unplug and allow the unit to cool down. Ensure food is appropriately sized and not excessively hard for the slicer.
Slices are uneven or jagged.	Blade is dull; Food not secured; Incorrect thickness setting.	Ensure the food is firmly held by the food press. Check the thickness adjustment knob. If the blade is dull, consider replacement.

SPECIFICATIONS

- **Model Number:** 6128
- **Brand:** Toastmaster
- **Power:** 90 Watts
- **Blade Material:** Stainless Steel
- **Blade Diameter:** 6-1/2 inches
- **Construction Material:** Cast Aluminum, Plastic, Stainless Steel
- **Product Dimensions:** 13-1/2 inches (W) x 9-1/4 inches (H) x 8-1/2 inches (D)
- **Item Weight:** 8.8 pounds
- **Operation Mode:** Automatic (with continuous safety button press)
- **Care Instructions:** Hand Wash Only (removable parts)
- **UPC:** 048109337269

 
WARRANTY

The Toastmaster Food Slicer Model 6128 carries a **one-year warranty against defects** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, abuse, accident, alteration, or commercial use. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, questions, or to inquire about replacement parts, please contact Toastmaster customer support. Refer to the official Toastmaster website or product packaging for the most current contact information.

Related Documents - 6128

	<p>Toastmaster All-In-One Food Preparation System: Use and Care Guide</p> <p>Comprehensive use and care guide for the Toastmaster All-In-One Food Preparation System (Models 1750 and 1750CAN), detailing safety instructions, operating procedures for blending, mixing, and chopping, included recipes, maintenance, and warranty information.</p>
	<p>Toastmaster 1172X Bread Maker: Use and Care Guide and Recipes</p> <p>Comprehensive guide for the Toastmaster 1172X Bread Maker, covering setup, operation, troubleshooting, and a variety of bread and dough recipes. Learn to make delicious bread at home with this user-friendly manual.</p>
	<p>Toastmaster Automatic Drip Coffeemaker Use and Care Guide - Models TCM5W, TCM10W, TCM10DW</p> <p>Comprehensive use and care guide for Toastmaster Automatic Drip Coffeemakers, including safety instructions, brewing guides, cleaning procedures, and warranty information for models TCM5W, TCM10W, and TCM10DW.</p>
	<p>Toastmaster TB8 Blender: Use and Care Guide</p> <p>Comprehensive guide for the Toastmaster TB8 Blender, covering safety, operation, care, blending tips, and a wide range of recipes for beverages, salads, marinades, sauces, soups, desserts, and more. Includes warranty information.</p>
	<p>Toastmaster TBR20HCAN Bread Maker Use and Care Guide</p> <p>Comprehensive guide for the Toastmaster TBR20HCAN Bread Maker, covering features, programs, recipes, troubleshooting, and care instructions for optimal home baking.</p>
	<p>Toastmaster Electric Skillet TES1CAN Use and Care Guide</p> <p>This guide provides essential information for the Toastmaster Electric Skillet, Model TES1CAN, including safety warnings, assembly instructions, usage tips, various cooking methods with charts, maintenance, cleaning, and a one-year limited warranty.</p>