

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sony](#) /

› [Sony MZ-S1 S2 Sports Net MD MiniDisc Player User Manual](#)

## Sony MZ-S1

# Sony MZ-S1 S2 Sports Net MD MiniDisc Player

## USER MANUAL

### 1. Introduction

---

The Sony MZ-S1 S2 Sports Net MD MiniDisc Player is a robust and versatile portable audio device designed for active users. It combines the functionality of a minidisc player/recorder with a durable, water-resistant design, making it suitable for various environments. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

#### Key Features:

- Records MP3s or CDs at up to 32x speed from multiple sources (PC, CD, radio, etc.).
- Plays back in ATRAC3 and supports MP3, WMA, and WAV formats.
- Features an easy one-hand joystick navigation and a bright backlit LCD display.
- Offers up to 54 hours of playback on a single AA battery (in LP4 mode).
- Durable, water-resistant design with a reflective casing and G-Protection anti-shock system.
- Includes music management software and a reflective hand strap.



**Figure 1.1:** Front view of the Sony MZ-S1 S2 Sports Net MD MiniDisc Player, showing the main unit in white with a black top, connected to a pair of white and black earbud headphones. The display and control buttons are visible on the front.

## 2. Setup

---

### 2.1 Battery Installation

The MZ-S1 requires one (1) AA battery for operation. To install the battery:

1. Locate the battery compartment on the device.
2. Open the battery compartment cover.
3. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

### 2.2 Connecting to a Computer

To transfer music from your computer to the MiniDisc player, use the provided USB cable and the included music management software (e.g., OpenMG JukeBox or SonicStage).

1. Install the music management software on your computer according to the software's instructions.
2. Connect one end of the USB cable to the USB port on the MZ-S1.
3. Connect the other end of the USB cable to an available USB port on your computer.
4. Launch the music management software. The software should detect the connected MiniDisc player.

### 2.3 Loading a MiniDisc

To insert a MiniDisc:

1. Locate the disc slot on the device, typically protected by a secure latch.
2. Open the latch and gently slide the MiniDisc into the slot with the label side facing up.
3. Ensure the disc is fully inserted and close the latch securely. The rubber-sealed disc slot helps maintain water resistance.

## 3. Operating Instructions

---

### 3.1 Basic Playback Controls

The MZ-S1 features a five-way control joystick for most playback functions, located on the side for easy one-handed operation.

- **Play:** Press the center of the joystick.
- **Stop:** Press the center of the joystick again during playback, or use a dedicated stop button if available.
- **Fast Forward/Rewind:** Push the joystick forward or backward.
- **Volume Control:** Push the joystick up or down. The automatic volume control feature prevents sudden loud sounds.
- **Pause:** A separate button is typically provided for pausing playback.

### 3.2 Recording Music

The MZ-S1 allows recording from external sources (e.g., CD player via optical cable, analog sources via a second cable) or directly from a PC using the USB connection and music management software.

- **From PC:** Use the music management software (e.g., OpenMG JukeBox) to transfer MP3 or WMA files. The software allows creating multiple playlists and converting CD tracks directly. Note that tracks cannot be transferred from MiniDisc to MP3.
- **From External Source:** Connect the audio source to the appropriate input port on the MZ-S1. Follow the device's on-screen prompts or refer to the software for recording initiation.

The device supports single, double, or quadruple-length recording modes (e.g., LP4 mode), allowing over five hours of music on one MiniDisc.

### 3.3 G-Protection Anti-Shock System

The integrated G-Protection anti-shock system provides skip-free playback, even during vigorous activities like running or jogging. This feature ensures uninterrupted music listening.

## 4. Maintenance

---

### 4.1 Cleaning the Device

To maintain the appearance and functionality of your MZ-S1:

- Wipe the exterior of the unit with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water or a mild detergent solution, then wipe dry.
- Do not use abrasive cleaners, solvents, or alcohol, as these can damage the finish.
- Keep the rubber covers for ports and sockets clean and free of debris to maintain water resistance.

### 4.2 Water Resistance

The MZ-S1 features a water-resistant design. While it can withstand splashes and light rain, it is not designed for submersion. Ensure all latches and covers are securely closed to maintain water resistance.

### 4.3 Battery Care

To maximize battery life and ensure safe operation:

- Remove the battery if the device will not be used for an extended period.
- Use only the specified type of battery (AA).
- Dispose of used batteries according to local regulations.

## 5. Troubleshooting

---

If you encounter issues with your Sony MZ-S1, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
<b>Device does not power on.</b>	Check if the AA battery is inserted correctly with the correct polarity. Ensure the battery has sufficient charge.
<b>No sound during playback.</b>	Verify that headphones are properly connected. Check the volume level. Ensure the MiniDisc is inserted correctly and contains playable audio.
<b>Music transfer from PC fails.</b>	Ensure the USB cable is securely connected to both the device and the computer. Verify that the music management software (e.g., OpenMG JukeBox) is installed correctly and recognizes the device. Check for software updates or compatibility issues with your operating system.
<b>Skipping or interrupted playback.</b>	While the G-Protection system is robust, extreme shocks can still cause issues. Ensure the MiniDisc is clean and free of scratches.
<b>Display is dim or unreadable.</b>	Check battery level. The backlit LCD display may dim as battery power decreases.

If the problem persists after attempting these solutions, please refer to the official support resources.

## 6. Specifications

---

Feature	Detail
<b>Model Number</b>	MZ-S1
<b>Product Dimensions (W x H x D)</b>	1.57 x 3.82 x 4.09 inches (approx.)
<b>Item Weight</b>	7.6 ounces (approx.)
<b>Power Source</b>	1 AA battery
<b>Playback Formats</b>	ATRAC3, MP3, WMA, WAV
<b>Recording Speed (from PC)</b>	Up to 32x
<b>Battery Life (LP4 mode)</b>	Up to 54 hours
<b>Anti-Shock System</b>	G-Protection
<b>Connectivity</b>	USB, Optical Input

## 7. Warranty and Support

---

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official Sony support website. Keep your proof of purchase for warranty claims.

An official User Manual in PDF format is available for download, providing more in-depth information and diagrams. You can typically find this document on the Sony support website by searching for your product model (MZ-S1).

For further assistance or technical support, please contact Sony customer service through their official channels. Do not attempt to repair the device yourself, as this may void the warranty.