

Epson C11C387011

Epson Stylus Photo 2200 Ink Jet Printer User Manual

Model: C11C387011

1. SETUP

This section guides you through the initial setup of your Epson Stylus Photo 2200 Ink Jet Printer, from unpacking to preparing it for its first use.

1.1 Unpacking the Printer

1. Carefully remove the printer from its packaging.
2. Remove all protective tapes and packing materials from the printer.
3. Verify that all included components are present: Ink Cartridges, Power Cable, Manual, and Software CD.

1.2 Connecting the Printer

1. Connect the power cable to the printer and then to a power outlet.
2. Connect the printer to your computer using a USB, Firewire, or Parallel interface cable (cable not included).

1.3 Installing Ink Cartridges

The Epson Stylus Photo 2200 uses seven individual UltraChrome ink cartridges for optimal color depth and longevity.

1. Open the printer cover to access the ink cartridge slots.
2. Unpack each ink cartridge and remove the protective tape.
3. Insert each cartridge into its corresponding color-coded slot until it clicks into place.
4. Close the printer cover. The printer will initiate an ink charging cycle.

1.4 Loading Paper

This printer supports various paper types and sizes, including roll paper.

1. Adjust the paper guides in the rear input tray to match the width of your paper.
2. Load paper into the input tray with the printable side facing up.
3. For roll paper, attach the roll paper holder and feed the paper through the designated slot, utilizing the built-in automatic cutter.



This image displays the Epson Stylus Photo 2200 Ink Jet Printer from a front-angle view. A stack of blank paper is loaded into the rear input tray, and a printed photo is partially ejected from the front output slot. The printer features a silver and dark gray casing with control buttons on the right side.

2. OPERATING THE PRINTER

Learn how to effectively use your Epson Stylus Photo 2200 for various printing tasks.

2.1 Basic Printing

1. Ensure the printer is powered on and connected to your computer.
2. Open the document or image you wish to print on your computer.
3. Select 'Print' from the application's menu.
4. In the print dialog, select 'Epson Stylus Photo 2200' as your printer.
5. Adjust print settings such as paper type, print quality (up to 2880 x 1440 dpi), and paper size.
6. Click 'Print'.

2.2 Advanced Printing Features

- **UltraChrome Inks:** Utilize the seven-color UltraChrome ink system for fade-resistant, archival-quality prints with a wide color gamut.
- **Paper Compatibility:** Print on a variety of media including glossy, semi-glossy, luster, matte, and Epson's velvet fine art paper.
- **Large Format Printing:** Supports sizes up to 13 x 44 inches.
- **Borderless Printing:** Use the included roll paper holder and automatic cutter for seamless borderless prints.
- **Black and White Prints:** Interchangeable standard and matte black ink cartridges are available to optimize quality for black-and-white output.

3. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your printer.

3.1 Replacing Ink Cartridges

1. When an ink cartridge is low or empty, a warning will appear on your computer screen or the printer's indicator light will signal.
2. Open the printer cover.
3. Press the tab on the empty cartridge and lift it out.
4. Unpack a new genuine Epson UltraChrome ink cartridge, remove the protective tape, and insert it into the correct slot until it clicks.
5. Close the printer cover.

3.2 Print Head Cleaning and Nozzle Check

If print quality declines (e.g., missing lines, incorrect colors), perform a nozzle check and print head cleaning.

1. Access the printer utility software on your computer.
2. Select 'Nozzle Check' to print a pattern and identify clogged nozzles.
3. If necessary, select 'Head Cleaning' to clear clogged nozzles. Repeat if print quality does not improve.

3.3 Cleaning the Printer

- Wipe the exterior of the printer with a soft, damp cloth.
- Periodically clean the paper path and rollers to prevent paper jams and maintain print quality. Refer to the software manual for detailed instructions.

4. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your printer.

Problem	Solution
Printer does not turn on	Ensure the power cable is securely connected to both the printer and a working electrical outlet.
Poor print quality (streaks, faded colors)	Perform a nozzle check and head cleaning using the printer utility software. Check ink levels and replace any empty cartridges.
Paper jam	Turn off the printer and carefully remove any jammed paper from the input tray, output tray, or inside the printer. Ensure paper is loaded correctly.
Printer not recognized by computer	Check the USB/Firewire/Parallel cable connection. Reinstall printer drivers if necessary. Restart both the printer and computer.

5. SPECIFICATIONS

Key technical specifications for the Epson Stylus Photo 2200 Ink Jet Printer.

Feature	Detail
Product Dimensions	24.3"D x 34.1"W x 15.4"H
Maximum Media Size	34.1 inches
Maximum Color Print Resolution	2880 x 1440 dpi
Maximum Black and White Print Resolution	2880 x 1440 dpi
Printing Technology	Inkjet
Ink Type	Epson UltraChrome Pigment Ink (7 individual cartridges)
Connectivity Technology	USB, Firewire, Parallel
Max Input Sheet Capacity	150 sheets
Item Weight	25.7 lbs (approximate, based on product description)
Included Components	Ink Cartridges, Power Cable, Manual, Software CD

6. WARRANTY INFORMATION

The Epson Stylus Photo 2200 Ink Jet Printer comes with a limited warranty. As per the product description, it includes a

one-year Epson exchange warranty. Please refer to the warranty documentation included with your product for full terms and conditions regarding coverage, duration, and service procedures.

7. SUPPORT

For further assistance, technical support, or to purchase genuine Epson supplies, please visit the official Epson support website or contact their customer service. Ensure you have your printer model number (C11C387011) and serial number ready when seeking support.

You can find additional resources and FAQs on the [Epson Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question