

[manuals.plus](#) /› [Microsoft](#) /› [Microsoft Wireless Optical Mouse Blue \(Model K80-00004\) Instruction Manual](#)**Microsoft K80-00004**

# Microsoft Wireless Optical Mouse Blue (Model K80-00004) Instruction Manual

Model: K80-00004

## INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your Microsoft Wireless Optical Mouse Blue, Model K80-00004. Please read this manual thoroughly before using your device.

## WHAT'S IN THE BOX

Verify that all items are present in the package:

- Microsoft Wireless Optical Mouse
- Wireless Receiver
- 2 AA Batteries (pre-installed or included separately)



Image: Retail packaging of the Microsoft Wireless Optical Mouse Blue, showing the mouse and receiver.

## SETUP

---

### 1. Install Batteries

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover.
3. Insert the two AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.



Image: Front view of the Microsoft Wireless Optical Mouse Blue, showing the top buttons and scroll wheel. The battery compartment is on the underside.

## 2. Connect the Wireless Receiver

- Plug the USB wireless receiver into an available USB port on your computer.
- Allow your operating system to detect and install the necessary drivers. This process is usually automatic.
- For optimal performance, ensure the receiver is placed at least 12 inches away from other wireless devices or large metal objects.

## 3. Optional Software Installation (IntelliPoint)

- While not required for basic functionality, installing Microsoft IntelliPoint software provides advanced customization options for your mouse buttons and scroll wheel.
- Refer to the Microsoft support website for the latest IntelliPoint software compatible with your operating system.

## 4. Set Orientation (Calibration)

- After initial setup, it is recommended to perform an "Orientation Set" or calibration if available through the IntelliPoint software or your operating system's mouse settings. This helps optimize tracking performance.

## OPERATING INSTRUCTIONS

---

The Microsoft Wireless Optical Mouse Blue is designed for comfortable and precise navigation.

### Basic Functions

- **Left Click:** Primary button for selecting items, opening files, and interacting with software.
- **Right Click:** Secondary button for accessing context menus and additional options.
- **Scroll Wheel:** Roll the wheel up or down to scroll through documents and web pages. The scroll wheel may also function as a clickable button for additional commands, depending on software configuration.

### Wireless Operation

- The mouse operates wirelessly up to 6 feet (approximately 1.8 meters) from its receiver.
- Optical technology scans the desktop surface for precise cursor movement without the need for a mouse pad on most surfaces.
- The mouse is designed for comfortable use with either the right or left hand.



Image: Angled view of the Microsoft Wireless Optical Mouse Blue, highlighting its ergonomic shape and blue/silver design.

## MAINTENANCE

---

### Battery Replacement

- The mouse requires two AA batteries.
- When battery power is low, your computer may display a notification (if IntelliPoint software is installed) or mouse performance may degrade.
- Replace batteries as described in the "Install Batteries" section under Setup.
- Always use fresh, high-quality batteries for optimal performance.

### Cleaning

- To clean the mouse, gently wipe the surface with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Ensure no liquid enters the mouse's internal components.

### Travel Considerations

- The Microsoft Wireless Optical Mouse is a transmitting device. When traveling by air, it is recommended to remove the batteries from the mouse before boarding to comply with airline regulations regarding electronic devices.

## TROUBLESHOOTING

---

### Mouse Not Responding or Lagging

- **Check Batteries:** Ensure batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Check Receiver Connection:** Ensure the wireless receiver is securely plugged into a functioning USB port. Try a different USB port.
- **Proximity:** Ensure the mouse is within 6 feet of the receiver. Reduce obstacles between the mouse and receiver.
- **Interference:** Other wireless devices (e.g., Wi-Fi routers, cordless phones) can cause interference.

Move the receiver away from such devices.

- **Surface:** Ensure the mouse is used on a suitable surface. Highly reflective or transparent surfaces may affect optical tracking.
- **Re-sync:** Some wireless mice have a re-sync button on both the mouse and receiver. Consult the full product manual or Microsoft support for specific re-sync procedures for this model if issues persist.

## Clicking Issues

- If clicks are not registering or require multiple presses, check for physical obstructions or debris around the buttons.
- Ensure the mouse is powered on and connected.

## Software Compatibility

- The IntelliPoint software may have specific operating system requirements. For example, older versions may not be compatible with newer operating systems like Windows Vista or later.
- Always download the latest software from the official Microsoft support website for your specific operating system.

## SPECIFICATIONS

Feature	Detail
Model Number	K80-00004
Brand	Microsoft
Connectivity Technology	Wireless
Movement Detection	Optical
Color	Blue / Silver
Batteries	2 AA batteries (included)
Item Weight	13.6 ounces (approx. 385.5 grams)
Product Dimensions	9.3 x 8.9 x 2.1 inches (approx. 23.6 x 22.6 x 5.3 cm)
First Available Date	August 1, 2002

## WARRANTY INFORMATION

According to the legal disclaimer, this product is sold without a warranty. Please refer to your point of purchase for any return or exchange policies.

## SUPPORT

For further assistance, driver downloads, or updated information regarding your Microsoft Wireless Optical Mouse Blue, please visit the official Microsoft support website.

You can typically find support resources by searching for "Microsoft support" and your product model number (K80-00004).

