

## Sharp DV-S1U

# Sharp DV-S1U DVD Player Instruction Manual

## 1. INTRODUCTION

Thank you for purchasing the Sharp DV-S1U DVD Player. This manual provides essential information for the proper setup, operation, and maintenance of your new DVD player. Please read this manual thoroughly before using the unit and retain it for future reference.

## 2. SAFETY INFORMATION

- **Power Source:** Ensure the unit is connected to a power supply within the specified voltage range.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the unit for proper airflow to prevent overheating.
- **Moisture:** Do not expose the unit to rain, moisture, or excessive humidity. Avoid placing objects filled with liquids, such as vases, on the unit.
- **Cleaning:** Disconnect the power cord before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

## 3. PACKAGE CONTENTS

Please check that your package contains the following items:

- Sharp DV-S1U DVD Player unit
- Remote Control
- Instruction Manual (this document)

## 4. PRODUCT OVERVIEW

### Front Panel



**Figure 1:** Front view of the Sharp DV-S1U DVD Player. The front panel features the disc tray, an LED display, and various control buttons including Power, Open/Close, Play, Stop, Pause, Fast Forward, and Rewind. Indicator lights for Dolby Digital and DTS are also visible.

The front panel provides access to the disc tray, the main display, and essential playback controls. The display shows track numbers, elapsed time, and other operational information. Buttons for Power, Disc Tray Open/Close, Play, Stop, Pause, Fast Forward, and Rewind are conveniently located for direct control.

## Rear Panel

The rear panel houses all the necessary connection ports for integrating the DVD player into your home entertainment system. These include video outputs (Component, S-Video, Composite) and audio outputs (Analog L/R, Coaxial Digital).

## 5. SETUP

### 5.1 Connecting to a Television

Choose one of the following video connection methods based on your television's available inputs for the best possible picture quality:

1. **Component Video Connection (Best Quality):** Connect the Y, Pb, and Pr output jacks on the DVD player to the corresponding Y, Pb, and Pr input jacks on your television using component video cables.
2. **S-Video Connection (Better Quality):** Connect the S-Video output jack on the DVD player to the S-Video input jack on your television using an S-Video cable.
3. **Composite Video Connection (Good Quality):** Connect the VIDEO output jack on the DVD player to the VIDEO input jack on your television using a composite video cable (yellow connector).

### 5.2 Connecting to an Audio System

Choose one of the following audio connection methods:

1. **Coaxial Digital Audio Connection (for Surround Sound):** Connect the COAXIAL DIGITAL AUDIO OUT jack on the DVD player to the COAXIAL DIGITAL IN jack on your Dolby Digital or DTS compatible A/V receiver using a coaxial digital audio cable. This allows for 5.1-channel surround sound.
2. **Analog Audio Connection (for Stereo Sound):** Connect the AUDIO L and R output jacks on the DVD player to the corresponding AUDIO L and R input jacks on your stereo amplifier or television using RCA audio cables.

### 5.3 Power Connection

After all video and audio connections are made, plug the AC power cord of the DVD player into a standard wall outlet.

## 6. OPERATING INSTRUCTIONS

### 6.1 Basic Playback

1. Turn on your television and select the correct video input source.
2. Press the POWER button on the DVD player or remote control to turn on the unit.
3. Press the OPEN/CLOSE button to open the disc tray.
4. Place a DVD or CD disc onto the disc tray with the label side facing up.
5. Press the OPEN/CLOSE button again to close the disc tray. Playback will usually start automatically. If not, press the PLAY button.
6. Use the PLAY, PAUSE, STOP, FAST FORWARD, and REWIND buttons on the front panel or remote control to manage playback.

## 6.2 MP3 Playback

The DV-S1U supports MP3 audio playback from CD-R/CD-RW and DVD-R/DVD-RW discs. When an MP3 disc is inserted, the player will display a menu allowing you to navigate through folders and select tracks. Use the navigation buttons on the remote control to select your desired MP3 files.

## 6.3 Advanced Features

- **Direct Search:** Use the numeric buttons on the remote control to directly jump to any desired title, chapter, or track during playback or in stop mode. This feature allows bypassing previews and disc menus.
- **Zoom:** Magnify a portion of the picture (2x or 4x) during playback.
- **Black-Level Adjustment:** Adjust the black level of the video output for optimal picture contrast.
- **Angle Selection:** If a DVD supports multiple camera angles, you can switch between them using the ANGLE button on the remote.
- **Display Dimmer:** Adjust the brightness of the front panel display, useful for darkening a room during movie viewing.
- **Resume Playback:** The player can remember the stop point on a disc, allowing you to resume playback from where you left off after stopping the disc.
- **Parental Controls:** Set restrictions on disc playback based on rating levels to prevent children from viewing mature content. Refer to the on-screen menu for setting up parental controls.

## 7. MAINTENANCE

---

### 7.1 Cleaning the Unit

Wipe the exterior of the DVD player with a soft, dry cloth. Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene, as these may damage the finish.

### 7.2 Cleaning Discs

Wipe discs with a soft, lint-free cloth from the center outwards. Do not use solvents or abrasive cleaners. Store discs in their cases to prevent scratches and dust accumulation.

## 8. TROUBLESHOOTING

---

If you experience problems with your DVD player, please refer to the following common issues and solutions before contacting service personnel.

- **No Power:** Ensure the power cord is securely plugged into both the unit and a working electrical outlet.
- **No Picture:** Verify that the video cables are correctly connected to both the DVD player and the television, and that the television is set to the correct input source.
- **No Sound:** Check audio cable connections to your TV or audio receiver. Ensure the receiver is on the correct

input and volume is up. For digital audio, confirm your receiver supports Dolby Digital or DTS.

- **Disc Does Not Play:** Ensure the disc is clean and free of scratches. Verify the disc type is supported (DVD-Video, CD, DVD-R, DVD-RW, MP3-CD/DVD-R/DVD-RW).
- **Remote Control Not Working:** Check the batteries in the remote control. Ensure there are no obstructions between the remote and the player's remote sensor.


## 9. SPECIFICATIONS






Feature	Specification
Brand	Sharp
Model Number	DV-S1U
Media Type Supported	DVD-Video, CD, DVD-R, DVD-RW, MP3-CD/DVD-R/DVD-RW
Video Outputs	Component-video, S-video, Composite-video
Audio Outputs	Coaxial Digital Audio, Analog L/R
Audio Output Mode	Surround (Dolby Digital, DTS via Coaxial), Stereo
Input Video Compatibility	NTSC
Special Features	Direct Search, Zoom, Black-level adjustment, Angle selection, Display dimmer, Resume, Parental controls
Item Weight	4.99 pounds
Package Dimensions	18 x 11.9 x 6.26 inches
Color	Grey
UPC	074000354241

## 10. WARRANTY AND SUPPORT

Specific warranty information for the Sharp DV-S1U DVD Player is typically provided with the product at the time of purchase, often on a separate warranty card or within a dedicated section of the full product manual. For detailed warranty terms, conditions, and support options, please refer to the documentation included with your unit or visit the official Sharp website. Keep your purchase receipt as proof of purchase for warranty claims.

### Related Documents - DV-S1U

	<p><a href="#">SHARP XL-DV60H DVD Micro System - Instrukcja Obsługi</a></p> <p>Szczegółowa instrukcja obsługi systemu SHARP XL-DV60H DVD Micro System. Dowiedz się o instalacji, obsłudze płyt, funkcjach radiowych i zaawansowanych.</p>
---	---

	<p><a href="#">SHARP XL-DV50H Instrukcja Obsługi - Mikrowieża z Odtwarzaczem DVD</a></p> <p>Kompleksowa instrukcja obsługi dla systemu audio SHARP XL-DV50H. Zawiera szczegółowe informacje na temat instalacji, obsługi płyt DVD/CD/MP3/JPEG, radia, funkcji zaawansowanych, rozwiązywania problemów i specyfikacji technicznych.</p>
	<p><a href="#">SHARP XL-UH242 Micro Component System Operation Manual</a></p> <p>Official operation manual for the SHARP XL-UH242 Micro Component System, providing detailed instructions on setup, operation, features, safety, troubleshooting, and specifications.</p>
	<p><a href="#">SHARP SD-AS10 1-Bit Digital Home Theater with DVD Player Operation Manual</a></p> <p>Comprehensive operation manual for the SHARP SD-AS10 1-Bit Digital Home Theater with DVD Player, covering setup, operation, features, troubleshooting, and specifications.</p>
	<p><a href="#">Sharp RP-TT100 Automatic Turntable with Bluetooth-out User Manual</a></p> <p>Detailed user manual for the Sharp RP-TT100 automatic turntable, covering setup, operation, safety instructions, troubleshooting, and Bluetooth connectivity.</p>
	<p><a href="#">Sharp RP-TT100 User Manual: Automatic Turntable with Bluetooth-out</a></p> <p>Comprehensive user manual for the Sharp RP-TT100 Automatic Turntable with Bluetooth-out. Learn about setup, operation, safety, maintenance, and troubleshooting for this high-quality vinyl playback device.</p>