

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Stanton](#) /
- › [Stanton RM-50 DJ Mixer User Manual](#)

## Stanton RM50

# Stanton RM-50 DJ Mixer User Manual

Comprehensive instructions for setup, operation, and maintenance of your Stanton RM-50 DJ Mixer.

## 1. INTRODUCTION

Thank you for choosing the Stanton RM-50 DJ Mixer. This professional 19-inch rackmount mixer is designed for reliable performance and versatile audio control in various DJ and live sound environments. This manual provides essential information for proper installation, operation, and maintenance to ensure optimal performance and longevity of your device. Please read this manual thoroughly before operating the unit.

## 2. PRODUCT OVERVIEW

### 2.1 Key Features

- 9 line, 4 phono, 4 mic inputs for extensive connectivity.
- 3-band master EQ with complete kill (+9/-60 dB) for precise sound shaping.
- Dedicated Booth output for monitoring.
- Fader start capability for seamless track transitions.
- Fully assignable crossfader (A, B, bypass) for flexible mixing.
- Balanced XLR master output for professional audio connections.

### 2.2 Front Panel Layout

The Stanton RM-50 features an intuitive front panel designed for ease of use during live performances. Familiarize yourself with the controls shown below.



Figure 1: Front panel view of the Stanton RM-50 DJ Mixer.

### Detailed Description of Front Panel Controls:

- **Microphone Section (Left Side):** Features inputs for MIC 1 (XLR) and MIC 2 (1/4" jack). Each microphone input has dedicated HIGH, MID, and LOW EQ controls, along with individual LEVEL knobs. A MIC ON/OFF switch is also present.
- **Program (PGM) Channels 1-4:** Each of the four program channels includes a LINE/PHONO input selector switch, GAIN control, 3-band EQ (HIGH, MID, LOW), and a channel fader. A CUE button allows for pre-listening through headphones.
- **Crossfader:** Located at the bottom center, this fader allows for smooth transitions between channels assigned to A and B. An assign switch for each channel determines if it's routed to A, B, or bypass.
- **Master Section (Right Side):** Includes controls for MASTER LEVEL, BOOTH LEVEL, and HEADPHONE LEVEL. The 3-band master EQ (HIGH, MID, LOW) with kill switches is also located here. LED VU meters provide visual feedback of the master output level.
- **Headphone Jack:** A 1/4" stereo jack for connecting headphones for monitoring.

## 3. SETUP

---

### 3.1 Rack Mounting

The Stanton RM-50 is designed for standard 19-inch rack mounting. Secure the mixer using appropriate rack screws (not included) into a stable equipment rack. Ensure adequate ventilation around the unit to prevent overheating.

### 3.2 Audio Connections

1. **Input Sources:** Connect your turntables to the PHONO inputs and CD players, media players, or other line-level devices to the LINE inputs on the rear panel. Ensure the corresponding LINE/PHONO switch on the front panel is set correctly for each channel.
2. **Microphones:** Connect dynamic microphones to the MIC 1 (XLR) or MIC 2 (1/4" jack) inputs on the front panel.
3. **Master Output:** Connect the balanced XLR MASTER OUT to your main amplifier or powered speakers.
4. **Booth Output:** Connect the BOOTH OUT to your monitor speakers or a separate amplifier for booth monitoring.
5. **Headphones:** Plug your headphones into the 1/4" HEADPHONE jack on the front panel.

### 3.3 Power Connection

Connect the provided power cord to the AC input on the rear of the mixer and then to a suitable power outlet. Ensure all connections are secure before powering on the unit.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Powering On/Off

Always ensure all volume controls (Master, Booth, Channel Faders) are set to their minimum position before powering on or off the mixer to prevent sudden loud noises or potential damage to speakers.

- **To Power On:** Press the POWER switch located on the rear panel.
- **To Power Off:** Press the POWER switch again.

## 4.2 Basic Mixing

1. **Input Selection:** For each channel, select LINE or PHONO using the switch above the GAIN knob, corresponding to your connected source.
2. **Gain Adjustment:** Adjust the GAIN knob for each active channel until the signal level is strong but not clipping (indicated by the channel's peak LED).
3. **Channel Faders:** Slowly raise the channel fader for the desired audio source.
4. **Master Output:** Adjust the MASTER LEVEL knob to control the overall output volume to your main sound system.
5. **Booth Output:** Adjust the BOOTH LEVEL knob for your monitor speakers.
6. **Headphone Monitoring:** Press the CUE button on any channel to pre-listen to its audio through your headphones. Adjust the HEADPHONE LEVEL knob for comfortable listening.

## 4.3 Equalization (EQ)

- **Channel EQ:** Use the HIGH, MID, and LOW knobs on each channel to adjust the tonal characteristics of individual audio sources.
- **Master EQ:** The 3-band master EQ allows for overall tonal adjustment of the mixed output. The kill switches provide a complete cut (-60 dB) for dramatic effects.

## 4.4 Crossfader Operation

The crossfader allows for smooth transitions between channels assigned to either side A or B. Use the assign switches above each channel fader to route the channel to A, B, or bypass the crossfader entirely.

- Move the crossfader to the left to hear channels assigned to A.
- Move the crossfader to the right to hear channels assigned to B.
- Center position blends both A and B channels.

## 4.5 Microphone Usage

Connect your microphone, then press the MIC ON/OFF switch to activate the microphone channel. Adjust the MIC LEVEL knob and the HIGH, MID, LOW EQ controls for the desired sound. Be mindful of feedback when using microphones.

# 5. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your Stanton RM-50 DJ Mixer.

- **Cleaning:** Regularly wipe the exterior of the mixer with a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or waxes. Do not spray liquids directly onto the unit.
- **Ventilation:** Ensure that the ventilation openings are not blocked. Dust accumulation can lead to overheating.
- **Storage:** When not in use for extended periods, store the mixer in a cool, dry place, protected from dust and extreme temperatures.
- **Fader Care:** Keep faders and knobs free from dust and debris. Specialized fader lubricants can be used if faders become stiff or noisy, but consult a professional if unsure.

# 6. TROUBLESHOOTING

---

If you encounter issues with your RM-50 mixer, refer to the following common problems and solutions before contacting support.

Problem	Possible Cause	Solution
No sound output	<ul style="list-style-type: none"> <li>• Power not connected or switched on.</li> <li>• Master/channel faders down.</li> <li>• Incorrect input selection.</li> <li>• Cables not connected properly.</li> </ul>	<ul style="list-style-type: none"> <li>• Check power connection and switch.</li> <li>• Raise Master and channel faders.</li> <li>• Verify LINE/PHONO switch setting.</li> <li>• Ensure all audio cables are securely connected.</li> </ul>
Distorted sound	<ul style="list-style-type: none"> <li>• Input GAIN too high.</li> <li>• Master output level too high.</li> <li>• Damaged cables.</li> </ul>	<ul style="list-style-type: none"> <li>• Reduce input GAIN until peak LEDs no longer clip.</li> <li>• Lower MASTER LEVEL.</li> <li>• Replace suspect cables.</li> </ul>
Microphone feedback	<ul style="list-style-type: none"> <li>• Microphone too close to speakers.</li> <li>• Microphone gain too high.</li> <li>• EQ settings boosting frequencies excessively.</li> </ul>	<ul style="list-style-type: none"> <li>• Reposition microphone or speakers.</li> <li>• Reduce MIC LEVEL.</li> <li>• Adjust MIC EQ to cut problematic frequencies.</li> </ul>

## 7. SPECIFICATIONS


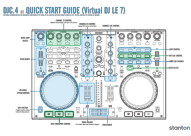
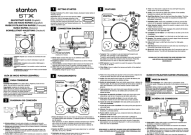



Below are the technical specifications for the Stanton RM-50 DJ Mixer:


- **Brand:** Stanton
- **Model Number:** RM50
- **Product Dimensions:** 48.26 x 13.49 x 21.01 cm (19 x 5.3 x 8.3 inches)
- **Item Weight:** 3.39 kg (7.47 lbs)
- **Number of Channels:** 4
- **Power Source:** Corded Electric
- **Output Connector Type:** XLR (Balanced Master Output)
- **Inputs:** 9 Line, 4 Phono, 4 Mic
- **EQ:** 3-band master EQ with kill (+9/-60 dB)
- **Crossfader:** Fully assignable (A, B, bypass)
- **Additional Outputs:** Booth Output

## 8. WARRANTY AND SUPPORT

 For detailed warranty information, please refer to the warranty card included with your product or visit the official Stanton website. For technical support or service inquiries, please contact Stanton customer service through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

You can find more information and support resources on the [Stanton Store on Amazon](#).

 <p>stanton STANTON AUDIO, INC. www.stanton.com</p>	<p><a href="#">Stanton M.303 Professional DJ Mixer Owner's Manual</a></p> <p>Comprehensive owner's manual for the Stanton M.303 Professional DJ Mixer, covering functions, technical specifications, maintenance, and warranty information.</p>
	<p><a href="#">Stanton DJC.4 Quick Start Guide for Virtual DJ LE 7</a></p> <p>Get started quickly with the Stanton DJC.4 Virtual DJ Controller and Virtual DJ LE 7 software. This guide covers unpacking, setup, system requirements, connections, and software installation for digital DJs.</p>
	<p><a href="#">Stanton STX Quickstart Guide: Setup, Features, and Connections</a></p> <p>Concise HTML guide for the Stanton STX turntable, covering package contents, connection diagram, key features, and basic operation. Includes multilingual content merged into English.</p>
	<p><a href="#">Stanton STX User Guide: Portable Scratch Turntable</a></p> <p>Comprehensive user guide for the Stanton STX portable scratch turntable, covering setup, features, connections, technical specifications, and usage instructions.</p>
	<p><a href="#">Stanton STX User Guide</a></p> <p>This user guide provides comprehensive instructions for setting up and operating the Stanton STX portable DJ player, detailing its features, connections, and technical specifications for optimal performance.</p>
	<p><a href="#">VirtualDJ 8 Stanton DJC.4 Operation Guide</a></p> <p>This operation guide provides detailed instructions for using the VirtualDJ 8 software with the Stanton DJC.4 controller, covering installation, setup, hardware layout, mixer functions, deck controls, effects, loops, hotcues, samples, and audio configurations.</p>

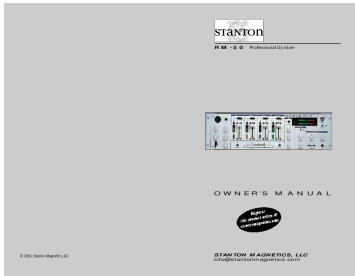

## [\[pdf\]](#) User Manual Owner's Manual Instructions Warranty

Laurent OWNER S MA N U A L RM50 owners manual stantondj manuals 80 rm50 |||

2001, Stanton Magnetix, LLC RM-50 Professional DJ mixer OWNER S M A N U A L STANTON MAGNETICS, LLC info stantonmagnetix.com Thank you for making Stanton your first choice in professional DJ mixers. This new, innovative family of mixers has been developed with input from the professional DJ com...

lang:en **score:28** filesize: 373.06 K page\_count: 4 document date: 2001-03-27

Jands Pty Ltd - ABN 45 001 187 837			
Spare Parts Pricelist			
Australian Dollars			
Part Code	Description	Qty	RRP excl GST
ASM-AXIS-ENC	Axis Encoder Encoder	EACH	1,500.00
ASM-AXIS-CC	Axis Controller Unit	EACH	1,000.00
BSS-05-1000-05	Standard PCB 1000 05	EACH	800.00
BSS-05-1001	Power Supply 1000 01	EACH	1,000.00
BSS-05-1002	Standard PCB 1000 02	EACH	1,000.00
BSS-05-1003	Power PCB 1000 03	EACH	1,000.00
BSS-05-1004	Power PCB 1000 04	EACH	1,000.00
BSS-05-1005	Power PCB 1000 05	EACH	1,000.00
BSS-05-1006	Power PCB 1000 06	EACH	1,000.00
BSS-05-1007	Power PCB 1000 07	EACH	1,000.00
BSS-05-1008	Power PCB 1000 08	EACH	1,000.00
BSS-05-1009	Power PCB 1000 09	EACH	1,000.00
BSS-05-1010	Power PCB 1000 10	EACH	1,000.00
BSS-05-1011	Power PCB 1000 11	EACH	1,000.00
BSS-05-1012	Power PCB 1000 12	EACH	1,000.00
BSS-05-1013	Power PCB 1000 13	EACH	1,000.00
BSS-05-1014	Power PCB 1000 14	EACH	1,000.00
BSS-05-1015	Power PCB 1000 15	EACH	1,000.00
BSS-05-1016	Power PCB 1000 16	EACH	1,000.00
BSS-05-1017	Power PCB 1000 17	EACH	1,000.00
BSS-05-1018	Power PCB 1000 18	EACH	1,000.00
BSS-05-1019	Power PCB 1000 19	EACH	1,000.00
BSS-05-1020	Power PCB 1000 20	EACH	1,000.00
BSS-05-1021	Power PCB 1000 21	EACH	1,000.00
BSS-05-1022	Power PCB 1000 22	EACH	1,000.00
BSS-05-1023	Power PCB 1000 23	EACH	1,000.00
BSS-05-1024	Power PCB 1000 24	EACH	1,000.00
BSS-05-1025	Power PCB 1000 25	EACH	1,000.00
BSS-05-1026	Power PCB 1000 26	EACH	1,000.00
BSS-05-1027	Power PCB 1000 27	EACH	1,000.00
BSS-05-1028	Power PCB 1000 28	EACH	1,000.00
BSS-05-1029	Power PCB 1000 29	EACH	1,000.00
BSS-05-1030	Power PCB 1000 30	EACH	1,000.00
BSS-05-1031	Power PCB 1000 31	EACH	1,000.00
BSS-05-1032	Power PCB 1000 32	EACH	1,000.00
BSS-05-1033	Power PCB 1000 33	EACH	1,000.00
BSS-05-1034	Power PCB 1000 34	EACH	1,000.00
BSS-05-1035	Power PCB 1000 35	EACH	1,000.00
BSS-05-1036	Power PCB 1000 36	EACH	1,000.00
BSS-05-1037	Power PCB 1000 37	EACH	1,000.00
BSS-05-1038	Power PCB 1000 38	EACH	1,000.00
BSS-05-1039	Power PCB 1000 39	EACH	1,000.00
BSS-05-1040	Power PCB 1000 40	EACH	1,000.00
BSS-05-1041	Power PCB 1000 41	EACH	1,000.00
BSS-05-1042	Power PCB 1000 42	EACH	1,000.00
BSS-05-1043	Power PCB 1000 43	EACH	1,000.00
BSS-05-1044	Power PCB 1000 44	EACH	1,000.00
BSS-05-1045	Power PCB 1000 45	EACH	1,000.00
BSS-05-1046	Power PCB 1000 46	EACH	1,000.00
BSS-05-1047	Power PCB 1000 47	EACH	1,000.00
BSS-05-1048	Power PCB 1000 48	EACH	1,000.00
BSS-05-1049	Power PCB 1000 49	EACH	1,000.00
BSS-05-1050	Power PCB 1000 50	EACH	1,000.00
BSS-05-1051	Power PCB 1000 51	EACH	1,000.00
BSS-05-1052	Power PCB 1000 52	EACH	1,000.00
BSS-05-1053	Power PCB 1000 53	EACH	1,000.00
BSS-05-1054	Power PCB 1000 54	EACH	1,000.00
BSS-05-1055	Power PCB 1000 55	EACH	1,000.00
BSS-05-1056	Power PCB 1000 56	EACH	1,000.00
BSS-05-1057	Power PCB 1000 57	EACH	1,000.00
BSS-05-1058	Power PCB 1000 58	EACH	1,000.00
BSS-05-1059	Power PCB 1000 59	EACH	1,000.00
BSS-05-1060	Power PCB 1000 60	EACH	1,000.00
BSS-05-1061	Power PCB 1000 61	EACH	1,000.00
BSS-05-1062	Power PCB 1000 62	EACH	1,000.00
BSS-05-1063	Power PCB 1000 63	EACH	1,000.00
BSS-05-1064	Power PCB 1000 64	EACH	1,000.00
BSS-05-1065	Power PCB 1000 65	EACH	1,000.00
BSS-05-1066	Power PCB 1000 66	EACH	1,000.00
BSS-05-1067	Power PCB 1000 67	EACH	1,000.00
BSS-05-1068	Power PCB 1000 68	EACH	1,000.00
BSS-05-1069	Power PCB 1000 69	EACH	1,000.00
BSS-05-1070	Power PCB 1000 70	EACH	1,000.00
BSS-05-1071	Power PCB 1000 71	EACH	1,000.00
BSS-05-1072	Power PCB 1000 72	EACH	1,000.00
BSS-05-1073	Power PCB 1000 73	EACH	1,000.00
BSS-05-1074	Power PCB 1000 74	EACH	1,000.00
BSS-05-1075	Power PCB 1000 75	EACH	1,000.00
BSS-05-1076	Power PCB 1000 76	EACH	1,000.00
BSS-05-1077	Power PCB 1000 77	EACH	1,000.00
BSS-05-1078	Power PCB 1000 78	EACH	1,000.00
BSS-05-1079	Power PCB 1000 79	EACH	1,000.00
BSS-05-1080	Power PCB 1000 80	EACH	1,000.00
BSS-05-1081	Power PCB 1000 81	EACH	1,000.00
BSS-05-1082	Power PCB 1000 82	EACH	1,000.00
BSS-05-1083	Power PCB 1000 83	EACH	1,000.00
BSS-05-1084	Power PCB 1000 84	EACH	1,000.00
BSS-05-1085	Power PCB 1000 85	EACH	1,000.00
BSS-05-1086	Power PCB 1000 86	EACH	1,000.00
BSS-05-1087	Power PCB 1000 87	EACH	1,000.00
BSS-05-1088	Power PCB 1000 88	EACH	1,000.00
BSS-05-1089	Power PCB 1000 89	EACH	1,000.00
BSS-05-1090	Power PCB 1000 90	EACH	1,000.00
BSS-05-1091	Power PCB 1000 91	EACH	1,000.00
BSS-05-1092	Power PCB 1000 92	EACH	1,000.00
BSS-05-1093	Power PCB 1000 93	EACH	1,000.00
BSS-05-1094	Power PCB 1000 94	EACH	1,000.00
BSS-05-1095	Power PCB 1000 95	EACH	1,000.00
BSS-05-1096	Power PCB 1000 96	EACH	1,000.00
BSS-05-1097	Power PCB 1000 97	EACH	1,000.00
BSS-05-1098	Power PCB 1000 98	EACH	1,000.00
BSS-05-1099	Power PCB 1000 99	EACH	1,000.00
BSS-05-1100	Power PCB 1000 100	EACH	1,000.00

## [\[pdf\]](#) User Manual Price List

RRP Pricelist Current susant Download User Manual For JBL Prx525 Jands Spare Parts Price List jands

au data assets file 0004 9967 |||

Jands Pty Ltd - ABN 45 001 187 837 Spare Parts Pricelist Australian Dollars Stock

 
Code ASM-AXIS-A ... PDJ-22 Penny Giles Fader For M304 Crossfader For

PRO80;PRO100 Crossfader For PRO30 Crossfader For **RM50**; RM80; RM100

Crossfader For RM22 Crossfader Replaces CFRM3 For RM3 and RM3S Crossfader

For SA3 ...

lang:en **score:14** filesize: 525.37 K page\_count: 187 document date: 2008-05-31

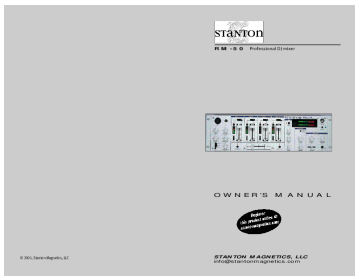

## [\[pdf\]](#) User Manual Instructions Warranty

Laurent user manualSTANTON products from Warehouse Sound Systemsv1warehousesound r

stantonRM50manual manualuser manualStanton RM50 4ch Club MixerSTANTON Systemsv1v1w

warehousesound stantonRM50manualwarehousesound |||

2001, Stanton Magnetix, LLC RM-50 Professional DJ mixer OWNER S M A N U A L STANTON MAGNETICS, LLC info stantonmagnetix.com Thank you for making Stanton your first choice in professional DJ mixers. This new, innovative family of mixers has been developed with input from the professional DJ com...

lang:en **score:13** filesize: 235.59 K page\_count: 4 document date: 2018-04-20