

[Manuals.plus](#) /

> [Sony](#) /

> Sony D-CJ01 CD Walkman MP3 Player Instruction Manual

Sony D-CJ01

Sony D-CJ01 CD Walkman MP3 Player Instruction Manual

Model: D-CJ01

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Sony D-CJ01 CD Walkman. Please read this manual thoroughly before using the device and retain it for future reference.

SAFETY INFORMATION

- Do not expose the unit to extreme temperatures, direct sunlight, dust, or mechanical shock.
- Avoid using the unit in places subject to high humidity or poor ventilation.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Prolonged listening at high volume levels can cause hearing damage. Adjust volume to a moderate level.
- Keep batteries out of reach of children. If swallowed, consult a doctor immediately.

PACKAGE CONTENTS

Verify that your package contains the following items:

- Sony D-CJ01 CD Walkman Unit
- Earphones or Earbuds
- Instruction Manual (this document)

PRODUCT OVERVIEW

The Sony D-CJ01 CD Walkman is a portable CD player designed for both standard audio CDs and MP3 CD-R/RW discs. It features advanced G-Protection for skip-free playback and Digital Mega Bass for enhanced audio quality.

Key Features:

- **MP3 Playback:** Supports MP3 files on CD-R/RW discs with ID3-tag indication.
- **G-Protection:** Advanced skip protection for uninterrupted listening during active use.

- **Digital Mega Bass:** Enhances low-frequency sounds for a richer audio experience.
- **Multi Session Disc Playback:** Compatible with discs recorded in multiple sessions.
- **VBR (Variable Bit-Rate) Playback:** Supports MP3 files encoded with variable bit rates.
- **Playback Modes:** Includes Repeat, Resume, and Random play modes.
- **LCD Display:** Large, easy-to-read LCD for track information and settings.

Controls and Display:

The front panel of the D-CJ01 features various controls for playback, navigation, and sound adjustments, along with an LCD for displaying track information and settings.



Image: Front view of the Sony D-CJ01 CD Walkman. Visible controls include PLAY MODE, REPEAT, ENTER, SOUND, DISPLAY, FOLDER -, FOLDER +, PLAY/PAUSE, STOP, SKIP BACK, SKIP FORWARD, VOL -, VOL +, and CHARGE indicators. The LCD screen is also visible.

SETUP

1. Installing Batteries:

The D-CJ01 operates on two AA batteries (not included). For optimal performance and battery life, use high-quality alkaline or rechargeable NiMH batteries.

1. Locate the battery compartment on the underside of the unit.
2. Slide the battery compartment cover in the direction indicated by the arrow to open it.



Image: Back view of the Sony D-CJ01 CD Walkman with the battery compartment cover slid open, revealing the empty battery slots.

3. Insert two AA batteries according to the polarity (+/-) markings inside the compartment.



Image: Close-up of the open battery compartment, showing the two empty slots for AA batteries with polarity indicators.

4. Close the battery compartment cover by sliding it back until it clicks into place.

2. Connecting Headphones:

Plug your earphones or earbuds into the 3.5mm headphone jack located on the side of the unit. Ensure the plug is fully inserted.

OPERATING INSTRUCTIONS

1. Loading a CD:

1. Open the CD compartment lid by sliding the OPEN switch.
2. Place a CD or MP3 CD-R/RW disc onto the spindle with the label side facing up.
3. Gently press the disc until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

2. Basic Playback:

- Press the **PLAY/PAUSE** button to start playback.
- Press **PLAY/PAUSE** again to pause playback. Press it once more to resume.
- Press the **STOP** button to stop playback.
- To skip to the next track, press the **SKIP FORWARD** button (▶▶).
- To go back to the beginning of the current track or the previous track, press the **SKIP BACK** button (◀◀).

3. Volume Control:

Use the **VOL +** and **VOL -** buttons to adjust the listening volume to a comfortable level.

4. MP3 Disc Navigation:

When playing an MP3 CD, you can navigate through folders and tracks:

- Press **FOLDER +** to move to the next folder.
- Press **FOLDER -** to move to the previous folder.
- The LCD will display ID3 tag information (track title, artist) if available on the MP3 files.

5. Playback Modes:

Press the **PLAY MODE** button repeatedly to cycle through available playback modes:

- **Normal Play:** Plays tracks in order.
- **Repeat:** Repeats the current track or all tracks.
- **Random:** Plays tracks in a random order.
- **Resume:** Automatically resumes playback from where it was last stopped.

6. Sound Settings:

Press the **SOUND** button to activate or deactivate the Digital Mega Bass feature for enhanced bass response.

MAINTENANCE

Cleaning the Unit:

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- For the lens inside the CD compartment, use a commercially available CD lens cleaner.

Battery Care:

- Remove batteries if the unit will not be used for an extended period to prevent leakage.

- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

If you experience issues with your D-CJ01, refer to the following common problems and solutions:

- **No Power:**
 - Check if batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
- **Disc Does Not Play:**
 - Ensure the disc is clean and free of scratches or smudges.
 - Make sure the disc is inserted correctly with the label side up.
 - Verify the disc type is compatible (standard audio CD or MP3 CD-R/RW).
 - Close the CD compartment lid completely.
- **Sound Skips or Distorted:**
 - Clean the disc.
 - Ensure the G-Protection feature is active (if applicable).
 - Check headphone connection.
 - Avoid strong vibrations or impacts during playback.
- **MP3 Files Not Recognized:**
 - Ensure the disc is a CD-R/RW formatted with MP3 files.
 - Check that the MP3 files are not corrupted and meet standard specifications.

SPECIFICATIONS



Image: Back view of the Sony D-CJ01 CD Walkman, showing the model number D-CJ01, brand Sony, and other regulatory and manufacturing details.

- **Brand:** Sony
- **Model Number:** D-CJ01
- **Model Name:** Walkman
- **Connectivity Technology:** Auxiliary (3.5mm Jack)
- **Supported Audio Format:** MP3
- **Media Format Type:** CD-R, CD-RW
- **Number of Discs:** 1
- **Number of Channels:** 2
- **Power Source:** AA Batteries (x2)
- **Special Feature:** Portable, MP3 Player, G-Protection

WARRANTY AND SUPPORT

Warranty information for the Sony D-CJ01 CD Walkman is typically provided in a separate warranty card included with the product or available on the official Sony website. For detailed warranty terms, service, or technical support, please refer to the official Sony support channels in your region.

Please visit the official Sony website or contact their customer service for the most up-to-date information regarding product support and warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B00006I5SY>

More documents and user manuals: <https://manuals.plus/>