

[Manuals.plus](#) /

› [X-Acto](#) /

› X-ACTO Powerhouse Electric Pencil Sharpener User Manual

X-Acto 1792LMR

X-ACTO Powerhouse Electric Pencil Sharpener

Model: 1792LMR

INTRODUCTION

The X-ACTO Powerhouse Electric Pencil Sharpener is engineered for reliable performance in demanding environments such as large offices and classrooms. It features advanced sharpening technology designed to deliver precise, fine-point tips consistently. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your sharpener.

SAFETY INFORMATION

- Always ensure the sharpener is unplugged before cleaning or performing any maintenance.
- Keep fingers and other objects away from the sharpening mechanism to prevent injury.
- Do not immerse the sharpener in water or other liquids.
- Use only with standard pencils. Avoid sharpening crayons, chalk, or other non-pencil items.
- Keep out of reach of small children.

SETUP

1. **Unpacking:** Carefully remove the sharpener from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the sharpener on a stable, flat surface. The unit is equipped with suction cup feet on the bottom to help secure it in place and prevent movement during use. Press down firmly to engage the suction cups.
3. **Power Connection:** Plug the power cord into a standard electrical outlet. Ensure the cord is not frayed or damaged.



Image: Back view of the X-ACTO Powerhouse Electric Pencil Sharpener, highlighting the power cord connection.

OPERATING INSTRUCTIONS

1. **Insert Pencil:** Gently insert a pencil into the sharpening hole on the front of the unit.
2. **Automatic Sharpening:** The sharpener will automatically begin sharpening when the pencil is inserted. Apply light pressure.
3. **PencilSaver Technology:** The built-in PencilSaver technology detects when the pencil has reached a perfect point and automatically stops the sharpening process, preventing oversharpening and extending pencil life. The motor sound will change or cease when sharpening is complete.
4. **Remove Pencil:** Once sharpening is complete, remove the pencil.



Image: Front view of the X-ACTO Powerhouse Electric Pencil Sharpener, illustrating the pencil insertion point.

MAINTENANCE

- 1. **Emptying Shavings:** Regularly check the transparent shavings receptacle. When full, unplug the sharpener, pull out the drawer, and empty the shavings into a waste bin. Reinsert the drawer securely.
- 2. **Cleaning the Cutter:** If pencil shavings accumulate around the cutter mechanism, unplug the unit and use a soft brush or cotton swab to carefully remove debris. Do not use water or cleaning solutions directly on the cutter.



Image: Front view of the X-ACTO Powerhouse Electric Pencil Sharpener, highlighting the transparent shavings receptacle for easy monitoring.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Pencil not sharpening or sharpens unevenly.	Dull or damaged cutter; pencil not inserted correctly; shavings receptacle full.	Ensure pencil is inserted straight. Empty shavings receptacle. If problem persists, the cutter may need cleaning or replacement.
Pencil lead breaks frequently.	Excessive pressure applied; soft lead pencil; worn cutter.	Apply lighter pressure. Use pencils with harder lead if possible. Clean the cutter.
Shavings leak from the unit.	Shavings receptacle is full or not properly seated; internal accumulation.	Empty the shavings receptacle and ensure it is securely reinserted. Check for any blockages around the guide for the tray.
Sharpener is unusually loud.	Internal debris or motor issue.	Unplug and carefully inspect the cutter area for any lodged debris. If the noise persists, contact customer support.

SPECIFICATIONS

- Product Dimensions:** 8.75 x 4.25 x 5.75 inches
- Item Weight:** 1 pound
- Manufacturer:** Elmers
- Item Model Number:** 1792LMR
- Color:** Blue
- Power Source:** Electric
- Included Components:** Electric Pencil Sharpener

WARRANTY AND SUPPORT

This X-ACTO Powerhouse Electric Pencil Sharpener comes with an **8-year warranty**. For warranty claims, technical support, or further assistance, please refer to the contact information provided on the product packaging or visit the official X-Acto website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question