

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KINYO](#) /
- › [KINYO KV-822 2-Way 8mm Rewinder User Manual](#)

KINYO KV-822

KINYO KV-822 2-Way 8mm Rewinder User Manual

Model: KV-822

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your KINYO KV-822 2-Way 8mm Rewinder. Please read this manual thoroughly before using the device and retain it for future reference. The KINYO KV-822 is designed to rewind and fast-forward 8mm video cassettes, helping to preserve your camcorder's internal mechanisms.

SAFETY INFORMATION

To ensure safe operation and prevent damage to the device or injury, please observe the following precautions:

- Do not expose the rewinder to moisture, rain, or extreme temperatures.
- Avoid dropping the device or subjecting it to strong impacts.
- Use only the specified power adapter or batteries.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep the device away from sources of heat and direct sunlight.
- Ensure proper ventilation around the unit during operation.

PACKAGE CONTENTS

Verify that all items are present in the package:

- KINYO KV-822 2-Way 8mm Rewinder Unit
- AC/DC Power Adapter (if included with your model)
- User Manual (this document)

PRODUCT OVERVIEW

The KINYO KV-822 is a dedicated 8mm tape rewinder designed for convenience and to reduce wear on your camcorder's delicate mechanisms. It features automatic brake control and LED direction indicators.



Figure 1: KINYO KV-822 2-Way 8mm Rewinder in its retail packaging. The image displays the device itself, along with branding and key features like "Rewind • F. Forward • Auto Break Control".



Figure 2: Top view of the KINYO KV-822 2-Way 8mm Rewinder, showing the tape compartment, control buttons (FF, REW, STOP, START), and LED indicators. The label "FLAP SIDE FACES OUT" is visible near the tape slot.

Controls and Indicators:

- **FF (Fast Forward) Button:** Initiates fast-forwarding of the tape.
- **REW (Rewind) Button:** Initiates rewinding of the tape.
- **STOP Button:** Halts any tape movement.
- **START Button:** Begins the selected operation (FF or REW).
- **LED Direction Indicators:** Lights up to show the current direction of tape movement (Fast Forward or Rewind).
- **Tape Compartment:** Area where the 8mm video cassette is inserted.

SETUP

Powering the Device:

The KINYO KV-822 can be powered by either an AC/DC adapter or four (4) AA batteries.

1. Using AC/DC Adapter:

- Locate the DC input jack on the rewinder.
- Connect the AC/DC power adapter to the DC input jack.
- Plug the AC/DC power adapter into a standard wall outlet.

2. Using AA Batteries:

- Open the battery compartment cover, usually located on the bottom or side of the unit.

- Insert four (4) fresh AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
- Close the battery compartment cover securely.

OPERATING INSTRUCTIONS

Follow these steps to rewind or fast-forward your 8mm video cassettes:

1. **Insert Tape:** Gently insert an 8mm video cassette into the tape compartment. Ensure the "FLAP SIDE FACES OUT" as indicated on the unit (refer to Figure 2). The tape should slide in smoothly. Do not force it.
2. **Select Direction:**
 - For Fast Forward, press the **FF** button.
 - For Rewind, press the **REW** button.

The corresponding LED direction indicator will illuminate.

3. **Start Operation:** Press the **START** button. The rewinder will begin the selected operation. The LED indicator will remain lit during the process. The unit features an automatic brake control system for smooth operation.
4. **Stop Operation:** To stop the tape movement at any time, press the **STOP** button. The tape will halt, and the LED indicator will turn off.
5. **Remove Tape:** Once the operation is complete (or stopped), gently remove the 8mm video cassette from the compartment. The unit includes an auto tape leader rollback system to protect the tape.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your rewinder.

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the unit. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the rewinder in a cool, dry place, away from direct sunlight and dust. If storing for an extended period, remove the batteries to prevent leakage.
- **Tape Care:** Ensure that the 8mm cassettes you use are clean and free from damage to prevent issues with the rewinder.

TROUBLESHOOTING

If you encounter issues with your KINYO KV-822, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Unit does not power on.	No power, dead batteries, or faulty adapter.	Check AC/DC adapter connection or replace AA batteries. Ensure batteries are inserted with correct polarity.
Tape does not move or moves slowly.	Low battery power, tape jammed, or mechanism issue.	Replace batteries or use AC/DC adapter. Ensure tape is inserted correctly and not damaged. Do not force tape.
LED indicators do not light up.	Unit not powered, or internal fault.	Verify power supply. If power is confirmed and indicators still fail, contact support.
Tape gets damaged or chewed.	Damaged tape, incorrect insertion, or internal mechanism fault.	Ensure tape is in good condition and inserted correctly. If problem persists, discontinue use and contact support.

SPECIFICATIONS

Feature	Detail
Model Number	KV-822
Brand	KINYO
Product Dimensions	9.5 x 6 x 2.8 inches
Item Weight	1.2 pounds
Power Source	AC/DC Adapter or 4 AA Batteries
Key Features	Automatic brake control, Auto tape leader rollback system, LED direction indicators
Date First Available	August 28, 2002

WARRANTY AND SUPPORT

Specific warranty details for the KINYO KV-822 are not provided in this document. Please refer to the warranty card included with your purchase or contact KINYO customer support for information regarding warranty coverage and service.

For technical assistance or further inquiries, please visit the official KINYO website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

© 2023 KINYO. All rights reserved. Information in this manual is subject to change without notice.


Related Documents - KV-822

	<p>KINYO i3 V8 Bluetooth Ear Clip User Manual and Specifications</p> <p>Comprehensive user manual for the KINYO i3 V8 Bluetooth ear clip headphones, covering setup, usage, features, troubleshooting, and warranty information.</p>
	<p>KINYO Game Zone 5.1 (GZ-501) User's Guide: Setup, Controls, and Specifications</p> <p>User's guide for the KINYO Game Zone 5.1 speaker system (Model GZ-501). Features setup, connection diagrams, front panel and remote control functions, troubleshooting tips, and detailed specifications for speakers and remote.</p>
	<p>MOVIMOT@ Unit Profile: Communication and Fieldbus Interfaces Manual</p> <p>This manual provides comprehensive information on the MOVIMOT@ Unit Profile, detailing its communication and fieldbus interfaces, including PROFIBUS, INTERBUS, and RS-485. It covers functions, configurations, connections, startup procedures, and technical data for SEW-EURODRIVE's MOVIMOT@ AC motors.</p>



[Panasonic Document Scanners: Handy Guide for Business Productivity](#)

Explore the range of Panasonic Document Scanners with this handy guide. Discover features, specifications, and model details to enhance your business's document management and productivity.

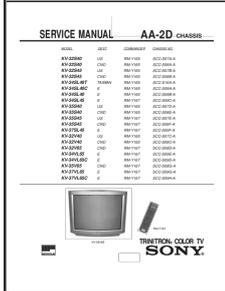

[Sony Trinitron Color TV Service Manual AA-2D Chassis](#)

Official service manual for Sony Trinitron Color TVs (AA-2D Chassis). Includes specifications, disassembly, adjustments, diagrams, troubleshooting, and parts lists for multiple models.



[Panasonic KV-S Scanner Driver for Mac \(ICA\) Installation and Uninstallation Guide](#)

Guide for installing and uninstalling the Panasonic KV-S ICA scanner driver on Mac OS X. Includes system requirements, installation steps, uninstallation steps, and scanning information.