

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GPX](#) /

› [GPX D504 AM/FM Digital Clock Radio User Manual](#)

GPX D504

GPX D504 AM/FM Digital Clock Radio User Manual

Model: D504

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your GPX D504 AM/FM Digital Clock Radio. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.



Figure 1: GPX D504 AM/FM Digital Clock Radio. This image displays the front of the clock radio, featuring a large red digital time display, several control buttons on the top surface, and an integrated speaker grille. The radio is black with a curved, compact design.

SETUP

Power Connection

1. Unpack the GPX D504 clock radio and all accessories from its packaging.
2. Connect the AC power cord to a standard wall outlet.
3. For battery backup, insert a 9V battery (not included) into the battery compartment located on the bottom of the unit.
This battery will preserve time and alarm settings during a power outage.

Setting the Time

1. Press and hold the **TIME SET** button. The hour digits will begin to flash.
2. Press the **HOUR** button repeatedly to set the correct hour. Pay attention to the PM indicator if applicable.
3. Press the **MINUTE** button repeatedly to set the correct minute.

4. Release the **TIME SET** button to confirm the time.

OPERATING INSTRUCTIONS

Radio Operation (AM/FM)

1. Press the **POWER** button to turn on the radio.
2. Press the **BAND** button to select either AM or FM band.
3. Use the **TUNING** knob or buttons to tune to your desired radio station.
4. Adjust the volume using the **VOLUME** control.
5. To turn off the radio, press the **POWER** button again.

Setting the Alarm

1. Press and hold the **ALARM SET** button. The alarm hour digits will flash.
2. Press the **HOUR** button to set the desired alarm hour.
3. Press the **MINUTE** button to set the desired alarm minute.
4. Release the **ALARM SET** button.
5. To select the alarm source (radio or buzzer), press the **ALARM MODE** button repeatedly until the desired icon appears on the display.

Snooze Function

When the alarm sounds, press the large **SNOOZE** bar located on top of the unit. The alarm will temporarily stop and sound again after approximately 9 minutes.

Sleep Timer

The adjustable 120-minute sleep timer allows the radio to play for a set duration before automatically turning off. To activate, press the **SLEEP** button repeatedly to cycle through available sleep times (e.g., 120, 90, 60, 30, 15 minutes, or OFF).

MAINTENANCE

Cleaning

- Unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

Battery Replacement

- If the battery backup is not functioning during a power outage, replace the 9V battery in the compartment.
- Ensure correct polarity when inserting the new battery.
- Dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not power on.	Power cord not securely plugged in.	Ensure the power cord is firmly connected to the unit and the wall outlet.
Radio reception is poor.	Antenna not extended or positioned correctly. Interference from other electronic devices.	Extend the FM wire antenna fully. For AM, rotate the unit for best reception. Move the unit away from other electronics.
Alarm does not sound.	Alarm not set or alarm volume too low. Alarm mode set incorrectly.	Verify alarm time and ensure alarm is activated. Check alarm volume. Ensure alarm mode is set to radio or buzzer.
Time display is incorrect after power outage.	Battery backup is dead or missing.	Replace the 9V battery in the battery compartment.

SPECIFICATIONS

Model: D504

Brand: GPX

Power Source: AC 120V ~ 60Hz, 9V battery for backup (not included)

Radio Frequency: AM 530-1700 kHz, FM 88-108 MHz

Display Type: Digital LED

Special Features: Timer, Snooze, Wake to Music/Alarm

Dimensions (Approx.): 15.49 cm (L) x 14.73 cm (W) x 7.11 cm (H)

Weight (Approx.): 544.31 g

WARRANTY AND SUPPORT

Limited Warranty

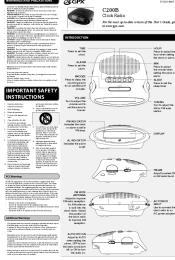
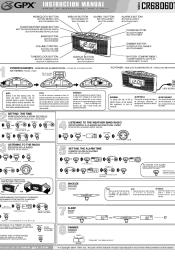
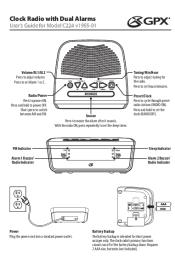
GPX, Inc. (the "Company") warrants this product against defects in materials or workmanship for a period of 90 days from the date of original purchase. This warranty applies only to the original retail purchaser and is not transferable. This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, or the use of unauthorized attachments.

Customer Support

For technical assistance or warranty service, please contact GPX Customer Support. Please have your model number (D504) and purchase date available when contacting support.

Website: www.gpx.com/support (Example link, actual link may vary)

Phone: Refer to the GPX website for current contact numbers.

	<p>GPX C200B Clock Radio User Guide</p> <p>User's guide for the GPX C200B Clock Radio, covering setup, operation, safety precautions, FCC warnings, and warranty information. Learn how to set the clock, alarm, sleep timer, and tune the radio.</p>
	<p>GPX CR6806DT Clock Radio Instruction Manual</p> <p>User guide for the GPX CR6806DT clock radio, covering setup, operation, features like alarm, radio, weather band, and troubleshooting. Includes safety warnings and care instructions.</p>
	<p>GPX C209B Clock Radio with Intelli Set™ User's Guide</p> <p>User's guide for the GPX C209B Clock Radio with Intelli Set™ featuring AM/FM radio, digital alarm, and auxiliary input. Includes setup, operation, safety instructions, and control glossary.</p>
	<p>GPX C308S Clock Radio Instruction Manual</p> <p>Comprehensive instruction manual for the GPX C308S digital clock radio, covering setup, features, operation, safety, and troubleshooting.</p>
	<p>GPX C280 Sunrise Clock Radio User's Guide</p> <p>Comprehensive user's guide for the GPX C280 Sunrise Clock Radio, detailing features, setup, operation of clock, alarm, radio, and line input, along with important safety information and company details.</p>
	<p>GPX C224 Dual Alarm Clock Radio User Guide</p> <p>User's guide for the GPX C224 Dual Alarm Clock Radio, Model C224 v1955-01. Covers setup, clock setting, alarm functions, sleep timer, radio tuning, and customer support.</p>