

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic ER240B Beard and Mustache Trimmer Instruction Manual](#)

Panasonic ER240B

Panasonic ER240B Beard and Mustache Trimmer

INSTRUCTION MANUAL

INTRODUCTION

Thank you for purchasing the Panasonic ER240B Beard and Mustache Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new trimmer. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, burns, fire, or injury, always follow these basic safety precautions:

- Avoid contact with eyes and skin.
- Do not use on infants.
- Keep away from water.
- Always unplug and allow to cool before cleaning.
- Replace blades if damaged.
- Use only as described in this manual.

PACKAGE CONTENTS

Verify that all items are included in your package:

- Panasonic ER240B Beard and Mustache Trimmer
- Adjustable Trimming Guide/Comb
- Cleaning Brush
- Mustache Comb



Image: The Panasonic ER240B Beard and Mustache Trimmer shown alongside its adjustable trimming comb.

SETUP

1. Battery Installation

1. Ensure the trimmer is switched off.
2. Twist the bottom cap of the trimmer counter-clockwise to open the battery compartment.
3. Insert two (2) AA batteries (not included) according to the polarity indicators (+/-) inside the compartment.
4. Replace the bottom cap and twist clockwise to secure it.

2. Attaching the Trimming Guide

1. Align the trimming guide with the trimmer head.
2. Gently push the guide onto the trimmer head until it clicks securely into place.

OPERATION

1. Powering On/Off

- To turn on the trimmer, slide the power switch upwards.
- To turn off the trimmer, slide the power switch downwards.

2. Adjusting Trim Length

The Panasonic ER240B features an adjustable guide comb with 5 hair length settings. To adjust the trimming length:

- With the trimming guide attached, locate the adjustment dial on the trimmer body.
- Rotate the dial to select your desired trimming length. The settings are typically indicated by numbers (e.g., 1, 2, 3, 4, 5) corresponding to different hair lengths.

3. Trimming Beard and Mustache

For best results, ensure your beard and mustache are clean and dry before trimming.

1. Select the desired trimming length using the adjustable guide comb.
2. Hold the trimmer with the blades facing the area you wish to trim.
3. Move the trimmer slowly against the direction of hair growth.
4. For precise shaping or detailing, remove the trimming guide and use the bare blades with caution.





Image: A man using the Panasonic ER240B Trimmer to trim his beard, demonstrating proper handling.

Panasonic

ER240 BP

Beard & Moustache Trimmer



Image: A man using the Panasonic ER240B Trimmer to carefully trim his mustache.

MAINTENANCE

1. Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. Ensure the trimmer is switched off and batteries are removed before cleaning.
2. Remove the trimming guide.
3. Use the provided cleaning brush to remove any hair clippings from the blades and the trimmer body.
4. The blades can be rinsed under running water. Ensure the trimmer body remains dry.
5. Allow all parts to air dry completely before reassembling or storing.

2. Blade Care

The stainless steel blades are designed to maintain maximum sharpness over an extended period. However, if the blades become dull or damaged, they should be replaced to ensure effective and comfortable trimming.

TROUBLESHOOTING

If you encounter any issues with your Panasonic ER240B Trimmer, please refer to the following common solutions:

- **Trimmer does not turn on:** Check if the batteries are inserted correctly and are not depleted. Replace with fresh AA batteries if necessary.
- **Poor trimming performance:** Ensure the blades are clean and free of hair clippings. The trimming guide might be clogged. If performance does not improve, the blades may be dull and require replacement.
- **Hair pulling:** This can occur if the blades are dull or if the trimmer is moved too quickly against hair growth. Clean the blades, ensure they are sharp, and trim slowly.

For further assistance, please contact Panasonic customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	8.11 x 4.8 x 1.42 inches
Item Weight	4.6 ounces (130 Grams)
Manufacturer	PANASONIC
Item model number	ER240B
Batteries	2 AA batteries required (not included)
Power Source	Battery Powered
Blade Material	Stainless Steel
Hair Length Adjustments	5 settings via adjustable guide comb
Operating Time	Up to 45 minutes on one set of 2 AA batteries
Recommended Uses	Beard, Mustache, Trimming
Color	Black

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the documentation included in your product packaging or visit the official Panasonic website. Keep your purchase receipt as proof of purchase.