

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Shark](#) /

› Shark Euro-Pro UV610SH Cordless Sweeper Instruction Manual

Shark UV610SH

Shark Euro-Pro UV610SH Cordless Sweeper

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Shark Euro-Pro UV610SH Cordless Sweeper. This 7.2-volt rechargeable sweeper is designed for efficient cleaning of various floor types, including bare floors, hard floors, and carpets. Its cordless design offers convenience and maneuverability, making it ideal for quick clean-ups around your home. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new sweeper.



Image: The Shark Euro-Pro UV610SH Cordless Sweeper, featuring its upright design with a handle, a long silver pole, and a silver cleaning head with a brush roll.

2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using your sweeper.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the charger plug, not the cord.
- Do not handle charger plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Do not use without dirt cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not charge the unit outdoors.
- Use only the charger supplied by the manufacturer to recharge.
- Store the appliance indoors. Put away after use to prevent accidents.

3. PACKAGE CONTENTS

Please check the contents of your package. It should include:

- Shark Euro-Pro UV610SH Cordless Sweeper Unit
- Handle Assembly
- Rechargeable Battery (integrated)
- AC Charging Adapter
- Instruction Manual

4. SETUP AND INITIAL CHARGING

4.1 Assembly

The Shark Cordless Sweeper is designed for easy assembly. Simply connect the handle assembly to the main sweeper unit. Ensure it clicks securely into place.

4.2 Initial Charging

Before first use, the sweeper requires an initial charge. Plug the AC charging adapter into a standard wall outlet and connect the other end to the charging port on the sweeper. A full initial charge takes approximately **16 to 20 hours**. The indicator light will show when the unit is charging. Do not operate the sweeper while it is charging.

5. OPERATION

5.1 Powering On/Off

To turn the sweeper on, press the power button located on the handle or main unit. Press it again to turn the sweeper off.

5.2 Sweeping Floors

- The sweeper features a powerful brush-roll action that effectively picks up debris from various surfaces.
- Its swivel head allows for easy maneuverability around furniture and obstacles.
- The low profile design enables cleaning under furniture and hard-to-reach areas.
- A powered side brush helps to clean along walls and into corners, directing dirt into the main cleaning path.
- The brush roll has a view window, allowing you to monitor the debris being collected. This window can also snap off for direct application of bristles to baseboards and corners.

5.3 Handheld Conversion

The main sweeper unit can be easily detached from the handle to convert into a handheld unit. This is ideal for cleaning stairs, upholstery, or inside automobiles.

6. MAINTENANCE

6.1 Emptying the Dirt Tray

The sweeper features a large-capacity dirt tray that collects debris without the need for bags or filters. To empty, simply remove the dirt tray from the main unit and dispose of the contents. Reattach the tray securely after emptying.

6.2 Cleaning the Brush Roll

Periodically inspect the brush roll for tangled hair, strings, or debris. To clean, turn off the sweeper and carefully remove any obstructions from the brush roll. This ensures optimal cleaning performance.

7. CHARGING THE BATTERY

To recharge the sweeper, plug the AC adapter into the charging port. A full charge typically takes **6 to 20 hours**. Once fully charged, the sweeper provides approximately **30 to 45 minutes** of runtime, depending on the type of use and surface.

- Ensure the sweeper is turned off before charging.
- Do not overcharge the battery beyond the recommended time.
- If the sweeper will not be used for an extended period, charge it fully before storing.

8. TROUBLESHOOTING

If you encounter issues with your Shark Cordless Sweeper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Sweeper does not turn on	Battery is not charged; Power button not pressed correctly	Charge the battery for 16-20 hours; Ensure power button is fully depressed
Sweeper not picking up debris effectively	Dirt tray is full; Brush roll is clogged; Battery low	Empty the dirt tray; Clean debris from the brush roll; Recharge the battery
Reduced runtime after charging	Battery not fully charged; Battery life diminishing	Ensure full 16-20 hour charge; Battery may need replacement if significantly old
Unusual noise or burning smell	Brush roll obstructed; Motor issue	Immediately turn off and unplug. Check and clear brush roll. If problem persists, discontinue use and contact customer support.
Sweeper cuts out during use	Low battery; Overheating; Loose battery connection	Recharge battery; Allow unit to cool down; Ensure battery connections are secure (if accessible)

If the problem persists after trying these solutions, please contact Shark customer support for assistance.

9. SPECIFICATIONS

- **Model:** UV610SH
- **Brand:** Shark
- **Power Source:** Battery Powered
- **Voltage:** 7.2 Volts
- **Battery Type:** Lithium-Ion
- **Runtime:** 30-45 minutes (approx.)
- **Charge Time:** 16-20 hours (initial and full charge)
- **Cleaning Path:** 11-1/2 inches
- **Weight:** 5 Pounds
- **Dimensions (Foot):** 11-1/4 x 8-1/4 inches
- **Included Components:** Brush
- **Surface Recommendation:** Bare Floor, Hard Floor, Carpets

10. WARRANTY AND SUPPORT

10.1 Manufacturer's Warranty

The Shark Euro-Pro UV610SH Cordless Sweeper comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, warranty inquiries, or to order replacement parts, please visit the official Shark website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.