Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Daewoo /
- > Daewoo DV6T811N DVD-VCR Combo Instruction Manual

Daewoo DV6T811N

Daewoo DV6T811N DVD-VCR Combo Instruction Manual

Model: DV6T811N

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Daewoo DV6T811N DVD-VCR Combo unit. Please read this manual thoroughly before using the product to ensure proper functionality and longevity. This unit combines a DVD player with a 6-head, hi-fi VCR, offering versatile media playback and recording capabilities.

PRODUCT OVERVIEW



This image displays the front panel of the Daewoo DV6T811N DVD-VCR Combo. On the left, the VCR tape slot is visible with 'DAEWOO' branding and 'Hi-Fi VHS' label. To the right, the DVD tray is located. Below these, the control panel features buttons for power, video/audio inputs, eject, channel selection, quick copy, and DVD/VHS mode selection, along with standard playback controls (play, pause, stop, fast forward, rewind, skip). The display screen is centrally located.

SETUP

1. Unpacking and Contents

Carefully remove the unit and all accessories from the packaging. Verify that the following items are included:

- Daewoo DV6T811N DVD-VCR Combo Unit
- Remote Control
- Instruction Manual (this document)
- Composite Video/Stereo Analog Audio Interconnect Cable
- Power Cord

2. Connecting to a Television or Audio System

Ensure the unit and all connected devices are powered off before making connections.

• Video Connection:

- Composite Video: Connect the yellow RCA cable from the unit's 'VIDEO OUT' jack to the 'VIDEO IN' jack on your television.
- **S-Video:** For improved picture quality, connect an S-Video cable from the unit's 'S-VIDEO OUT' jack to the 'S-VIDEO IN' jack on your television.

• Audio Connection:

- Analog Stereo Audio: Connect the red and white RCA cables from the unit's 'AUDIO OUT' jacks
 to the 'AUDIO IN' jacks on your television or stereo receiver.
- Digital Audio (for surround sound): For connection to a compatible audio/video receiver, use either the 'COAXIAL DIGITAL AUDIO OUT' or 'OPTICAL DIGITAL AUDIO OUT' port. This allows for Dolby Digital and DTS 5.1-channel surround-sound signals.
- **Power Connection:** Plug the power cord into the unit's AC inlet and then into a standard electrical outlet.

3. Initial Power On

After all connections are made, press the **POWER** button on the front panel or the remote control to turn on the unit. Follow any on-screen prompts for initial setup, such as language selection.

OPERATING INSTRUCTIONS

1. Front Panel Controls

The front panel provides essential controls for basic operation:

- **POWER:** Turns the unit on or off.
- VIDEO / AUDIO (Front Inputs): RCA jacks for connecting external video and audio sources (e.g., camcorder).
- **EJECT:** Opens/closes the DVD tray or ejects a VHS tape.
- **CHANNEL** +/-: Changes TV channels when using the built-in tuner.
- QUICK COPY: Initiates one-touch recording from DVD to VCR (for non-region-encoded discs).
- DVD / VHS SELECT: Toggles between DVD and VCR modes.
- Playback Controls (PLAY, PAUSE, STOP, FF, REW, SKIP): Standard controls for media playback.

2. Remote Control

The supplied remote control provides full access to all features and settings, including menu navigation,

advanced playback options, and timer programming. Refer to the remote control section in the full manual for a detailed button layout and function description.

3. DVD Playback

- 1. Press the **DVD/VHS SELECT** button to choose DVD mode.
- 2. Press the **EJECT** button to open the DVD tray.
- 3. Place a DVD, CD, or MP3 CD onto the tray with the label side up.
- 4. Press **EJECT** again to close the tray. Playback will usually start automatically.
- 5. Use the playback controls (PLAY, PAUSE, STOP, FF, REW, SKIP) on the front panel or remote.
- 6. The unit supports DVD-Video, CD, and MP3 CD formats.

4. VCR Playback

- 1. Press the DVD/VHS SELECT button to choose VHS mode.
- 2. Insert a VHS tape into the VCR slot. The unit will automatically load the tape.
- 3. Press PLAY to begin playback.
- 4. The 6-head design ensures smooth slow-motion and clear still-frame images. Hi-fi sound provides stereo audio playback.
- 5. This unit also features Quasi S-VHS playback, allowing you to view S-VHS tapes recorded on other machines.

5. Recording (VCR)

- One-Touch Recording (OTR): Press the REC button on the remote or front panel to start recording from the current TV channel or selected input. Press again to extend recording time.
- **DVD One-Touch Recording:** While a non-region-encoded DVD is playing, press the **QUICK COPY** button to record the DVD content onto a VHS tape.
- **Timer Recording:** Use the remote control to access the menu and set up programmed recordings for future TV broadcasts.

6. NTSC and PAL Video Outputs

The unit supports both NTSC and PAL video formats, allowing you to view non-region-encoded media from overseas. Ensure your television or monitor is compatible with the selected output format. Output settings can typically be adjusted via the system menu using the remote control.

MAINTENANCE

1. Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth. Do not use liquid or aerosol cleaners.
- Keep the ventilation openings clear to prevent overheating.

2. Disc and Tape Care

- Handle discs by their edges to avoid fingerprints and scratches.
- Store VHS tapes in their cases away from direct sunlight and magnetic fields.
- If playback issues occur with tapes, a VCR head cleaner tape may be used, following its specific instructions.

TROUBLESHOOTING

If you encounter problems with your unit, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
No power	Power cord disconnected; power outlet faulty.	Ensure power cord is securely plugged in. Test the outlet with another device.
No picture	Video cables incorrectly connected; incorrect input selected on TV; unit in wrong mode.	Check video cable connections. Select the correct input (e.g., AV1, S-Video) on your TV. Ensure the unit is in DVD or VHS mode.
No sound	Audio cables incorrectly connected; TV/receiver volume too low or muted; unit in wrong mode.	Check audio cable connections. Adjust TV/receiver volume. Ensure the unit is in DVD or VHS mode.
Disc/Tape not playing	Disc/tape dirty or damaged; disc/tape inserted incorrectly; region code mismatch (for DVDs).	Clean the disc/tape. Ensure it is inserted correctly. Verify DVD region compatibility.

For issues not covered here, please consult the comprehensive troubleshooting section in the full manual or contact customer support.

CONSUMER ALERT: This television receiver has only an analog broadcast tuner and will require a converter box after February 17, 2009 to receive over-the-air broadcasts with an antenna because of the U.S.'s transition to digital broadcasting. Analog-only TVs should continue to work as before with cable and satellite TV services, gaming consoles, VCRs, DVD players, and similar products. For more information, call the Federal Communications Commission at 1-888-225-5322 (TTY: 1-888-835-5322), or visit the commission s digital-television Web site at: www.dtv.gov.

SPECIFICATIONS

Feature	Specification
Model Number	DV6T811N
Dimensions (W x D x H)	16.93 x 10.91 x 3.01 inches
Item Weight	7.5 pounds
Media Types Supported	DVD-Video, CD, MP3 CD, VHS, S-VHS (Quasi Playback)
Audio Output Mode	Stereo (Analog), Dolby Digital, DTS 5.1-channel (Digital)
Video Output Compatibility	NTSC, PAL
Special Features	6-head Hi-Fi VCR, MP3 Decoding, Surround Sound capability
Connectivity Technology	Ethernet (Note: This specification may refer to internal components or a feature not commonly used for consumer connectivity on this type of device.)
UPC	084157028117, 084157229170

WARRANTY INFORMATION

This Daewoo DV6T811N DVD-VCR Combo unit is covered by a limited manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration of coverage. Retain your proof of purchase for warranty service.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact Daewoo customer support. Contact information can typically be found on the manufacturer's official website or on the warranty card provided with your product.

Related Documents - DV6T811N



Daewoo DV-600 DVD Player Instruction Manual

Comprehensive instruction manual for the Daewoo DV-600 DVD Player, covering setup, operation, features, troubleshooting, and technical specifications. Learn how to connect and use your DVD player.



DAEWOO DPC-7900 Series Portable DVD Player Service Manual

Comprehensive service manual for the DAEWOO DPC-7900 Series Portable DVD Player, covering general descriptions, electrical and optical characteristics, power supply, dimensions, regulatory standards, service tools, spare parts, and troubleshooting.



DAEWOO Service Manual for XG and XW Series Mini Component Sound Systems

Comprehensive service manual detailing the maintenance, adjustments, exploded views, and parts lists for DAEWOO XG and XW series mini component sound systems, including models with CD-R/RW/MP3/Video CD playback capabilities.



Daewoo WVD301 Wireless Vibration Sensor Quick Installation Guide

This guide provides quick installation instructions for the Daewoo WVD301 Wireless Vibration Sensor. Learn about its product description, technical specifications, installation steps, LED indicators, maintenance, and compliance standards.



DAEWOO KOR-6115 & KOR-61151 Microwave Oven Service Manual

Detailed service manual for DAEWOO KOR-6115 and KOR-61151 microwave ovens, covering specifications, installation, operation, troubleshooting, and parts lists for qualified service personnel.



DAEWOO DE-TT-1891 Wireless Turntable Instruction Manual

Instruction manual for the DAEWOO DE-TT-1891 Wireless Turntable. Covers safety, setup, operation, listening to records via Bluetooth or line out, troubleshooting, and specifications.